



**Synway SMG-C Series Analog Gateway**

**SMG1004C**

**SMG1008C**

**SMG1016C**

**SMG1032C**

**Analog Gateway**

# **User Manual**

**Version 1.7.1**

**Synway Information Engineering Co., Ltd**

**[www.synway.net](http://www.synway.net)**

# Content

|  |            |
|--|------------|
| <b>Content .....</b>                       | <b>i</b>   |
| <b>Copyright Declaration.....</b>          | <b>iii</b> |
| <b>Revision History.....</b>               | <b>iv</b>  |
| <b>Chapter 1 Product Introduction.....</b> | <b>1</b>   |
| 1.1 Typical Application .....              | 1          |
| 1.2 Feature List.....                      | 1          |
| 1.3 Hardware Description .....             | 3          |
| 1.4 Alarm Info .....                       | 5          |
| <b>Chapter 2 Quick Guide.....</b>          | <b>6</b>   |
| <b>Chapter 3 WEB Configuration .....</b>   | <b>10</b>  |
| 3.1 System Login .....                     | 10         |
| 3.2 Operation Info .....                   | 11         |
| 3.2.1 System Info.....                     | 11         |
| 3.2.2 Channel State .....                  | 12         |
| 3.2.3 Call Count.....                      | 13         |
| 3.2.4 SIP Message Count.....               | 14         |
| 3.3 Quick Config .....                     | 14         |
| 3.4 VoIP Settings .....                    | 16         |
| 3.4.1 SIP.....                             | 18         |
| 3.4.2 SIP Compatibility.....               | 19         |
| 3.4.3 SIP Station .....                    | 22         |
| 3.4.4 SIP Server .....                     | 24         |
| 3.4.5 NAT Setting.....                     | 26         |
| 3.4.6 Media.....                           | 29         |
| 3.5 Advanced Settings.....                 | 31         |
| 3.5.1 FXS.....                             | 32         |
| 3.5.2 FXO .....                            | 34         |
| 3.5.3 Tone Detector .....                  | 37         |
| 3.5.4 Tone Generator.....                  | 38         |
| 3.5.5 DTMF.....                            | 39         |
| 3.5.6 Ringing Scheme .....                 | 40         |
| 3.5.7 Fax.....                             | 41         |
| 3.5.8 Function Key.....                    | 43         |
| 3.5.9 Dialing Rule .....                   | 44         |
| 3.5.10 Dialing Timeout.....                | 48         |
| 3.5.11 Cue Tone .....                      | 49         |
| 3.5.12 Color Ring.....                     | 50         |
| 3.5.13 QoS .....                           | 51         |
| 3.5.14 Action URL.....                     | 52         |
| 3.6 Port Settings .....                    | 52         |
| 3.6.1 FXS.....                             | 53         |
| 3.6.2 FXO .....                            | 58         |

|   |                             |            |
|---|-----------------------------|------------|
| 3.6.3   | FXO Port Timer.....         | 62         |
| 3.6.4   | Port Group.....             | 64         |
| 3.6.5   | Advanced FXO Settings ..... | 68         |
| 3.7   | Route Settings .....        | 69         |
| 3.7.1   | Routing Parameters.....     | 69         |
| 3.7.2   | IP to Tel.....              | 70         |
| 3.7.3   | Tel to IP.....              | 72         |
| 3.8   | Number Manipulation.....    | 74         |
| 3.8.1   | IP to Tel CallerID.....     | 75         |
| 3.8.2   | IP to Tel CalleeID.....     | 79         |
| 3.8.3   | Tel to IP CallerID.....     | 80         |
| 3.8.4   | Tel to IP CalleeID.....     | 83         |
| 3.9   | System Tools .....          | 84         |
| 3.9.1   | Management.....             | 85         |
| 3.9.2   | Configuration File.....     | 87         |
| 3.9.3   | Network .....               | 88         |
| 3.9.4   | Upgrade.....                | 89         |
| 3.9.5   | Signaling Capture .....     | 91         |
| 3.9.6   | Data Recording.....         | 92         |
| 3.9.7   | Call Log .....              | 92         |
| 3.9.8   | Operation Log.....          | 93         |
| 3.9.9   | Backup & Upload.....        | 94         |
| 3.9.10  | Factory Reset .....         | 95         |
| 3.9.11  | System Monitor.....         | 95         |
| 3.9.12  | Centralized Manage.....     | 96         |
| 3.9.13  | Access Control.....         | 97         |
| 3.9.14  | PING Test .....             | 99         |
| 3.9.15  | TRACERT Test .....          | 100        |
| 3.9.16  | Change Password .....       | 101        |
| 3.9.17  | Restart.....                | 101        |
| <b>Appendix A Technical Specifications.....</b> |                             | <b>102</b> |
| <b>Appendix B Troubleshooting .....</b>         |                             | <b>103</b> |
| <b>Appendix C Technical/sales Support .....</b> |                             | <b>106</b> |

# **Copyright Declaration**

All rights reserved; no part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, without prior written permission from Synway Information Engineering Co., Ltd (hereinafter referred to as 'Synway').

Synway reserves all rights to modify this document without prior notice. Please contact Synway for the latest version of this document before placing an order.

Synway has made every effort to ensure the accuracy of this document but does not guarantee the absence of errors. Moreover, Synway assumes no responsibility in obtaining permission and authorization of any third party patent, copyright or product involved in relation to the use of this document.

## Revision History

| Version       | Date    | Comments            |
|---------------|---------|---------------------|
| Version 1.7.0 | 2017-03 | Initial publication |
| Version 1.7.1 | 2017-05 | New revision        |

**Note:** Please visit our website <http://www.synway.net> to obtain the latest version of this document.

# Chapter 1 Product Introduction

Thank you for choosing Synway SMG-C Series Analog Gateway!

The Synway SMG-C series analog gateway products (hereinafter referred to as ‘SMG-C analog gateway’) are mainly used for connecting traditional phone sets, fax machines and PBXes with the IP telephony network or IP PBX. It provides a powerful, reliable and cost-effective VoIP solution for such occasions as IP call centers and multi-branch agencies.

## 1.1 Typical Application

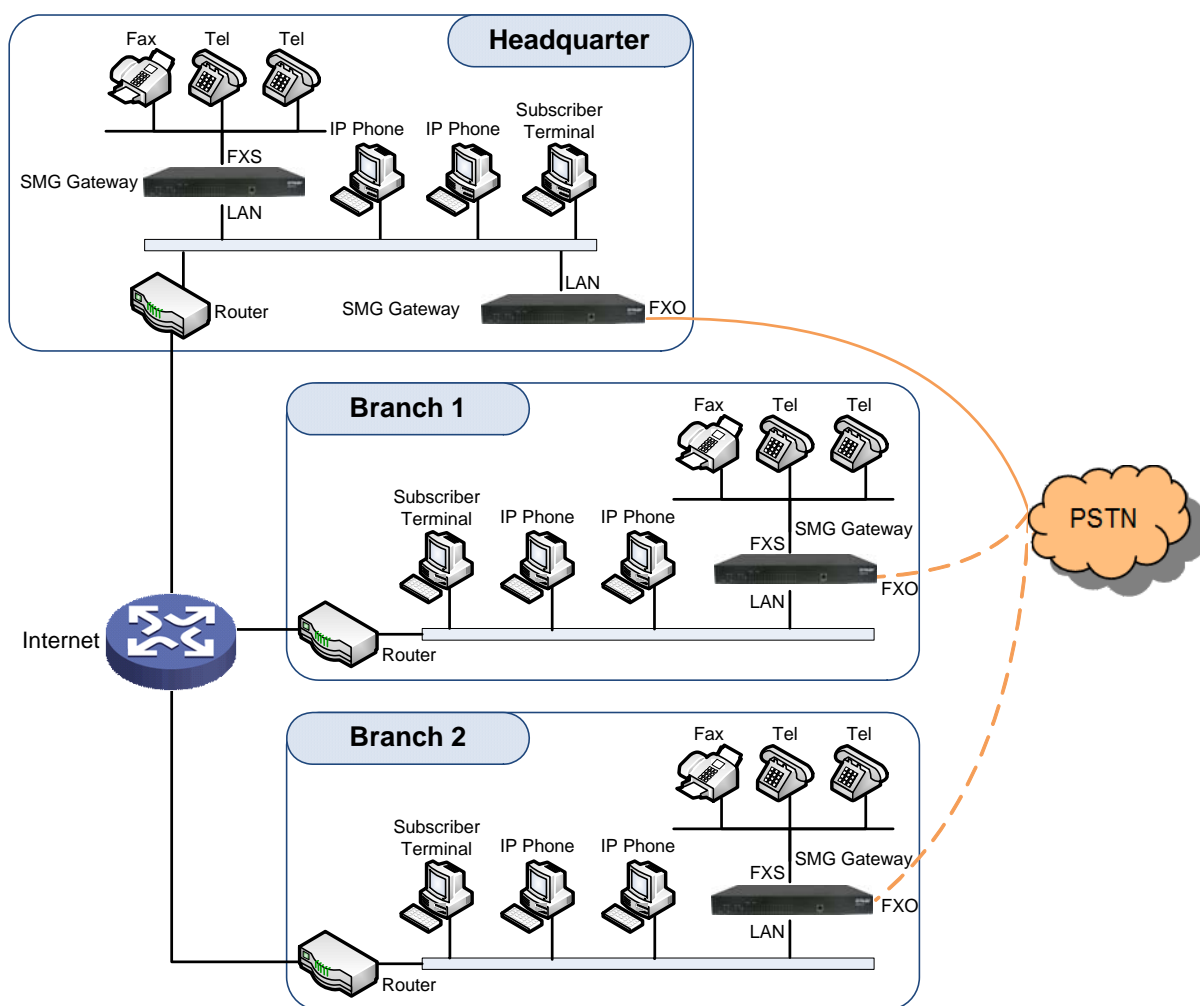


Figure 1-1 Typical Application for SMG-C Series Gateway

## 1.2 Feature List

| Basic Features  | Description   |
|-----------------|---|
| <b>TDM Call</b> | Call initiated from TDM to IP, via routing and number manipulation to obtain the called IP address. |
| <b>IP Call</b>  | Call initiated from IP to TDM, via routing and number manipulation to obtain the call destination.  |

|  |   |       |   |           |                           |
|--|---|-------|---|-----------|---------------------------|
| <b>Number Manipulation</b>                       | Peels off some digits of a phone number from left/right, or adds a prefix/suffix to a phone number.   |       |   |           |                           |
| <b>Call Forward</b>                              | Three options available: Unconditional, Busy and No Reply.  |       |   |           |                           |
| <b>Call Waiting</b>                              | When an FXS channel receives another call while it is in conversation, it will have the newly received call keep waiting. Once the current call is finished, the new one will ring the FXS channel and wait for its answer. |       |   |           |                           |
| <b>Auto Dial</b>                                 | If there is no dialing operation in a designated time period after pickup, the preset auto dial number will be called.  |       |   |           |                           |
| <b>Do Not Disturb</b>                            | Rejects all the incoming calls to the channel.  |       |   |           |                           |
| <b>CID</b>                                       | Displays the CallerID.  |       |   |           |                           |
| <b>Echo Cancellation</b>                         | Provides the echo cancellation feature for a call conversation over the FXS channel.  |       |   |           |                           |
| <b>TDM/VoIP Routing</b>                          | Sets a routing path: from IP to TDM or from TDM to IP.  |       |   |           |                           |
| <b>Fax</b>                                       | Provides multiple fax parameters: fax mode, maximum fax rate, fax train mode, error correction mode, etc.   |       |   |           |                           |
| <b>Communication without Power</b>               | Enable a connection of the station which is linked with the FXS port and the trunk which is linked with the FXO port to keep the calls between the FXS port and PSTN uninterrupted during power outage.                     |       |   |           |                           |
| <b>Communication without Network</b>             | Automatically routes a call to the proper port according to the configuration in case of network failure or call timeout.   |       |   |           |                           |
| <b>Send Polarity Reversal Signal</b>             | Sends the polarity reversal signal to a corresponding FXS channel when the called party pick-up behavior is detected.   |       |   |           |                           |
| <b>Detect Polarity Reversal Signal</b>           | Turns a corresponding channel into the talking state when the FXO port detects the polarity reversal signal.  |       |   |           |                           |
| <b>Simultaneous Register to Multiple Servers</b> | Registers the gateway to a master registrar server and a spare registrar server simultaneously.   |       |   |           |                           |
| <b>IMS Network</b>                               | Registers the gateway to a server under IMS network.  |       |   |           |                           |
| <b>SIP Station</b>                               | Supports a SIP terminal to be registered to the gateway and become a SIP station.   |       |   |           |                           |
| <b>Group Ringing</b>                             | Rings all the idle FXS ports in a port group.   |       |   |           |                           |
| <b>Ringing by Turns</b>                          | Rings the FXS ports in a port group by turns according to the <i>Rule for Ringing by Turns</i> .  |       |   |           |                           |
| <b>Preemptive Answer</b>                         | When a channel in a port group is ringing, another channel in the same port group can press the preemptive answer keyboard shortcut to transfer the call from the ringing channel to the current channel.                   |       |   |           |                           |
| <b>Centralized Manage</b>                        | The gateway can register to Synway DCMS and accept the management of the platform.  |       |   |           |                           |
| <b>Signaling &amp; Protocol</b>                  | <b>Description</b>  |       |   |           |                           |
| <b>SIP Signaling</b>                             | Supported protocol: SIP V1.0/2.0, RFC3261.  |       |   |           |                           |
| <b>Voice</b>                                     | <table border="1"> <tr> <td>CODEC</td><td>G.711A, G.711U, G.729A/B, G.723, G.722, AMR, iLBC</td></tr> <tr> <td>DTMF Mode</td><td>RFC2833, SIP INFO, INBAND</td></tr> </table>   | CODEC | G.711A, G.711U, G.729A/B, G.723, G.722, AMR, iLBC | DTMF Mode | RFC2833, SIP INFO, INBAND |
| CODEC  | G.711A, G.711U, G.729A/B, G.723, G.722, AMR, iLBC   |       |   |           |                           |
| DTMF Mode  | RFC2833, SIP INFO, INBAND   |       |   |           |                           |

| Network                     | Description  |
|-----------------------------|--|
| <b>Network Protocol</b>     | Supported protocol: TCP/UDP, HTTP, ARP/RARP, DNS, NTP, TFTP, TELNET, STUN.             |
| <b>Static IP</b>            | IP address modification support.   |
| <b>DHCP</b>                 | IP address dynamic allocation support.   |
| <b>DNS</b>                  | Domain Name Service support.   |
| Security                    | Description  |
| <b>Admin Authentication</b> | Supports admin authentication to guarantee the resource and data security.             |
| <b>System Monitor</b>       | Monitors the running status of the system and the server.                              |
| Maintain & Upgrade          | Description  |
| <b>WEB Configuration</b>    | Support of configurations through the WEB user interface.                              |
| <b>Language</b>             | Chinese, English.  |
| <b>Software Upgrade</b>     | Support of user interface, gateway service, kernel and firmware upgrades based on WEB. |
| <b>Tracking Test</b>        | Support of Ping and Tracert tests based on WEB.  |
| <b>SysLog Type</b>          | Three options available: ERROR, WARNING, INFO, DEBUG.                                  |

## 1.3 Hardware Description

The SMG C-type analog gateway integrates embedded LINUX system within the POWERPC+DSP hardware architecture. It has 4/8/16/32 voice ports (FXS/FXO) and 2 LANs on the chassis. Each voice port can be configured on demand to serve as an FXS or FXO interface; however, the respective amount of FXS and FXO interfaces must be multiples of 2. The SMG-8C analog gateway adopts an external 12V power supply. See below for product appearance.



Figure 1-2 SMG1008C Front View





Figure 1-3 SMG1008C Rear View



Figure 1-4 SMG1016C Front View



Figure 1-5 SMG1016C Rear View

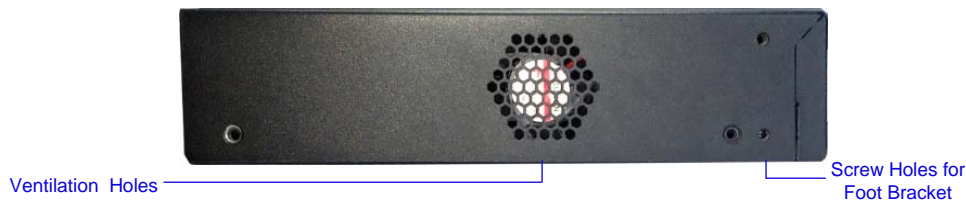


Figure 1-6 Left View

The table below gives a detailed introduction to the interfaces, buttons and LEDs illustrated above:

| Interface           | Description                                  |
|---------------------|--|
| <b>LAN</b>          | Amount: 2                                    |
|                     | Type: RJ-45                                  |
|                     | Bandwidth: 10/100Mbps                        |
|                     | Self-Adaptive Bandwidth Supported            |
|                     | Auto MDI/MDIX Supported                      |
| <b>FXS/FXO</b>      | Amount: 4/8/16/32                            |
|                     | Type: RJ-11                                  |
|                     | Maximum Transmission Distance: 1500m         |
|                     | Charge Mode: Negative Anti-billing Supported |
| <b>Console Port</b> | Amount: 1                                    |
|                     | Type: RS-232                                 |
|                     | Baud Rate: 115200bps                         |
|                     | Connector: RJ45 to DB-9 Connector            |
|                     | Data Bits: 8 bits                            |
|                     | Stop Bit: 1 bit                              |
|                     | Parity Unsupported                           |

|                          | Flow Control Unsupported  |
|--------------------------|---|
| Button                   | Description   |
| <b>Reset Button</b>      | Restore the gateway to factory settings.  |
| LED                      | Description   |
| <b>Power Indicator</b>   | Indicates the power state. It lights up when the gateway starts up with the power cord well connected   |
| <b>Run Indicator</b>     | Indicates the running status. For more details, refer to <a href="#">1.4 Alarm Info</a> .   |
| <b>Alarm Indicator</b>   | Alarms the device malfunction. For more details, refer to <a href="#">1.4 Alarm Info</a> .  |
| <b>Link Indicator</b>    | The green LED, indicating the network connection status.  |
| <b>ACT Indicator</b>     | The orange LED, whose flashing tells data are being transmitted.  |
| <b>Channel Indicator</b> | FXS and FXO channels are respectively marked by green and red LED after power on. <ol style="list-style-type: none"> <li>When the channel is idle, the LED Lights up;</li> <li>When the channel is off-hook, the LED flashes slowly;</li> <li>When the channel is ringing, the LED flashes fast.</li> </ol> |

For other hardware parameters, refer to [Appendix A Technical Specifications](#).

## 1.4 Alarm Info

The SMG-C analog gateway is equipped with two indicators denoting the system's running status: Run Indicator (green LED) and Alarm Indicator (red LED). The table below explains the states and meanings of the two indicators.

| LED                    | State                   | Description  |
|------------------------|-------------------------|--|
| <b>Run Indicator</b>   | Go out                  | System is not yet started.   |
|                        | Light up and flash fast | System is starting.  |
|                        | Flash slowly            | System is normal.  |
| <b>Alarm Indicator</b> | Go out                  | System is normal.  |
|                        | Light up                | Upon startup: System is normal.<br>In runtime: System is abnormal. |
|                        | Flash                   | System is abnormal.  |

### Note:

- The startup process consists of two stages: System Booting and Gateway Service Startup. The system booting costs about 1 minute and once it succeeds, both the run indicator and the alarm indicator light up. Then after the gateway service is successfully started and the device begins to work normally, the run indicator flashes and the alarm indicator goes out.
- During runtime, if the alarm indicator lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself, please contact our technicians for help. Go to [Appendix C Technical/sales Support](#) to find the contact way.

## Chapter 2 Quick Guide

This chapter is intended to help you grasp the basic operations of the SMG analog gateway in the shortest time.

### Step 1: Confirm that your packing box contains all the following things.

- SMG Series Analog Gateway \*1
- Angle Bracket \*2, Rubber Foot Pad \*4, Screw for Angle Bracket \*8
- 220V Power Cord \*1, External 12V Power Adapter \*1 for SMG-8C gateway
- Warranty Card \*1
- Installation Manual \*1

### Step 2: Properly fix the SMG analog gateway.

If you do not need to place the gateway on the rack, simply fix the 4 rubber foot pads. Otherwise, you should first fix the 2 angle brackets onto the chassis and then place the chassis on the rack.

### Step 3: Connect the power cord.

Make sure the device is well grounded before you connect the power cord. Check if the power socket has the ground wire. If it doesn't, use the grounding stud on the rear panel of the device (See Figure 1-3) for earthing.

### Step 4: Connect the network cable.

### Step 5: Connect the telephone line. The line from PSTN should be connected to FXO port (port with red LED flashing); the line from station should be connected to FXS port (port with green LED flashing).

These series products provide RJ11 interfaces. You can use a common telephone line directly or construct a telephone line by yourself according to Figure 2-1. Note that only the middle two cores in the RJ11 jack are valid for use.

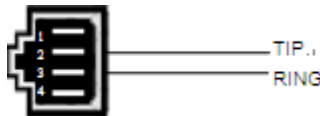


Figure 2-1

### Step 6: Log in the gateway.

Enter the original IP address (LAN1: 192.168.1.101) of the SMG analog gateway in the browser to go to the WEB interface of the gateway. The original username and password of the gateway are both 'admin'. For detailed instructions about login, refer to [3.1 System Login](#). We suggest you change the initial username and password via 'System Tools → Change Password' on the WEB interface as soon as possible after your first login. For detailed instructions about changing the password, refer to [3.9.16 Change Password](#). After changing the password, you are required to log in again.

### Step 7: Modify IP address of the gateway.

You can modify the IP address of the gateway via 'System Tools → Network' on the WEB interface to put it within your company's LAN. Refer to [3.9.3 Network](#) for detailed instructions about IP modification. After changing the IP address, you shall log in the gateway again using your new IP address.

### Step 8: Make phone calls.

Note: For your easy understanding and manipulation, all examples given in this step do not involve registration, that is, SIP initiates calls in a point-to-point mode.

**Situation 1: Call from a station to another (Tel→Tel)**

The gateway allows two FXS ports to call each other by default. Just use a station connected with an FXS port to dial the number of the destination FXS port and you can make a Tel→Tel call. The default number of an FXS port is 80XX, among which XX represents the corresponding port number. For example, the default number corresponding to Port 1 is 8001, and that corresponding to Port 32 is 8032.

Actually a Tel→Tel call on the gateway is accomplished via the routing of Tel→IP→IP→Tel. For detailed introductions and configuration guide, refer to [Q2](#) in Appendix B.

**Situation 2: Call from a station to an IP phone (Tel→IP)**

1. Go to 'Advanced Settings → Dialing Rule' on the WEB interface and click the 'Add New' button to add a new dialing rule. Refer to [3.5.9 Dialing Rule](#) for detailed instructions. Enter either a particular number or a string of 'x's to represent several random numbers. For example, 'xxx' denotes 3 random numbers. You may use the default value of 'Index' and are required not to leave 'Description' empty.

**Example:** Set **Index** to **99**, fill in **Description** with **test** and configure **Dial Rule** to **123**.

2. Go to 'Port Settings → Port Group' on the WEB interface and click the 'Add New' button to create a new port group and add FXS ports which are connected with stations to it. Refer to [3.6.4 Port Group](#) for detailed instructions. You may use the default values of other configuration items and are required not to leave 'Description' empty.

**Example:** Provided the FXS port which is connected with a station is Port1, check the checkbox before **Port1**, set **Index** to **1**, fill in **Description** with **test**, and keep the default values of other configuration items.

3. Go to 'Route Settings → Tel→IP' on the WEB interface and click the 'Add New' button to add a new routing rule. Refer to [3.7.3 Tel→IP](#) for detailed instructions. Select the port group created in Step2 as 'Source Port Group' and fill in 'Destination IP' and 'Destination Port' with the IP address and the Port number you plan to call. You may use the default values of other configuration items and are required not to leave 'Description' empty.

**Example:** Provided the remote IP address intended to call is 192.168.0.111 and the port is 5060. Set **Index** to **63**, **Source Port Group** to **1**, fill in **Description** with **test**, configure **Destination IP** to **192.168.0.111**, **Destination Port** to **5060**, and keep the default values of other configuration items.

4. Pick up the station and dial the number set in Step1 to ring the remote IP phone. If you have set a particular number in Step 1, only this number you can dial; if you have set a string of 'x's, how many 'x's there are, how many random numbers you can dial.

**Example:** Pick up the station and dial 123. Then the IP phone with the IP address 192.168.0.111 and the port 5060 will ring.

**Situation 3: Call from an IP phone to a station (IP →Tel)**

1. Go to 'Port Settings → Port Group' on the WEB interface and click the 'Add New' button to create a new port group and add FXS ports which are connected with stations to it. Refer to [3.6.4 Port Group](#) for detailed instructions. You may use the default values of other configuration items and are required not to leave 'Description' empty.

**Example:** Provided the FXS port which is connected with a station is Port1, check the checkbox before **Port1**, set **Index** to **1**, fill in **Description** with **test**, and keep the default values of other configuration items.

2. Go to 'Route Settings → IP→Tel' on the WEB interface and click the 'Add New' button to add a new routing rule. Refer to [3.7.2 IP→Tel](#) for detailed instructions. Fill in 'Source IP' with the IP address which initiates the call and select the port group created in Step1 as 'Destination Port Group'. You may use the default values of other configuration items and required not to leave 'Description' empty.

**Example:** Provided the IP address of the IP phone which initiates the call is 192.168.0.111. Set **Index** to **63**, **Destination Port Group** to **1**, fill in **Description** with **test**, configure **Source IP** to **192.168.0.111**, and keep the default values of other configuration items.

3. Pick up the IP phone and call the IP address and port of the SMG analog gateway to ring the station.

**Example:** Provided the IP address of the SMG analog gateway is 192.168.0.101 and the port is 5060, use the IP phone to call the IP address 192.168.0.101 and the station connected with Port1 will ring.

**Step 9: Enable the auto dial feature. (Skip this step if not necessary.)**

Go to the Port Settings interface to enable the auto dial feature and set the parameters 'Auto Dial Number' and 'Wait Time before Auto Dial'. If there is no dialing operation in a time period (i.e. Wait Time before Auto Dial) after pickup, the port will automatically call the preset number (i.e. Auto Dial Number). Refer to [3.6.1 FXS](#) for detailed instructions.

**Step 10: Enable the DND (do not disturb) feature. (Skip this step if not necessary.)**

Go to the Port Settings interface to enable the DND feature. Then, the FXS port will reject all incoming calls. Refer to [3.6.1 FXS](#) for detailed instructions.

**Step 11: Enable the call waiting feature. (Skip this step if not necessary.)**

Go to the Port Settings interface to enable the call waiting feature. Then the corresponding FXS port while in conversation can accept another call from IP and keep it in the waiting state. Once the current conversation is finished and the station hangs up, the call in the waiting state will ring the station and wait for answer. During the time in the waiting state, it will always hear the ringback tone from the FXS port. Refer to [3.6.1 FXS](#) for detailed instructions.

**Step 12: Perform call forwarding. (Skip this step if not necessary.)**

**Situation 1: Hook-flash operation**

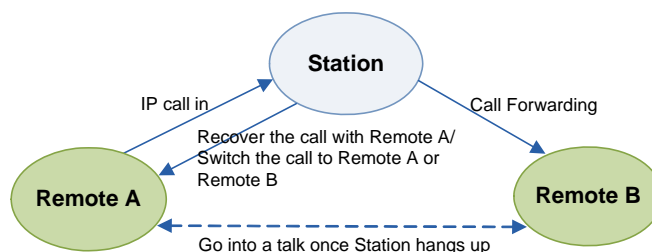


Figure 2-2 Call Forward via Hook-flash

As shown above, Remote A initiates and establishes a call with Station. Then by a hook-flash operation, that is, a rapid clap on the hook or pressing the 'flash' button on the phone set, Station can forward the call to Remote B.

Once a flash is generated, Station will go into the dialing state (the FXS port sends it dialing tones) before it dials the forwarding number.

If the dialing succeeds, the FXS port will send ringback tones to Station. Provided Remote B picks up the call, at this time Station can:

- a) Directly talk with Remote B;
- b) Perform another hook-flash operation to switch the call to either Remote A or Remote B.
- c) Hang up to make Remote A and Remote B go into a direct talk with each other.

If the dialing fails, the FXS port will send busy tones to Station. At this time Station can:

- a) Hang up to go back to the ringing state; then pick up the call again to recover the talk with Remote A.

- b) Perform the hook-flash operation again without hanging up the call to recover the talk with Remote A.

Once Station recovers the call with Remote A, it can forward the call again by a new hook-flash operation.

### **Situation 2: Automatic call forward**

Go to the port setting interface to enable the automatic call forward feature and fill in a forward number. According to what you set, the SMG analog gateway can automatically forward the incoming calls on three conditions: unconditional, busy, no reply. Note that this feature is applicable only to a single port, but not to a port group consisting of more than one port. Refer to [3.6.1 FXS](#) for detailed instructions.

### **Special Instructions:**

- The chassis of the SMG-C analog gateway must be grounded for safety reasons, according to standard industry requirements. A simple way is earthing with the third pin on the plug or the grounding studs on the machine. No or improper grounding may cause instability in operation as well as decrease in lightning resistance.
- As the device will gradually heat up while being used, please maintain good ventilation to prevent sudden failure, ensuring that the ventilation holes (see Figure 1-6) are never jammed.
- During runtime, if the alarm indicator lights up or flashes, it indicates that the device goes abnormal. If you cannot figure out and solve the problem by yourself, please contact our technicians for help. Otherwise it may lead to a drop in performance or unexpected errors.



## Chapter 3 WEB Configuration

### 3.1 System Login

Type the IP address into the browser and enter the login interface. See Figure 3-1.

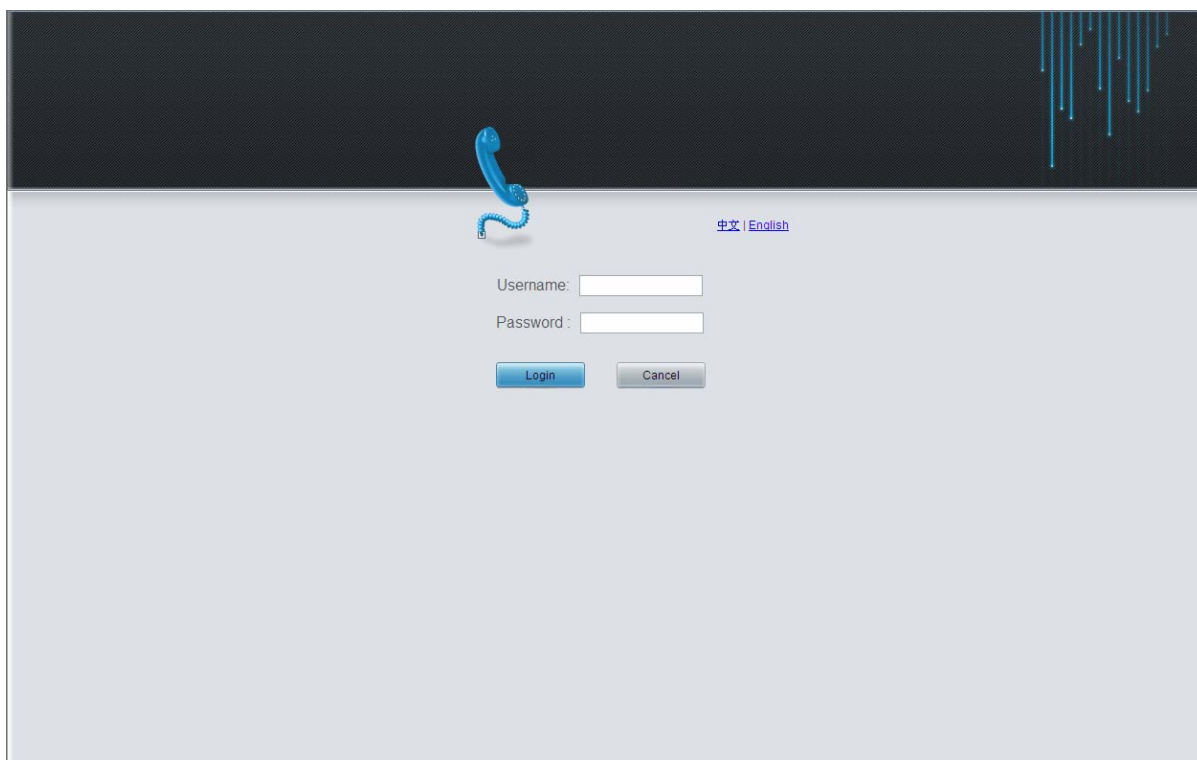


Figure 3-1 Login Interface

The gateway only serves one user, whose original username and password are both 'admin'. You can change the username and the password via 'System Tools → Change Password' on the WEB interface. For detailed instructions, refer to [3.9.16 Change Password](#).

After login, you can see the main interface as below.

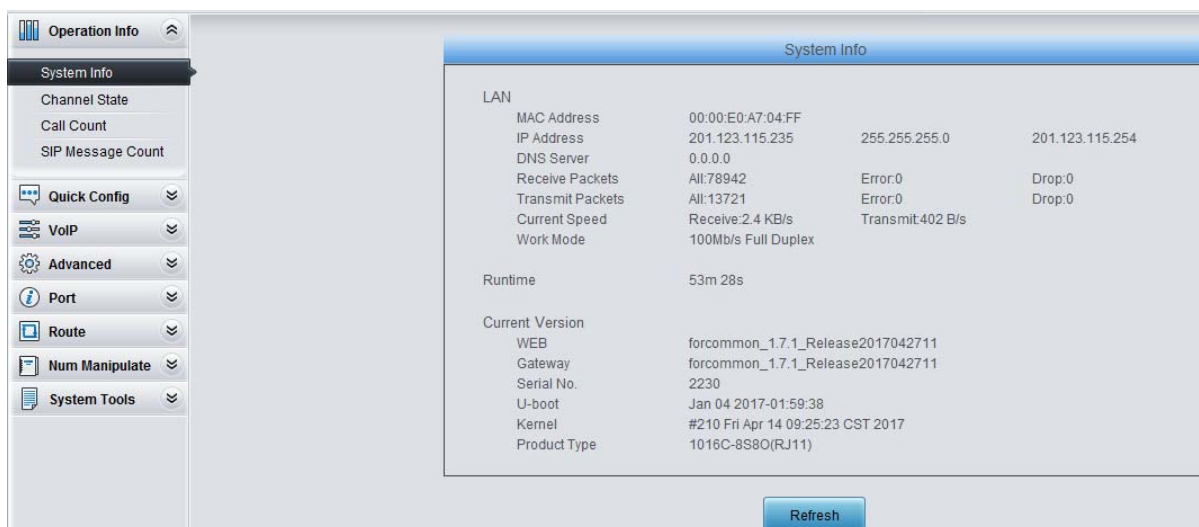


Figure 3-2 Main Interface

## 3.2 Operation Info

Operation Info includes four parts: **System Info**, **Channel State**, **Call Count** and **SIP Message Count**, showing the current running status of the gateway. See Figure 3-3.

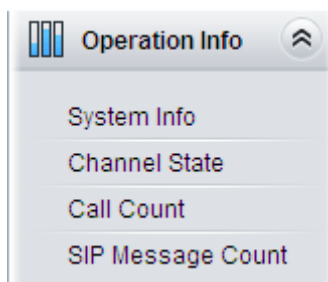


Figure 3-3 Operation Info

### 3.2.1 System Info



Figure 3-4 System Info Interface

See Figure 3-4 for the system info interface. You can click **Refresh** to obtain the latest system information. The table below explains the items shown in Figure 3-4.

| Item                   | Description   |
|------------------------|---|
| <b>MAC Address</b>     | MAC address of LAN.   |
| <b>IP Address</b>      | The three parameters from left to right are IP address, subnet mask and default gateway of LAN. |
| <b>DNS Server</b>      | DNS server address of LAN.  |
| <b>Receive Packets</b> | The amount of receive packets after the gateway's startup, including three options:             |



|                         |  |
|-------------------------|--|
|                         | All, Error and Drop.   |
| <b>Transmit Packets</b> | The amount of transmit packets after the gateway's startup, including three options: All, Error and Drop.                                      |
| <b>Current Speed</b>    | Show the current speed of data receiving and transmitting.   |
| <b>Work Mode</b>        | Show the work mode of the network, including four modes: 10 Mbps Half Duplex, 10 Mbps Full Duplex, 100 Mbps Half Duplex, 100 Mbps Full Duplex. |
| <b>Runtime</b>          | Time of the gateway keeping running normally after startup, which will be automatically updated.   |
| <b>WEB</b>              | Current version of the WEB interface.  |
| <b>Gateway</b>          | Current version of the gateway service.  |
| <b>Serial Num</b>       | Unique serial number of an SMG-C analog gateway.   |
| <b>U-boot</b>           | Current version of Uboot.  |
| <b>Kernel</b>           | Current version of the system kernel on the gateway.   |
| <b>Product Type</b>     | The type of current analog gateway.  |

### 3.2.2 Channel State


























| Channel State |      |        |            |   |           |          |          |              |                         |
|---------------|------|--------|------------|---|-----------|----------|----------|--------------|-------------------------|
| Channel       | Type | Number | Voltage(v) | State   | Direction | CallerID | CalleeID | Reg Status   | Polarity Reversal Count |
| 1             | FXS  | 170    | 0          |   | ---       | ---      | ---      | Failed(403)  | ---                     |
| 2             | FXS  | 171    | 0          |  | ---       | ---      | ---      | Failed(403)  | ---                     |
| 3             | FXS  | 8003   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 4             | FXS  | 8004   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 5             | FXS  | 8005   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 6             | FXS  | 8006   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 7             | FXS  | 8007   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 8             | FXS  | 8008   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 9             | FXO  | 8009   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 10            | FXO  | 8010   | 38         |  | ---       | ---      | ---      | Unregistered | ---                     |
| 11            | FXO  | 8011   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 12            | FXO  | 8012   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 13            | FXO  | 8013   | 17         |  | ---       | ---      | ---      | Unregistered | ---                     |
| 14            | FXO  | 8014   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 15            | FXO  | 8015   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |
| 16            | FXO  | 8016   | 0          |  | ---       | ---      | ---      | Unregistered | ---                     |

Figure 3-5 Channel State Interface

See Figure 3-5 for the channel state interface where shows the channel type, the voltage and the channel state for each channel on the gateway. The table below explains the items shown in Figure 3-5.

| Item           | Description  |
|----------------|--|
| <b>Channel</b> | Channel number on the device.  |
| <b>Type</b>    | Type of the channel on the device. If this item shows ---, it means this channel is unavailable, that is, the corresponding module to this channel is not inserted or damaged. |
| <b>Number</b>  | The number corresponding to the port.  |
| <b>Voltage</b> | Line voltage on the channel, calculated by volt (V).   |
| <b>State</b>   | Displays the channel state in real time. You can move the mouse onto the channel   |

|                         | state icon for detailed state information.  |   |  |
|-------------------------|---|---|--|
|                         | State   | Icon  | Description  |
|                         | Idle  |  | The channel is available.  |
|                         | Off-hook  |  | The channel picks up the call.   |
|                         | Wait Answer   |  | The channel receives the ringback tone and is waiting for the called party to pick up the phone. |
|                         | Ringing   |  | The channel is in the ringing state.   |
|                         | Talking   |  | The channel is in a conversation.  |
|                         | Dialing   |  | The channel is dialing.  |
|                         | Pending   |  | The channel is in the pending state.   |
|                         | Internal State  |  | Internal state of the channel.   |
| Unusable                |  | The channel is unavailable.   |  |
| Direction               | Displays the direction of the call on channel.                                    |   |  |
| CallerID                | Displays the CallerID of the call on channel.                                     |   |  |
| CalleeID                | Displays the CalleeID of the call on channel.                                     |   |  |
| Reg Status              | Displays the registration status of the port.                                     |   |  |
| Polarity Reversal Count | The counts of the polarity reversal detected by the FXO port.                     |   |  |

### 3.2.3 Call Count

| Call Count     |             |                  |      |           |              |                 |                 |                 |
|----------------|-------------|------------------|------|-----------|--------------|-----------------|-----------------|-----------------|
| Call Direction | Total Calls | Successful Calls | Busy | No Answer | Call Forward | Routing Failure | Dialing Failure | Unknown Failure |
| IP->Tel        | 0           | 0                | 0    | 0         | 0            | 0               | 0               | 0               |
| Tel->IP        | 0           | 0                | 0    | 0         | 0            | 0               | 0               | 0               |

Refresh

Figure 3-6 Call Count Interface

See Figure 3-6 for the call count Interface. The above list shows the detailed information about all the calls counted from the startup of the gateway service to the latest open or refresh of this interface. You can click **Refresh** to obtain the current call count information. The table below explains the items shown in Figure 3-6.

| Item                    | Description   |
|-------------------------|---|
| <b>Call Direction</b>   | A condition for call count, two options available: <i>IP→Tel</i> and <i>Tel→IP</i> .  |
| <b>Total Calls</b>      | Total number of calls in a specified call direction.  |
| <b>Successful Calls</b> | Total number of successful calls in conversation.   |
| <b>Busy</b>             | Total number of calls which fail as the called party has been occupied and replies a busy message.  |
| <b>No Answer</b>        | Total number of calls which fail as the called party does not pick up the call in a long time or the calling party hangs up the call before the called party picks it up. |
| <b>Call Forward</b>     | Total number of calls which have been forwarded.  |
| <b>Routing Failure</b>  | Total number of calls which fail because no routing rules are matched.  |
| <b>Dialing Failure</b>  | Total number of calls which fail as the called party number does not conform to the dialing rule or due to dialing timeout.   |

**Unknown Failure**

Total number of calls which fail due to unknown reasons.

### 3.2.4 SIP Message Count

| Request            |            |             |                     |        |          |                                |        |        |
|--------------------|------------|-------------|---------------------|--------|----------|--------------------------------|--------|--------|
| Request            | REGISTER   | INVITE      | ACK                 | INFO   | BYE      | CANCEL                         | NOTIFY | OPTION |
| Send               | 0          | 1           | 1                   | 0      | 1        | 0                              | 0      | 0      |
| Send Repeatedly    | 0          | 0           | 0                   | 0      | 0        | 0                              | 0      | 0      |
| Receive            | 0          | 1           | 1                   | 0      | 1        | 0                              | 0      | 0      |
| Receive Repeatedly | 0          | 0           | 0                   | 0      | 0        | 0                              | 0      | 0      |
| Common Response    |            |             |                     |        |          |                                |        |        |
| Common Response    | 100 Trying | 180 Ringing | 183 Session Process | 200 OK | 486 Busy | 487 Request Already Terminated |        |        |
| Send               | 1          | 1           | 0                   | 2      | 0        | 0                              |        |        |
| Receive            | 1          | 1           | 0                   | 2      | 0        | 0                              |        |        |

Figure 3-7 SIP Message Count Interface

See Figure 3-7 for the SIP Message Count interface. This is used to record the amount of the normal SIP messages that are sent/received or repeatedly sent/received during the period from the startup of the gateway service to the latest open or refresh of the interface. Click **Refresh** to refresh the count of SIP messages, or click **Clear** to clear the current count of SIP messages.

## 3.3 Quick Config

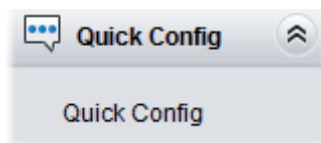


Figure 3-8 Quick Config Interface

See Figure 3-8 for the Quick Config interface. Follow the gateway Quick Configuration wizard and you can easily complete the settings on network, SIP and FXS/FXO. The gateway can work normally after configuration.

See Figure 3-9 for the Quick Config-Network Settings interface. Refer to [3.9.3 Network](#) for detailed settings. After configuration, click **Next** to enter the SIP Settings interface.




The image shows a web-based configuration interface titled "Quick Config-Network Settings". It contains several input fields and a "Next" button. The fields are arranged in a two-column layout. The first column lists the configuration items, and the second column contains the input controls.

| Configuration Item    | Value                           |
|-----------------------|---------------------------------|
| Network Type:         | Static                          |
| IP Address (I)        | 201.123.115.215                 |
| Subnet Mask (U)       | 255.255.255.0                   |
| Default Gateway (D)   | 201.123.115.254                 |
| DNS Server (P)        | 0.0.0.0                         |
| IPv6 Address:         | <input type="checkbox"/> Enable |
| Speed and Duplex Mode | Automatic Detection             |

Next

Figure 3-9 Quick Config-Network Settings Interface

See Figure 3-10 for the Quick Config-SIP Settings interface. The configuration items on this interface are the same as those on the SIP interface. Refer to [3.4.1 SIP](#) for detailed settings. You are required to fill with the information about the registrar if the gateway must be registered. After configuration, click **Back** to go back to the Network Settings interface; click **Next** to enter the FXS Settings interface.

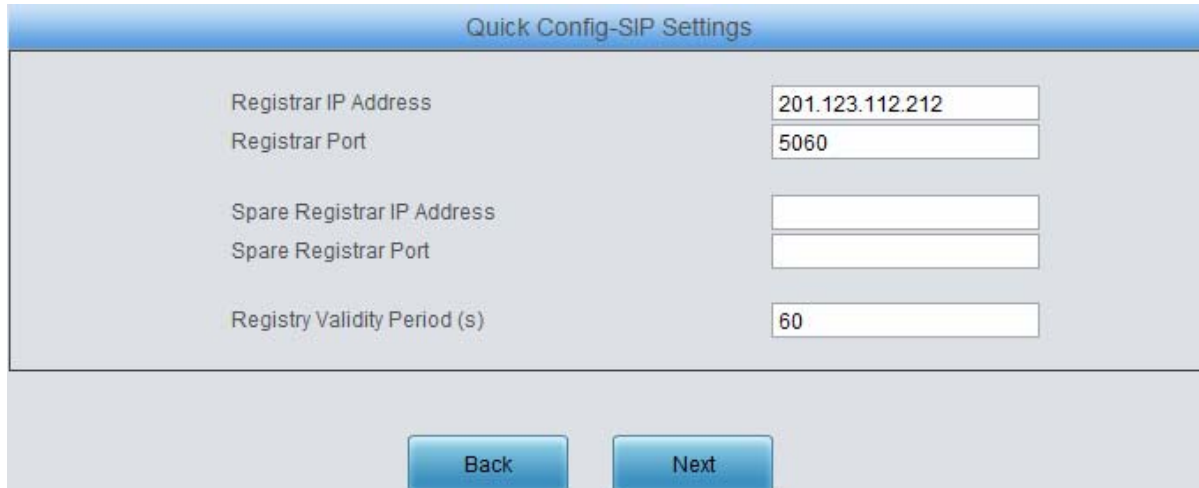

The image shows a web-based configuration interface titled "Quick Config-SIP Settings". It contains several input fields and two buttons: "Back" and "Next". The fields are arranged in a two-column layout. The first column lists the configuration items, and the second column contains the input controls.

| Configuration Item           | Value           |
|------------------------------|-----------------|
| Registrar IP Address         | 201.123.112.212 |
| Registrar Port               | 5060            |
| Spare Registrar IP Address   |                 |
| Spare Registrar Port         |                 |
| Registry Validity Period (s) | 60              |

Back Next

Figure 3-10 Quick Config-SIP Settings Interface

See Figure 3-11 for the FXS Settings interface. The configuration items on this interface are the same as those on the FXS interface. Refer to [3.6.1 FXS](#) for detailed settings. After configuration, click **Back** to go back to the SIP Settings interface; click **Next** to enter the FXO Settings interface.

| FXS Settings |      |             |              |                   |             |               |                      |         |         |          |            |        |
|--------------|------|-------------|--------------|-------------------|-------------|---------------|----------------------|---------|---------|----------|------------|--------|
| Port         | Type | SIP Account | Display Name | Talkback Function | Bind Number | Auto Dial Num | Forbid Outgoing Call | DND     | Forward | FWD Type | FWD Number | CID    |
| 1            | FXS  | 8001        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |
| 2            | FXS  | 8002        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |
| 3            | FXS  | 8003        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |
| 4            | FXS  | 8004        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |
| 5            | FXS  | 8005        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |
| 6            | FXS  | 8006        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |
| 7            | FXS  | 8007        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |
| 8            | FXS  | 8008        | ---          | Disable           | ---         | ---           | Disable              | Disable | Disable | ---      | ---        | Enable |

8 Items Total 16 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Back Next

Figure 3-11 FXS Settings Interface

See Figure 3-12 for the FXO Settings Interface. The configuration items on this interface are the same as those on the FXO interface. Refer to [3.6.2 FXO](#) for detailed settings. After configuration, click **Back** to back to the FXS Settings interface; click **Next** to enter the Quick Config-Completion interface. See Figure 3-13.

| FXO Settings |      |             |              |                                      |              |                      |                     |              |                   |    |
|--------------|------|-------------|--------------|--------------------------------------|--------------|----------------------|---------------------|--------------|-------------------|----|
| Port         | Type | SIP Account | Display Name | Connection Method                    | Bound Number | Forbid Outgoing Call | Caller ID Detection | Reg Status   | Echo Cancellation | PC |
| 9            | FXO  | 8009        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            |    |
| 10           | FXO  | 8010        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            |    |
| 11           | FXO  | 8011        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            |    |
| 12           | FXO  | 8012        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            |    |
| 13           | FXO  | 8013        | 88           | Two Stages Dialing for Incoming Call | ---          | Disable              | Disable             | Unregistered | Enable            |    |
| 14           | FXO  | 8014        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            |    |
| 15           | FXO  | 8015        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            |    |
| 16           | FXO  | 8016        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            |    |

8 Items Total 16 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Back Next

Figure 3-12 FXO Settings Interface

Quick Config-Completion

The configuration is finished. Please click 'Finish' to quit the Quick Config!

Note: the gateway will restart the system after you click 'Finish'. Please log in the gateway again using your new IP address.

Back Finish

Figure 3-13 Quick Config-Completion Interface

Click **Back** to go back to the FXS Settings interface; click **Finish** to finish the Quick Config wizard and now the gateway can work normally with basic configuration.

## 3.4 VoIP Settings


VoIP Settings includes six parts: **SIP**, **SIP Compatibility**, **SIP Station**, **SIP Server**, **NAT Setting** and **Media**. See Figure 3-14. **SIP Settings** is used to configure the general SIP parameters, **SIP Compatibility** is used to set which SIP servers and SIP messages will the gateway be compatible

with, **SIP Station** is to set the basic information of the SIP station, **SIP Server** is to set the basic information of the SIP server, **NAT Setting** is used to configure the parameters for NAT, and **Media Settings** is to set the RTP port and the payload type.



Figure 3-14 VoIP Settings

### 3.4.1 SIP

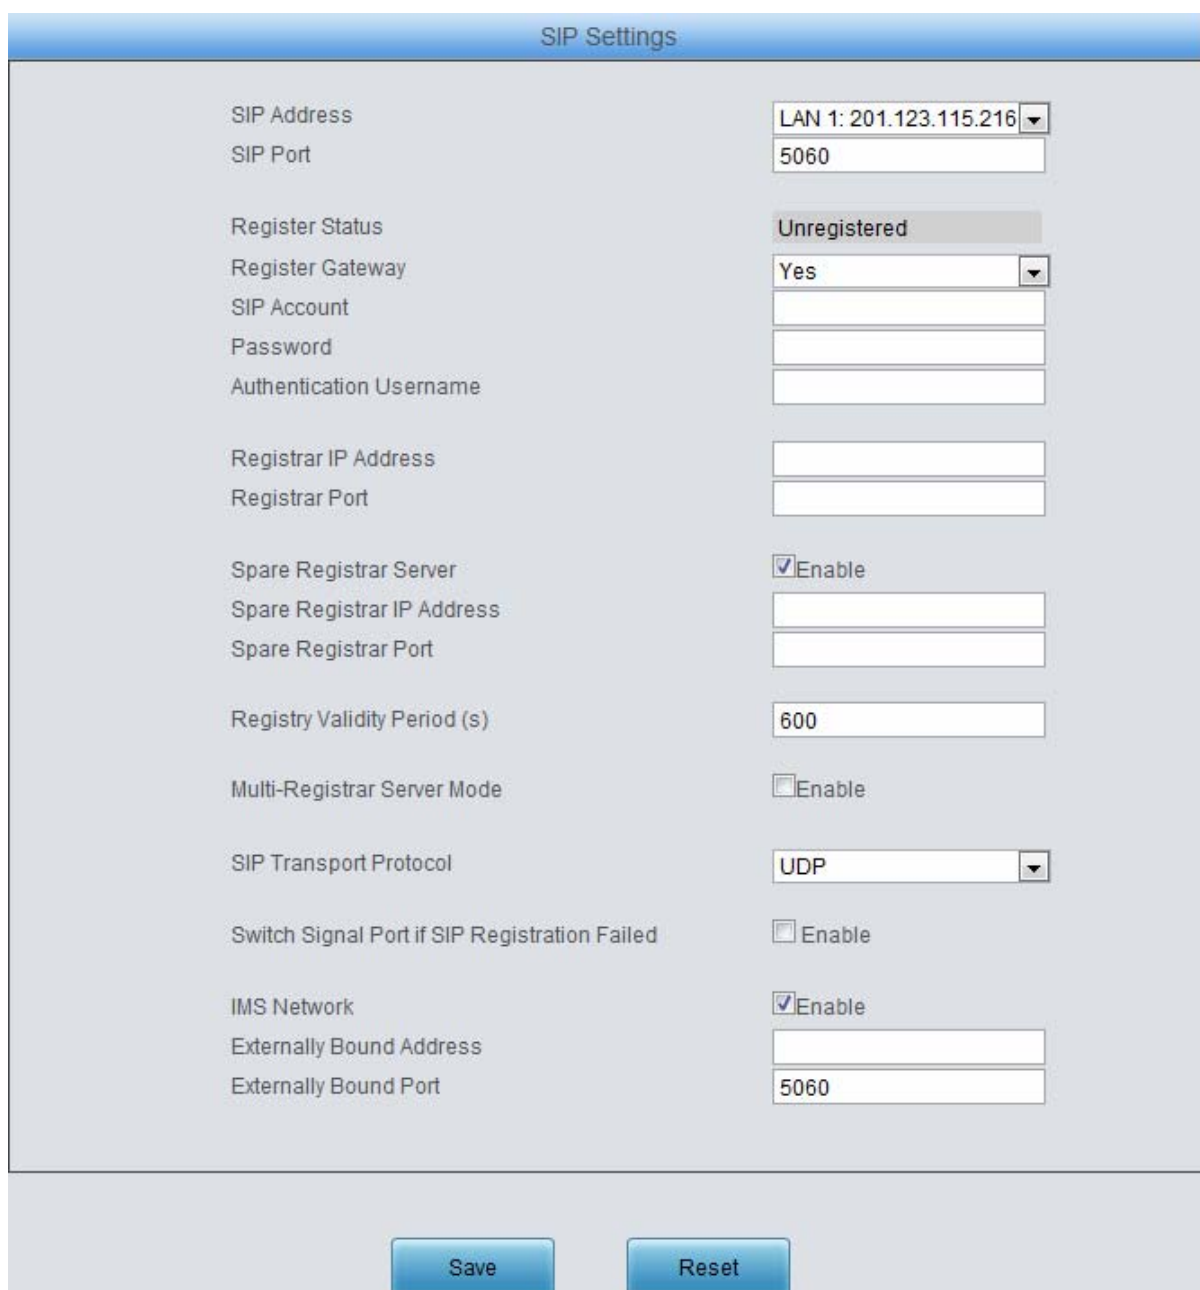

The image shows a web-based configuration interface titled "SIP Settings". It contains various input fields and checkboxes for configuring SIP parameters. At the bottom, there are "Save" and "Reset" buttons.

| Item  | Value                                      |
|---|--|
| SIP Address                                   | LAN 1: 201.123.115.216                     |
| SIP Port                                      | 5060                                       |
| Register Status                               | Unregistered                               |
| Register Gateway                              | Yes  |
| SIP Account                                   |  |
| Password                                      |  |
| Authentication Username                       |  |
| Registrar IP Address                          |  |
| Registrar Port                                |  |
| Spare Registrar Server                        | <input checked="" type="checkbox"/> Enable |
| Spare Registrar IP Address                    |  |
| Spare Registrar Port                          |  |
| Registry Validity Period (s)                  | 600  |
| Multi-Registrar Server Mode                   | <input type="checkbox"/> Enable            |
| SIP Transport Protocol                        | UDP  |
| Switch Signal Port if SIP Registration Failed | <input type="checkbox"/> Enable            |
| IMS Network                                   | <input checked="" type="checkbox"/> Enable |
| Externally Bound Address                      |  |
| Externally Bound Port                         | 5060                                       |

Figure 3-15 SIP Settings Interface

See Figure 3-15 for the SIP settings interface where you can configure the general SIP parameters. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.17 Restart](#) for detailed instructions. The table below explains the items shown in Figure 3-15.

| Item                   | Description   |
|------------------------|---|
| <b>SIP Address</b>     | IP address of SIP signaling, using LAN 1 by default.  |
| <b>SIP Port</b>        | Monitoring port of SIP signaling. The value range of it must be greater than 1024 and less than 65535, with the default value of 5060.  |
| <b>Register Status</b> | Registration status of the gateway. When <b>Register Gateway</b> is set to <i>No</i> , the value of this item is <i>Unregistered</i> ; when <b>Register Gateway</b> is set to <i>Yes</i> , the value of this item is either |



|  |  |
|--|--|
|  | <i>Failed or Registered.</i>   |
| <b>Register Gateway</b>                              | Sets whether to register the gateway as a whole. The default value is <i>No</i> . Only when this configuration is set to <i>Yes</i> can you see the configuration items <b>SIP Account</b> and <b>Password</b> .   |
| <b>SIP Account</b>                                   | When the gateway initiates a call to SIP, this item corresponds to the username of SIP.  |
| <b>Password</b>                                      | Registration password of the gateway. To register the gateway to SIP, both configuration items <b>SIP Account</b> and <b>Password</b> should be filled in.   |
| <b>Authentication Username</b>                       | Authentication username for registration.  |
| <b>Registrar IP Address</b>                          | Address of the registry server for the gateway to register.  |
| <b>Registrar Port</b>                                | Signaling port of the registry server.   |
| <b>Spare Registrar Server</b>                        | Check the enable checkbox to enable the spare registrar server. By default, it is <i>disabled</i> .  |
| <b>Spare Registrar IP Address</b>                    | Address of the spare registry server for the gateway to register. The gateway will enable the spare registrar server if the master registrar server has no reply, or the master server is detected with no response in case the item <b>Detection Server Cycle</b> is enabled.   |
| <b>Spare Registrar Port</b>                          | Signaling port of the spare registry server.   |
| <b>Registry Validity Period</b>                      | Validity period of the SIP registry. Once the registry is overdue, the gateway should be registered again. This configuration item is valid only when <b>Register Gateway</b> is set to <i>Yes</i> . Range of value: 10~3600, calculated by s, with the default value of 600.  |
| <b>Multi-Registrar Server Mode</b>                   | Tick the checkbox before to enable the multi-registrar server mode. By default, it is <i>disabled</i> .  |
| <b>SIP Transport Protocol</b>                        | There are two modes <i>UDP</i> and <i>TCP</i> available for running the SIP protocol. The default value is <i>UDP</i> .  |
| <b>Switch Signal Port if SIP Registration Failed</b> | If the SIP registration fails, the SIP signaling port N will switch to N+1 for a new registration. It will continue until the registration succeeds. The default value is <i>disabled</i> .  |
| <b>IMS Network</b>                                   | Once this feature is enabled, the gateway will send signaling messages to the corresponding externally bound address and port when it registers to the server. By default, this feature is <i>disabled</i> . Only when this feature is <i>enabled</i> will these items <b>Externally Bound Address</b> , <b>Externally Bound Port</b> and <b>Authentication Username</b> be shown. |
| <b>Externally Bound Address</b>                      | Externally bound IP address for registration.  |
| <b>Externally Bound Port</b>                         | Externally bound port for registration.  |

### 3.4.2 SIP Compatibility

See Figure 3-16 for the SIP Compatibility interface where you can configure the SIP parameters to determine which SIP servers and SIP messages will the gateway be compatible with. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations.



| SIP Compatibility                       |  |
|---|--|
| Obtain CalleeID from                    | "Request" Field                            |
| Set CallerID position                   | Username of From Field                     |
| Obtain CallerID from                    | Username of From Field                     |
| Use Contact Address                     | <input type="checkbox"/> Enable            |
| Call Transfer Mode                      | Internal Handling                          |
| Internal Handle                         | Match Port Number                          |
| Call Flash Mode                         | Platform to Handle SIP I                   |
| Hold Music Source                       | Remote                                     |
| Two Stage Dialing for SIP Incoming Call | <input type="checkbox"/> Enable            |
| Maximum Wait Answer Time (s)            | 60   |
| SIP Station Supported                   | <input type="checkbox"/> Enable            |
| Set SIP Identifying                     | Gateway                                    |
| Maximum Wait RTP Time (s)               | 15   |
| Call Abnormal Hangup Detection          | <input checked="" type="checkbox"/> Enable |
| Cycle(s)                                | 0  |
| Server Status Detection                 | <input checked="" type="checkbox"/> Enable |
| Cycle(s)                                | 0  |
| Send Cue Tone                           | <input type="checkbox"/> Enable            |
| SIP Encryption                          | <input checked="" type="checkbox"/> Enable |
| Encryption Criterion                    | VOS1.1                                     |
| Identifier                              |  |
| Key                                     |  |
| RTP Encryption                          | <input type="checkbox"/> Enable            |
| Ignore ACK                              | <input type="checkbox"/> Enable            |
| User-defined SIP Code                   | <input type="checkbox"/> Enable            |
| Use Iptables                            | <input type="checkbox"/> Enable            |

Save
Reset

Figure 3-16 SIP Compatibility Setting Interface

The table below explains the items shown in Figure 3-16.

| Item   | Description   |
|--|---|
| <b>Obtain CalleeID from</b>                    | There are two optional ways to obtain the called party number: from "To" Field and from "Request" Field. The default value is <i>"Request" Field</i> .  |
| <b>Set CallerID Position</b>                   | There are two options to set the position of the calling party number: "Displayname of From Field" and "Username of From Field". The default value is <i>"Username of From Field"</i> .   |
| <b>Obtain CallerID from</b>                    | There are two optional ways to obtain the calling party number: from "Displayname of From Field" and from "Username of From Field". The default value is <i>"Username of From Field"</i> .  |
| <b>Use Contact Address</b>                     | Sets whether to send the request message according to the content of Contact, with the default setting of <i>disabled</i> . As it is disabled, if the Contact field indicates an IP address within the LAN, the request message will be sent according to the source address; if the Contact field indicates an IP address belonging to the WAN, the request message will be sent according to this IP address. |
| <b>Call Transfer Mode</b>                      | There are two optional ways to deal with call transfer: <i>Internal Handling</i> and <i>Platform to Handle SIP Info</i> . The default value is <i>Internal Handling</i> .   |
| <b>Internal Handle</b>                         | Sets the internal handle mode for the call transfer, including two options: Match Port Number and Search Idle FXO Channel. The default value is <i>Match Port Number</i> .  |
| <b>Call Flash Mode</b>                         | There are two optional ways to deal with call flash: <i>Internal Handling</i> and <i>Platform to Handle SIP Info</i> . The default value is <i>Internal Handling</i> .  |
| <b>Hold Music Source</b>                       | Sets the source of the hold music, with the default value of <b>Remote</b> . This feature gets valid only when you choose the mode <i>Platform to Handle SIP Info</i> .   |
| <b>Two Stage Dialing for SIP Incoming Call</b> | Once this feature is enabled, the incoming call from SIP should perform the two stage dialing operation. By default this feature is disabled.   |
| <b>Maximum Wait Answer Time</b>                | Sets the maximum time for the SIP channel to wait for the answer from the called party of the outgoing call it initiates. If the call is not answered within the specified time period, it will be canceled by the channel automatically. The default value is 60, calculated by s.   |
| <b>SIP Station Supported</b>                   | Once this feature is enabled, a SIP terminal can be registered to the gateway and becomes a SIP station. By default this feature is disabled.   |
| <b>Set SIP Identifying</b>                     | Sets the SIP identifying content in the SIP call message. The default setting is <i>Gateway</i> .   |
| <b>Maximum Wait RTP Time</b>                   | Sets the maximum time for the SIP channel to wait for the RTP packet. If no RTP packet is received within the specified time period, the channel will enter the pending state automatically and release the call. The default value is 15, calculated by s.   |
| <b>Call Abnormal Hangup Detection</b>          | Sets the interval between checks of the remote end's abnormal hangup, with the default value of 0 (feature disabled), calculated by s. It is suggested to set to 10s if this feature is necessary to be used.   |

|                                      |  |
|--------------------------------------|--|
| <b>Server Status Detection Cycle</b> | The interval of sending a heartbeat packet to detect the master registrar server status, with the default value of 0 (feature disabled), calculated by s. It is suggested to set to 15s if this feature is necessary to be used. |
| <b>Send Cue Tone</b>                 | Sets whether to send a cue tone once the server gets disconnected, with the default setting of <i>disabled</i> .   |
| <b>SIP Encryption</b>                | Once this feature is enabled, you can encrypt the SIP signal following selecting an encryption criterion and setting a key. By default it is <i>disabled</i> .   |
| <b>Encryption Criterion</b>          | The criterion used to encrypt the SIP signal. At present only VOS1.1 is supported.   |
| <b>Identifier</b>                    | The identifier field of the VOS encryption, which is used to obtain the key of the SIP encryption.   |
| <b>Key</b>                           | The key to encrypt the SIP signal.   |
| <b>RTP Encryption</b>                | Once this feature is enabled, you can encrypt the RTP package. By default it is <i>disabled</i> .  |
| <b>Ignore ACK</b>                    | Once this feature is enabled, the gateway is not necessary to wait for the ACK message after sending the 200OK message to establish a call. By default it is <i>disabled</i> .   |
| <b>User-defined SIP Code</b>         | Once this feature is enabled, you can define a SIP code for the corresponding SIP status, with the default value of <i>disabled</i> .  |
| <b>Use Iptables</b>                  | Once this feature is enabled, only the calls from the SIP registration server, the source IP address of the route IP->TEL and these IP addressed set in <a href="#">Access Control</a> interface are permitted.                  |

### 3.4.3 SIP Station

A SIP terminal can be registered to the gateway and becomes a SIP station. Enable the feature of '**SIP Station Supported**' on [3.4.2 SIP Compatibility](#), and you will see the item SIP Station on the VoIP Settings menu. Click '**SIP Station**' to go into the SIP Station interface. By default, there is no available SIP station. See Figure 3-17 below.


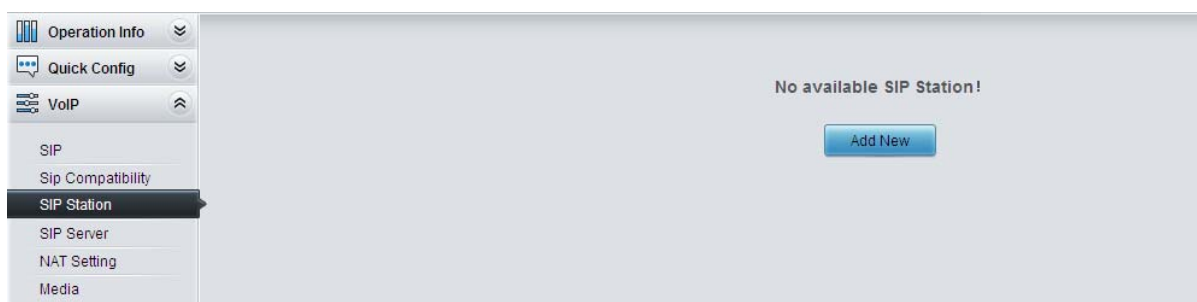


Figure 3-17 SIP Station Setting Interface

Click **Add New** to add SIP stations manually. See Figure 3-18. You can configure basic SIP station information on this interface. The bound port to a SIP station must be an FXO port and unique. The username must be the same as that used to register the SIP terminal to the gateway.

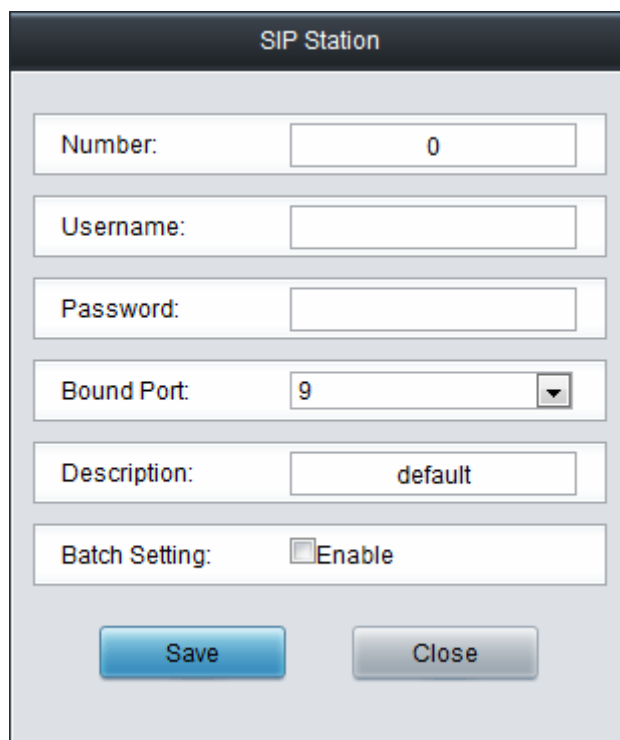


The image shows a 'SIP Station' configuration window. It contains several input fields: 'Number' with the value '0', 'Username' (empty), 'Password' (empty), 'Bound Port' with a dropdown menu showing '9', 'Description' with the value 'default', and 'Batch Setting' with an unchecked checkbox labeled 'Enable'. At the bottom are two buttons: 'Save' and 'Close'.

Figure 3-18 Add New SIP Station

The table below explains the items shown above:

| Item                 | Description  |
|----------------------|--|
| <b>Number</b>        | The logical number for a SIP station to register to the gateway. |
| <b>Username</b>      | The username used to register a SIP station to the gateway.      |
| <b>Password</b>      | The password used to register a SIP station to the gateway.      |
| <b>Bound Port</b>    | The FXO port which is bound to the SIP station.                  |
| <b>Description</b>   | It is user-defined, with the default value of <i>default</i> .   |
| <b>Batch Setting</b> | Used to set multiple SIP stations at the same time.              |


After configuration, click **Save** to save the above settings into the gateway or click **Close** to cancel the settings. See Figure 3-19 for the applied SIP station information.

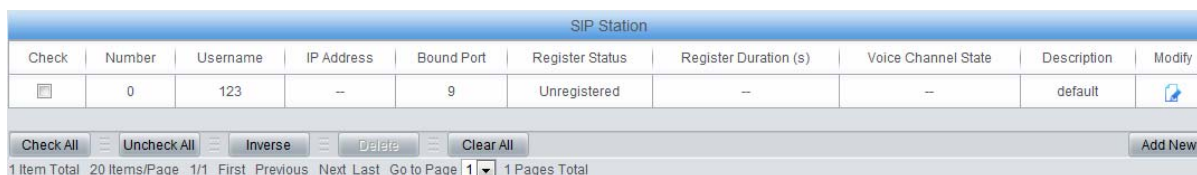

The image shows a table titled 'SIP Station' with columns: Check, Number, Username, IP Address, Bound Port, Register Status, Register Duration (s), Voice Channel State, Description, and Modify. The first row shows a station with Number 0, Username 123, IP Address --, Bound Port 9, Register Status Unregistered, Register Duration --, Voice Channel State --, and Description default. Below the table are buttons: Check All, Uncheck All, Inverse, Delete, Clear All, and Add New. At the bottom, it says '1 Item Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total'.

Figure 3-19 SIP Station Interface

Click **Modify** in the above figure to modify the configuration of the SIP station. See Figure 3-20. The configuration items on this interface are the same as those on the **Add New SIP Station** interface.

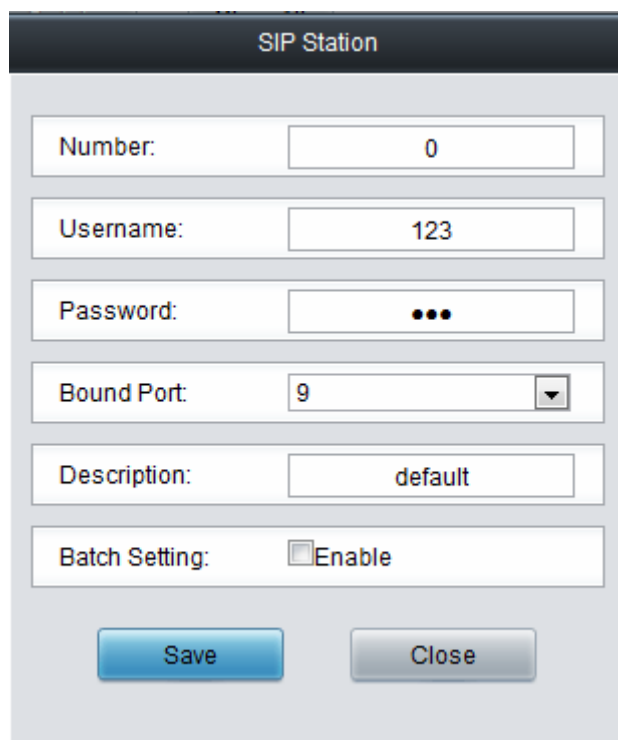

The image shows a 'SIP Station' configuration window. It contains several input fields: 'Number' with the value '0', 'Username' with '123', 'Password' with three dots, 'Bound Port' with a dropdown menu showing '9', 'Description' with 'default', and 'Batch Setting' with an unchecked checkbox labeled 'Enable'. At the bottom are 'Save' and 'Close' buttons.

Figure 3-20 SIP Station Modification Interface

To delete a SIP station, check the checkbox before the corresponding index in Figure 3-19 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all SIP stations at a time, click the **Clear All** button in Figure 3-19.

### 3.4.4 SIP Server

The gateway supports the multi-registrar server feature. Enable the feature of '**Multi-Registrar Server Mode**' on the [SIP](#) interface (see [3.4.1 SIP](#)) and you will see the item SIP Server under the VoIP Settings menu. Click '**SIP Server**' to go into the SIP Server interface. By default, there is no available SIP server. See Figure 3-21 below.

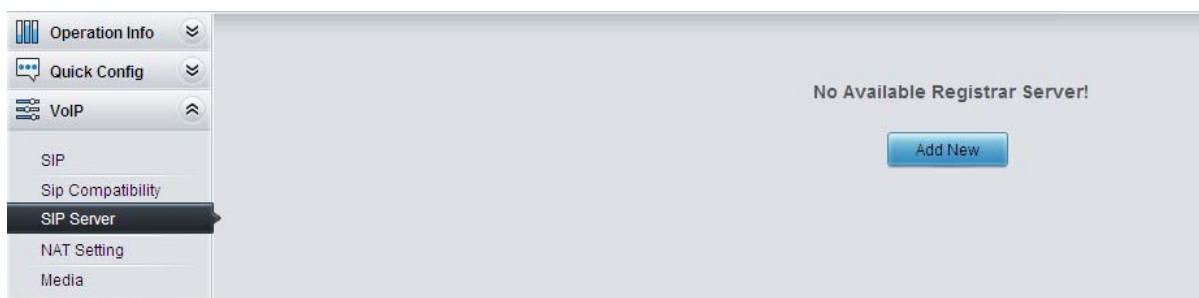


Figure 3-21 SIP Server Interface

Click **Add New** to add SIP servers manually. See Figure 3-22. You can configure basic SIP server information on this interface.

Figure 3-22 Add New SIP Server

All the items except Index and Description are the same as those on [the SIP](#) interface ([3.4.1 SIP](#)).

| Item               | Description  |
|--------------------|--|
| <b>Index</b>       | The index of each SIP server. The gateway supports up to 8 SIP servers.            |
| <b>Description</b> | More information about each SIP server, with the default value of <i>default</i> . |

After configuration, click **Save** to save the above settings into the gateway or click **Cancel** to cancel the settings. See Figure 3-23 for the SIP server management interface.

| Check                    | Index | Description | IP Address      | Port | IMS Network | Externally Bound Address | Externally Bound Port | Registry Validity Period | Port | Port Group | Modify |
|--------------------------|-------|-------------|-----------------|------|-------------|--------------------------|-----------------------|--------------------------|------|------------|--------|
| <input type="checkbox"/> | 1     | defalut     | 201.123.115.233 | 5060 | Enable      | 201.123.123.145          | 5060                  | 600                      | ---  | ---        |        |
| <input type="checkbox"/> | 2     | defalut     | 201.123.115.233 | 5060 | Disable     | ---                      | ---                   | 600                      | ---  | ---        |        |

Figure 3-23 SIP Server Management

Click **Modify** in the above figure to modify the configuration of the SIP server. See Figure 3-24.

The configuration items on this interface are the same as those on the **Add New SIP Server** interface.

| Modify SIP Server            |  |
|------------------------------|--|
| Index                        | 1  |
| Description                  | defalut                                    |
| Registrar IP Address         | 201.123.115.233                            |
| Registrar Port               | 5060                                       |
| Registry Validity Period (s) | 600  |
| IMS Network                  | <input checked="" type="checkbox"/> Enable |
| Externally Bound Address     | 201.123.123.145                            |
| Externally Bound Port        | 5060                                       |

Figure 3-24 SIP Server Modification Interface

To delete a SIP server, check the checkbox before the corresponding index in Figure 3-23 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all SIP servers at a time, click the **Clear All** button in Figure 3-23.

### 3.4.5 NAT Setting

See Figure 3-25 for the NAT setting interface where you can configure the parameters for NAT. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations.



NAT Settings

Local NAT Traversal

Method 1:

Auto Nat

Enable PMP

Outer Network Address

Offline

Method 2:

STUN Server

☒ Enable

NAT Type

Unknown

STUN Server Address

127.0.0.1

Method 3:

Mapping Contact IP

Mapping SDP IP

Method 4:

Rport

☒ Enable

Auto Detect NAT IP

☐ Enable

Help Remote Device Complete NAT Traversal

RTP Self-adaption

☐ Enable

Note:

The non-professional person please do not modify the configuration on this page.

"Local NAT Traversal": Please select one method according to your current network environment.

"Auto Nat": It is required to enable the feature of upon or pmp for the router.

"Mapping Contact IP": It is required to set the router to map the SIP port to the gateway.

"Mapping SDP IP": It is required to set the router to map the RTP port range to the gateway.

"Auto Detect NAT IP": It is valid only when the feature "Rport" is enabled and the router is set to map the RTP port range to the gateway.

Save

Reset

Figure 3-25 NAT Setting Interface

The table below explains the items shown in Figure 3-25.

| Item                 | Description   |
|----------------------|---|
| <b>Auto Nat</b>      | Sets whether to enable the Auto Nat feature. Three options are available: DisableAutoNat, Enable PMP and Enable UPNP, with the default value of <i>Auto Nat</i> . |
| <b>Outer Network</b> | The address of the outer network acquired automatically once the PMP or UPNP  |



|                            |   |
|----------------------------|---|
| <b>Address</b>             | feature is enabled.   |
| <b>STUN Server</b>         | Sets whether to enable the STUN server for NAT traversal. By default the STUN server is disabled.   |
| <b>NAT Type</b>            | Detected NAT (Network Address Translation) type. The gateway will return the NAT type automatically in case <b>STUN Server</b> is enabled. It includes 9 types: unknown; no NAT; ConeNat; RestrictedNat; PortRestrictedNat; Symmetric NAT; Symmetric NAT with firewall; can't detect over (fail to send detect message) and fail to detect (No reply from the stun server). |
| <b>STUN Server Address</b> | Address of the server for STUN traversal.   |
| <b>Mapping Contact IP</b>  | The IP filled in here will be used in the Contact field of the SIP message.   |
| <b>Mapping SDP IP</b>      | The IP filled in here will be used in the SDP field of the SIP message.   |
| <b>Rport</b>               | When this feature is enabled, a corresponding Rport field will be added to the Via message of SIP. The default value is <i>enabled</i> .  |
| <b>Auto Detect NAT IP</b>  | When this feature is enabled, the gateway will parse the corresponding address and port in the message returned by Rport so as to use them for the following communication. By default, this feature is <i>disabled</i> .<br><b>Note:</b> This feature gets valid only when Rport is enabled.   |
| <b>RTP Self-adaption</b>   | When this feature is enabled, the RTP reception address or port carried by the signaling message from the remote end, if not consistent with the actual state, will be updated to the actual RTP reception address or port. By default, this feature is <i>disabled</i> .   |

### 3.4.6 Media

Media Parameters

DTMF Transmit Mode

RFC2833 ▼

RFC2833 Payload

101

RTP Port Range

50000,50767

Silence Suppression

Disable ▼

JitterMode

Static Mode ▼

JitterBuffer(ms)

20

Voice Gain Output from IP (dB)

0

AGC

☒ Enable

Target Energy Threshold (dB)

0

Maximum Gain Threshold (dB)

48

Maximum Attenuation Threshold (dB)

0

Minimum Input Energy (dB)

-60

CODEC Priority

| Check                               | Priority | CODEC   | Packing Time | Bit Rate (kbs) |
|-------------------------------------|----------|---------|--------------|----------------|
| <input checked="" type="checkbox"/> | 1        | G711A ▼ | 20 ▼         | 64 ▼           |
| <input checked="" type="checkbox"/> | 2        | G711U ▼ | 20 ▼         | 64 ▼           |
| <input checked="" type="checkbox"/> | 3        | G729 ▼  | 20 ▼         | 8 ▼            |
| <input checked="" type="checkbox"/> | 4        | G723 ▼  | 30 ▼         | 6.3 ▼          |
| <input checked="" type="checkbox"/> | 5        | G722 ▼  | 30 ▼         | 64 ▼           |
| <input checked="" type="checkbox"/> | 6        | AMR ▼   | 20 ▼         | 4.75 ▼         |
| <input checked="" type="checkbox"/> | 7        | iLBC ▼  | 30 ▼         | 13.3 ▼         |

Save

Reset

Figure 3-26 Media Settings Interface

See Figure 3-26 for the media settings interface where you can configure the RTP port and payload type depending on your requirements. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.17 Restart](#) for detailed instructions. The table below explains the items shown in Figure 3-26.

| Item                      | Description   |
|---------------------------|---|
| <b>DTMF Transmit Mode</b> | Sets the transmit mode for the IP channel to send DTMF signals. The optional values are <i>RFC2833</i> , <i>In-band</i> and <i>Signaling</i> , with the default value of <i>RFC2833</i> . |
| <b>RFC2833 Payload</b>    | Payload of the RFC2833 formatted DTMF signals on the IP channel. Range of value: 90~127, with the default value of 101.   |

|                                      |  |
|--------------------------------------|--|
| <b>RTP Port Range</b>                | Supported RTP port range for the IP end to establish a call conversation, with the lower limit of 10000 and the upper limit of 60000 and the difference between larger than 480. The default value is 50000-50767.   |
| <b>Silence Suppression</b>           | Sets whether to send comfort noise packets to replace RTP packets or never to send RTP packets to reduce the bandwidth usage when there is no voice signal throughout an IP conversation. The optional values are <i>Enable</i> and <i>Disable</i> , with the default value of <i>Disable</i> .  |
| <b>JitterMode</b>                    | Sets the mode for the Jitter buffer. The optional mode is <i>Static Mode</i> and <i>Adaptive Mode</i> , with the default value of <i>Static Mode</i> .   |
| <b>JitterBuffer</b>                  | Acceptable jitter for data packets transmission over IP, which indicates the buffering capacity. A larger JitterBuffer means a higher jitter processing capability but as well as an increased voice delay, while a smaller JitterBuffer means a lower jitter processing capability but as well as a decreased voice delay. Range of value: 20~200, calculated by ms, with the default value of 20.<br><b>Note:</b> This is only valid if the Jitter Mode is set to Static Mode. |
| <b>Voice Gain Output from IP</b>     | Adjusts the gain of the voice output from IP. Range of value: -24~12, calculated by dB, with the default value of 0.   |
| <b>AGC</b>                           | If the AGC (Automatic Gain Control) feature is enabled, the gateway will automatically adjust the input signal amplitude, increasing that of small signals and decreasing that of large signals.   |
| <b>Target Energy Threshold</b>       | Set the target energy of the AGC, range of value: -50~0, calculated by dB, with the default value of 0.  |
| <b>Maximum Gain Threshold</b>        | Set the maximum gain threshold that will be applied to the signal. Range of value: 0~48, calculated by dB, with the default value of 48.   |
| <b>Maximum Attenuation Threshold</b> | Set the maximum attenuation that will be applied to the signal. Range of value: -42~0, calculated by dB, with the default value of 0.  |
| <b>Minimum Input Energy</b>          | Set the minimum threshold for the energy processed by AGC. Signals below this threshold will not be processed by AGC. Range of value: -60~ -25, calculated by dB, with the default value of -60.   |

|                       |  |  |
|-----------------------|--|--|
| <b>CODEC Priority</b> | Supported CODECs and their corresponding priority for the IP end to establish a call conversation. The table below explains the sub-items:   |  |
|                       | <b>Sub-item</b>  | <b>Description</b>   |
|                       | <i>Priority</i>  | Priority for choosing the CODEC in an SIP conversation. The smaller the value is, the higher the priority will be. |
|                       | <i>CODEC</i>   | Three optional CODECs are supported: G711A, G711U, G729A/B, G723, G722, AMR and iLBC.                              |
|                       | <i>Packing Time</i>  | Time interval for packing an RTP packet, calculated by ms.   |
|                       | <i>Bit Rate</i>  | The number of thousand bits (excluding the packet header) that are conveyed per second.                            |
|                       | By default, all of the seven CODECs are supported and ordered G711A, G711U, G729A/B, G723, G722, AMR and iLBC by priority from high to low.  |  |
|                       | The packing time and bit rate supported by different CODECs are listed in the table below. Those values in bold face are the default values. |  |
|                       | <b>CODEC</b>   | <b>Packing Time (ms)</b> <b>Bit Rate (kbps)</b>  |
|                       | G711A  | 10 / <b>20</b> / 30 / 40 / 60 <b>64</b>  |
|                       | G711U  | 5 / 10 / <b>20</b> / 30 / 40 / 50 / 60 <b>64</b>   |
|                       | G729A/B  | 10 / <b>20</b> <b>8</b>  |
|                       | G723   | <b>30</b> / 60      5.3 / <b>6.3</b>   |
|                       | G722   | 5 / 10 / 20 / <b>30</b> / 40 <b>64</b>   |
|                       | AMR  | <b>20</b> / 40 / 60      4.75  |
|                       | iLBC   | <b>30</b> / 60 <b>13.3</b> / 15.2  |

## 3.5 Advanced Settings

Advanced Settings includes fourteen parts: **FXS**, **FXO**, **Tone Detector**, **Tone Generator**, **DTMF**, **Ringing Scheme**, **Fax**, **Function Key**, **Dialing Rule**, **Dialing Timeout**, **Cue Tone**, **Color Ring**, **QoS** and **Action URL**. See Figure 3-27. **FXS** is used to configure the general properties of the FXS port; **FXO** is used to configure the general properties of the FXO port; **Tone Detector** is used to configure some properties of detected tones; **Tone Generator** is used to configure some properties of tones sent from gateway; **DTMF** is used to set the properties related to DTMF; **Ringing Scheme** is used to set the ringing scheme for the FXS port; **Fax** is used to configure multiple fax parameters; **Function Key** is used to set a cluster of combination keys for you to query a related number; **Dialing Rule** and **Dialing Timeout** are used to set the judging conditions for dialing; **Cue Tone** is used to set the gateway language for playing voice and the voice file used for the two-stage dialing; **Color Ring** is used to upload the color ring file which can be set as a ringback tone for an incoming call from IP to FXS port; **QoS** uses the differentiated services technology to increase the gateway's service quality. **Action URL** is used to designate the server path to report the on-hook or off-hook state of the FXS channel.

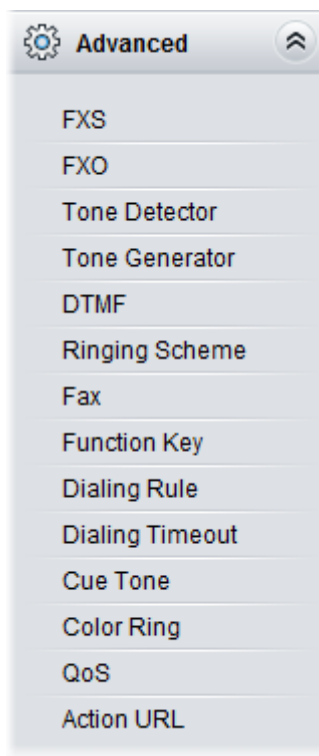


Figure 3-27 Advanced Settings

### 3.5.1 FXS



Figure 3-28 FXS Configuration Interface

See Figure 3-28 for the FXS configuration interface. The table below explains the items shown in the above figure.

| Item                        | Description   |
|-----------------------------|---|
| <b>Hook-flash Detection</b> | Sets whether to enable the hook-flash detection feature or not, with the default setting of being disabled. |

|   |  |
|---|--|
| <b>Minimum Time</b>                             | Time length for judging a flash operation. Only a hook-flash operation which lasts a time more than the value of this configuration item will be regarded as a valid flash operation. Range of value: 80~ <b>Maximum Time</b> , calculated by ms, with the default value of 80.  |
| <b>Maximum Time</b>                             | Time length for judging a flash operation. Only a hook-flash operation which lasts a time less than the value of this configuration item will be regarded as a valid flash operation. Those lasting a time longer than the value of this configuration item will be regarded as hangup operations. Range of value: 32~2000, calculated by ms, with the default value of 700. |
| <b>Minimum Time Length of On-hook Detection</b> | The minimum time length for detecting whether the phone is on-hook or not. Range of value: 64~2000, calculated by ms, with the default value of 64.<br><b>Note:</b> This item is valid only when the item Hook-flash Detection is disabled.  |
| <b>CID Transmit Mode</b>                        | The mode adopted by the FXS port to send the CallerID. The optional values are <i>FSK</i> and <i>DTMF</i> , with the default value of <i>FSK</i> .   |
| <b>Occasion to Send FSK CallerID</b>            | Sets when to send the CallerID, before rings or after the 1 <sup>st</sup> Ring. The default value is <i>after 1<sup>st</sup> Ring</i> .  |
| <b>Send Polarity Reversal Signal</b>            | Once this feature is enabled, the gateway will send the polarity reversal signal to a corresponding FXS channel when it detects the called party pick-up behavior. By default, this feature is <i>disabled</i> .   |
| <b>Handling of Call from Internal Station</b>   | Sets the handling mode for the calls from station to station, two options available: Internal Handling and Platform Handling, with the default value of Platform Handling.   |
| <b>Light Up Mode for Voice Message</b>          | Sets the light up mode for the voice message of the phone, There are two options: <i>Not Light Up</i> and <i>Light Up by FSK</i> , with the default value of <i>Not Light Up</i> .   |
| <b>Work Mode</b>                                | Sets the work mode for the echo canceller. There are two options: Near-end cancellation and Both near-end and far-end cancellation, with the default value of <i>Near-end cancellation</i> .   |
| <b>Non-linear Processing</b>                    | Sets whether to enable the mode of non-linear processing. By default, this feature is <i>enabled</i> .   |
| <b>Fixed Window Size</b>                        | Sets the size of the window for the fixed cancellation.  |
| <b>Moving Window Size</b>                       | Sets the size of the window for the moving cancellation.   |

After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.17 Restart](#) for detailed instructions.

### 3.5.2 FXO

FXO

Calling Party Detection Time (s)

Silence Detection(FXO will Hang up the Call upon Detecting the Silence.)

☒ Enable

Energy Threshold of Silence (dB)

Time Threshold of Silence (s)

Time Threshold to Avoid on-line Voice Dithering (ms)

Incoming Call from PSTN

☐ Enable

Rapid Release

☐ Enable

FSK Standard

FSK Detection Parameters

Minimum Energy Threshold for FSK Detection (0.1db)

Minimum Numbers of FSK Seizure Bits

Minimum Numbers of FSK Mark Bits on on-hook

Minimum Numbers of FSK Mark Bits on off-hook

Reception Interval of DTMF CallerID (ms)

Delay for Two Stages Dialing (s)

Outgoing Call to PSTN

Flash Time (ms)

Delay after Dial (ms)

FXO Pick-up Delay after INVITE Received at IP Side (s)

Maximum Wait Answer Time (s)(Valid when Polarity Reversal Enabled)

Communicate without Network

☐ Enable

Two Stage Dialing Mode

☐ Enable

Delay to Send 200 OK to IP Side (Invalid if Polarity Reversal is enabled)

☐ Enable

Open Session In-Advance

☒ Enable

Avoid Being Detected as Flash Signal by PBX

☐ Enable

Echo Canceller

Work Mode

Non Linear Process

☒ Enable

Fixed Window Size(Near,8kHz)

Moving Window Size(Far,8kHz)

Select Area for Module Parameters

Save

Reset

Figure 3-29 FXO Configuration Interface

The table below explains the particular configuration items for FXO.

| Item                                | Description  |
|-------------------------------------|--|
| <b>Calling Party Detection Time</b> | The maximum waiting time for the detection of the calling party number from FXO port. Range of value: 1~20, calculated by s, with the default value of 10. |



|  |   |
|--|---|
| <b>Silence Detection</b>                               | Used to detect whether the line is silent or not according to the energy threshold and time threshold of silence. FXO will hang up the call automatically if these conditions are satisfied. The default setting is being disabled.   |
| <b>Energy Threshold of Silence</b>                     | The energy threshold to judge whether the line is silent or not. The signal with the energy less than this set value will be determined to be silence. Range of value: -86~6, calculated by s, with the default value of -30.<br><b>Note:</b> This item will be valid only when Silence Detection is enabled. |
| <b>Time Threshold of Silence</b>                       | The time threshold to judge whether the line is silent or not, calculated by s, with the default value of 60.<br><b>Note:</b> This item will be valid only when Silence Detection is enabled.   |
| <b>Time Threshold to Avoid On-line Voice Dithering</b> | Once this feature is enabled, the on-line voice will be determined to be dithering if the voice duration is less than the set value here. Range of value: 24~1000, calculated by ms, with the default value of 48,  |
| <b>Rapid Release</b>                                   | Once this feature is enabled, the FXO port will release the source rapidly and go to the idle state when a call from PSTN to soft-terminal via FXO port is rejected by the IP soft-terminal.  |
| <b>FSK Standard</b>                                    | Standard for sending FSK formatted CallerID, which varies in different countries and districts. The optional values are: ETSI (Europe), GR-30 (North America, China) and NIT (Japan), with the default value of GR-30.  |
| <b>FSK Detection Parameters</b>                        | Sets the configuration mode of the FSK parameters, two options available: Default and Manual, with the default value of <i>Default</i> . In the Default mode, the FSK parameters use default values and cannot be modified. To modify the parameters, please select the Manual mode.                          |
| <b>Minimum Energy Threshold for FSK Detection</b>      | Sets the minimum energy threshold for the FSK detection. Range of value: -1125~0, calculated by 0.1dB, with the default value of -380.  |
| <b>Minimum Number of FSK Seizure Bits</b>              | The FSK seizure bits (0x55) under the on-hook mode. As the protocol provides, it shall be 300 consecutive bit groups of 0 and 1. Range of value: 0~32768, with the default value of 100.  |
| <b>Minimum Number of FSK Mark Bits on on-hook</b>      | The number of FSK marking signals (0xFF) under the on-hook mode. As the protocol provides, it shall be 180 consecutive bits of 1. Range of value: 0~32768, with the default value of 40.  |
| <b>Minimum Number of FSK Mark Bits on off-hook</b>     | The numbers of FSK marking signals (0xFF) under the off-hook mode. As the protocol provides, it shall be 80 consecutive bits of 1. Range of value: 0~32768, with the default value of 50.   |
| <b>Reception Interval of DTMF CallerID</b>             | The time interval between digits of the DTMF CallerID from FXO port, calculated by ms, with the default value of 250.   |
| <b>Delay for Two Stages Dialing</b>                    | If the feature of two-stages dialing mode is enabled and an incoming call occurs, the FXO port will have a delay set by this configuration item before going into the two-stages dialing process,   |
| <b>Flash Time</b>                                      | Sets the time for generating a flash signal on the analog trunk. Range of value: 32~1000, calculated by ms, with the default value of 100.  |



|   |  |
|---|--|
| <b>Delay after Dial</b>                                   | Sets the delay to send the CalleID to PBX after you pick up and dial. Range of value: 200~2000, calculated by ms, with the default value of 1000.  |
| <b>FXO Pick-up Delay after INVITE Received at IP Side</b> | Once this feature is enabled, the FXO port will be delayed to pick up the call after the IP side receives the INVITE message.  |
| <b>Maximum Wait Answer Time</b>                           | The maximum time to wait the answer of the remote side for an outgoing call from FXO port. This item is valid only when Polarity Reversal is enabled. It is calculated by s, with the default value of 60.   |
| <b>Communication without Network</b>                      | Automatically routes a call to the proper port according to the configuration in case of network failure or call timeout. The default value is <i>enabled</i> .  |
| <b>Communicate without Network Mode</b>                   | Sets the mode for the communications without network, two options available: Auto Search Idle Channel and Use Current Route Setting, with the default value of <i>Auto Search Idle Channel</i> . In the mode of Auto Search Idle Channel, the gateway will search an idle FXO port to route the call once the network is disconnected; in the mode of Use Current Route Setting, the gateway will search an escaping channel according to the settings of Tel->IP route. |
| <b>Two Stages Dialing Mode</b>                            | Sets whether it is necessary to perform the two-stages dialing operation to call the remote end via an FXO port. By default this feature is disabled.  |
| <b>Delay to Send 200 OK to IP Side</b>                    | Once this feature is enabled, the gateway will delay to send 200 OK message to the IP side. The default value is <i>disabled</i> .   |
| <b>Open Session In Advance</b>                            | Once this feature is enabled, the gateway will reply the 183 message when the FXO port is making an outgoing call; otherwise, it will reply the 180 message. This item is valid only when Polarity Reversal is enabled. The default value is <i>enabled</i> .  |
| <b>Avoid Being Detected as Flash Signal by PBX</b>        | Once this feature is enabled, after hanging up a call, the FXO channel will be compelled to stay idle for a while before making a new call outside, which helps avoid the pick-up signal being detected as a flash signal by the PBX. The default value is <i>disabled</i> .   |
| <b>Work Mode</b>  | Sets the work mode for the echo canceller. There are two options: Near-end cancellation and Both near-end and far-end cancellation, with the default value of <i>Near-end cancellation</i> .   |
| <b>Non-linear Processing</b>                              | Sets whether to enable the mode of non-linear processing. By default, this feature is <i>enabled</i> .   |
| <b>Fixed Window Size</b>                                  | Sets the size of the window for the fixed cancellation.  |
| <b>Moving Window Size</b>                                 | Sets the size of the window for the moving cancellation.   |
| <b>Select Area for Module Parameters</b>                  | Select an area for hardware parameters of the FXO chip.  |

After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.17 Restart](#) for detailed instructions.

### 3.5.3 Tone Detector




| Tone Detector            |       |               |                 |                       |                       |                      |                       |              |        |   |
|--------------------------|-------|---------------|-----------------|-----------------------|-----------------------|----------------------|-----------------------|--------------|--------|---|
| Check                    | Index | Tone          | Type            | The 1st Mid-frequency | The 2nd Mid-frequency | Duration at ON State | Duration at OFF State | Period Count | Energy | Modify  |
| <input type="checkbox"/> | 0     | Dial Tone     | Continuous Tone | 450                   | 0                     | 1500                 | 0                     | 0            | 8      |  |
| <input type="checkbox"/> | 1     | Busy Tone     | Periodic Tone   | 450                   | 0                     | 350                  | 350                   | 2            | 0      |  |
| <input type="checkbox"/> | 2     | Ringback Tone | Periodic Tone   | 450                   | 0                     | 1000                 | 4000                  | 1            | 0      |  |

Figure 3-30 Tone Parameters Setting Interface

See Figure 3-30 for the Tone Parameters setting interface. At most three pieces of tone parameters are allowed to set. By default, there are already three pieces of tone parameters on the gateway which you can modify or delete according to your actual requirement.

Click **Modify** in Figure 3-30 to modify the tone parameter. See Figure 3-31 for the tone parameter modification interface.

### Tone Parameters

Index:

0

Tone:

Dial Tone

Type :

Continuous Tone

The 1st Mid-frequency:

450

The 2nd Mid-frequency:

0

Duration at ON State:

1500

Duration at OFF State:

0

Period Count :

0

Energy :

8

Save

Close

Figure 3-31 Modify Tone Parameter

The table below explains the items shown in the above figure.

| Item         | Description   |
|--------------|---|
| <b>Index</b> | The unique index of each group of tone detectors.                                       |
| <b>Tone</b>  | There are three options: <b>Dial Tone</b> , <b>Busy Tone</b> and <b>Ringback Tone</b> . |
| <b>Type</b>  | There are two options: <b>Continuous Tone</b> and <b>Periodic Tone</b> .                |

|   |  |
|---|--|
| <b>The 1<sup>st</sup> Mid-frequency</b> | The 1 <sup>st</sup> center frequency. Range of value: 300~3400, calculated by Hz. The default value is 450.  |
| <b>The 2<sup>nd</sup> Mid-frequency</b> | The 2 <sup>nd</sup> center frequency. Range of value: 0 or 300~3400, calculated by Hz. The default value is 0.   |
| <b>Duration at ON State</b>             | The duration of tones at on state. The default setting: Dial Tone is 1500ms, Busy Tone is 350ms, Ringback Tone is 1000ms.  |
| <b>Duration at OFF State</b>            | The duration of tones at off state. The default setting: Dial Tone is 0ms, Busy Tone is 350ms, Ringback Tone is 4000ms.  |
| <b>Period Count</b>                     | Sets the count of periods as the condition to determine a periodic tone. The default setting: Dial Tone is 0, Busy Tone is 2, Ringback Tone is 1.  |
| <b>Energy</b>                           | Sets the energy threshold for the tone detector to detect the on-line tone. To increase the accuracy, you can adjust the value according to the tone volume on the line. Range of value: -18~11, calculated by dB. The default value is 0. |

To delete a piece of tone, check the checkbox before the corresponding index in Figure 3-30 and click the '**Delete**' button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all tone at a time, click the **Clear All** button in Figure 3-30.

### 3.5.4 Tone Generator

Tone Generator

Tone Energy (dB)

Dial Tone

Ringback Tone

Busy Tone

Call Wait Tone

FreqA/TimeA,FreqB+FreqC/TimeB  
Repeatedly play tones in turn: first, TimeA, a single tone with FreqA, then, Time B, a dual tone composed of FreqB and FreqC.

FreqA+FreqB+FreqC/TimeA,FreqD/TimeB  
Repeatedly play tones in turn: first, TimeA, a triple tone composed of FreqA, FreqB and FreqC, then, TimeB, a single tone with FreqD.

Note:  
The play time is calculated by ms and cannot be larger than 16383ms for each toneunit. A tone is allowed to contain at most 5 different toneunits and 4 different frequencies, but the frequency and duration of the first toneunit cannot be 0. Frequency being 0 means the toneunit is a piece of silence.

Save

Reset

Figure 3-32 Tone Generator Setting Interface

See Figure 3-32 for the Tone Generator Setting interface. By default, there are four tones on it: Dial Tone—a single tone with 450HZ frequency, plays continuously; Ringback Tone—a single tone with 450HZ frequency, repeatedly playing in the method of 1s play and 4s pause; Busy Tone—a single tone with 450HZ frequency, repeatedly playing in the method of 350ms play and 350ms pause. Call Wait Tone—a single tone with 450HZ frequency, repeatedly playing in the method of 200ms play and 600ms pause, then 200ms play and 1s pause. You can configure the tone generator manually. The exact explanation about the format and the meaning is described on

the right of the interface. The value range of the tone energy herein above is -18~11, calculated by dB, with the default value of 0.

### 3.5.5 DTMF

The figure shows two configuration panels. The top panel, titled 'DTMF Detector', contains the following settings:

- Minimum Energy Threshold (dB): -45
- Maximum Threshold of Signal Twist (dB): 3
- Input Signal Gain (dB): 0
- Voice Path Delay (ms): 20
- Minimum Duration at ON (ms): 28
- DTMF Display via Channel Status: ☐ Enable
- ABCD Detection: ☐ Enable

The bottom panel, titled 'DTMF Generator', contains the following settings:

- DTMF Energy (dB): 0
- Duration at ON (ms): 100
- Duration at OFF (ms): 32

At the bottom of the interface are two buttons: 'Save' and 'Reset'.

Figure 3-33 DTMF Detector Configuration Interface


See Figure 3-33 for the DTMF configuration, including two parts: DTMF Detector and DTMF Generator. The table below explains the items shown in the above figure.

| Item                                     | Description   |
|--|---|
| <b>Minimum Energy Threshold</b>          | Set the minimum energy threshold of the DTMF signal. Range of value: -96~-1. The default value is -45.  |
| <b>Maximum Threshold of Signal Twist</b> | Set the maximum threshold of the DTMF signal twist. Range of value: 0~12. The default value is 3.   |
| <b>Input Signal Gain</b>                 | Set the input gain of the DTMF signal. Range of value: -24~24, calculated by dB. The default value is 0.  |
| <b>Voice Path Delay</b>                  | Once this feature is enabled, the DTMF in the voice data will be clamped. Range of value: 0~20, calculated by ms. The default value is 20.                      |
| <b>Minimum Duration at ON</b>            | Set the minimum duration at ON for the DTMF signal. Range of value: 10~60, calculated by ms. The default value is 28.   |
| <b>DTMF Display via Channels Status</b>  | Once this feature is enabled, the received/sent DTMF will be displayed upon you putting the mouse on the icon of channel status. The default value is disabled. |

|                        |   |
|------------------------|---|
| <b>ABCD Detection</b>  | Once this feature is enabled, the gateway can detect the DTMF digits A, B, C and D (Case-insensitive). The default value is disabled. |
| <b>DTMF Energy</b>     | Energy of the DTMF signal sent by the gateway. Range of value: -18~11, calculated by dB, with the default value of 0.                 |
| <b>Duration at ON</b>  | Set the duration of the DTMF signal at ON state. Range of value: 0~16383, calculated by ms, with the default value of 100.            |
| <b>Duration at OFF</b> | Set the duration of the DTMF signal at OFF state. Range of value: 0~16383, calculated by ms, with the default value of 32.            |

After configuration, click **Save** to save your settings into the gateway. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.17 Restart](#) for detailed instructions. Click **Reset** to restore the configurations.

### 3.5.6 Ringing Scheme

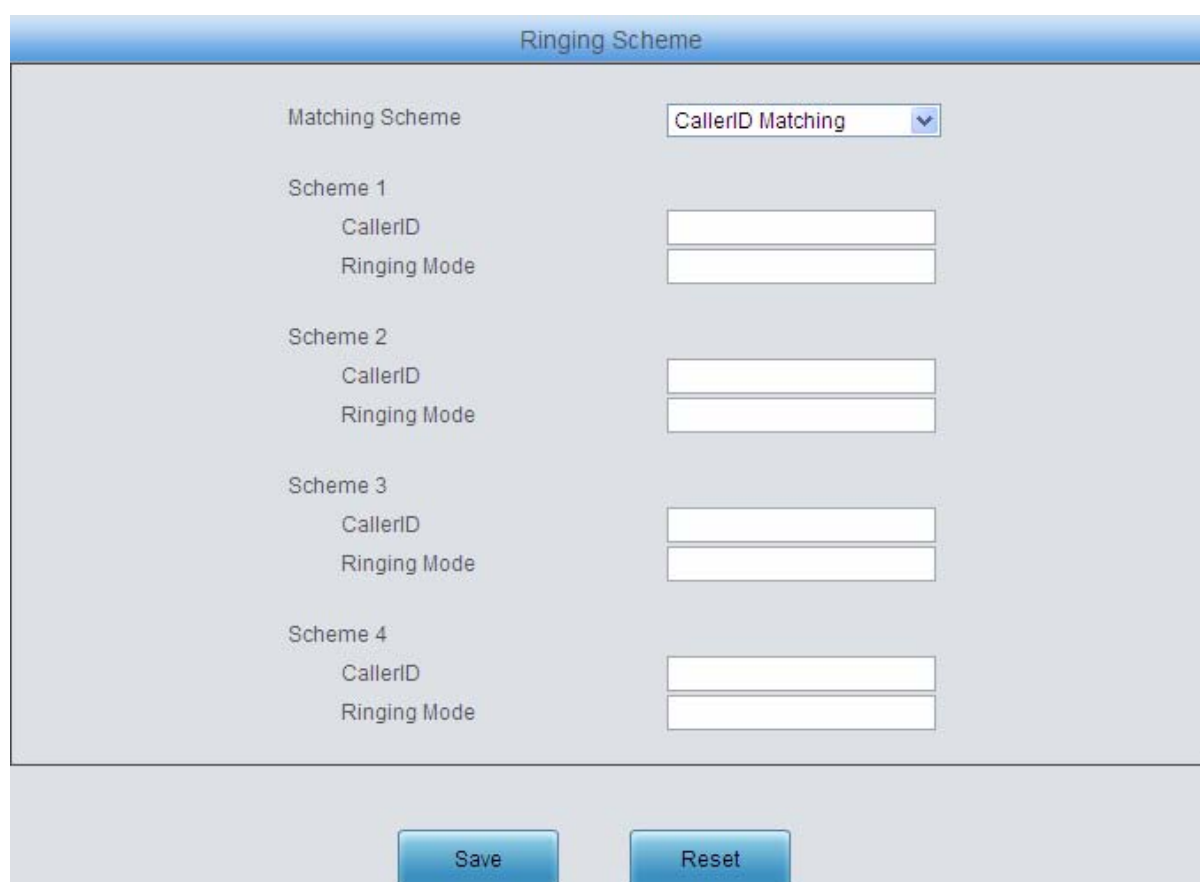

The image shows a web-based configuration interface titled "Ringing Scheme". At the top, there is a "Matching Scheme" dropdown menu currently set to "CallerID Matching". Below this, there are four sections labeled "Scheme 1", "Scheme 2", "Scheme 3", and "Scheme 4". Each section contains two input fields: "CallerID" and "Ringing Mode". At the bottom of the interface, there are two buttons: "Save" and "Reset".

Figure 3-34 Ringing Scheme Configuration Interface

See Figure 3-34 for the Ringing Scheme Configuration interface. The gateway can execute different ringing schemes according to the CallerID or Alert-Info..

The table below explains the items shown in the above figure.

| Item | Description |
|------|-------------|
|------|-------------|

|                         |   |
|-------------------------|---|
| <b>CallerID</b>         | <p>The gateway will match the CallerID set in this item to that of the incoming call. If they are matched, the current ringing scheme will be executed; otherwise, the default ringing scheme (1 sec on and 4 sec off) will work.</p> <p>The rule to fill in the CallerID is the same as that of <a href="#">3.5.9 Dialing Rule</a>. Multiple CallerIDs are supported; they should be separated by “,”</p>  |
| <b>Alert-Info Value</b> | <p>The gateway will match the alert-info value set in this item to that of the incoming call. If they are matched, the current ringing scheme will be executed; otherwise, the default ringing scheme (1 sec on and 4 sec off) will work..</p>  |
| <b>Ringing Scheme</b>   | <p>The ringing scheme can be “1,X,Y” or “2,X,Y,M,N”, in which, the number 1 or 2 denotes one group or two groups; X, M denote the duration at on state while Y, N denote the duration at off state.</p> <p>Note: The duration at ON or OFF cannot be greater than 12000ms, the total duration at ON and OFF cannot be greater than 16000ms, and N - the last duration at OFF cannot be less than 1800ms if the item “Occasion to Send FSK CallerID” is set to After the first ring.</p> |

After configuration, click **Save** to save the above settings into the gateway or click **Reset** to restore the configurations.

### 3.5.7 Fax

Figure 3-35 Fax Configuration Interface (Disable by default)

See Figure 3-35 for the default fax mode configuration. The table below explains the items shown in the above figure.

| Item            | Description  |
|-----------------|--|
| <b>Fax Mode</b> | The real-time IP fax mode. The optional values are <i>T.38</i> , <i>Pass-through</i> and <i>Disable</i> , and the default value is <i>Disable</i> which means to disable both T.38 and Pass-through. |

See Figure 3-36 for the fax configuration under the T.38 mode.

The image shows a web-based configuration interface titled 'Fax Parameters'. It contains several dropdown menus and a text input field for configuring T.38 fax settings. The settings are as follows:

- Fax Mode:** T.38
- T38 Fax Port:** Use Original Voice Port
- T38 Version:** 0
- T38 Negotiation:** Initiate Negotiation as Fax Receiver
- Maximum Fax Rate (bps):** 14400
- Fax Train Mode:** transferredTCF
- Error Correction Mode:** t38UDPRedundancy

At the bottom of the interface are two buttons: 'Save' and 'Reset'.

Figure 3-36 Fax Configuration Interface (T.38 Mode)

Users can configure the general fax parameters via this interface. After configuration, click **Save** to save your settings into the gateway. If a dialog box pops up after you save your settings asking you to restart the system, do it immediately to apply the changes. Refer to [3.9.17 Restart](#) for detailed instructions. Click **Reset** to restore the configurations. The table below explains the configuration items in Figure 3-36.

| Item                         | Description   |
|------------------------------|---|
| <b>T38 Fax Port</b>          | The port for T.38 faxing, providing two options: <b>Use Original Voice Port</b> and <b>Use New Port</b> . The default setting is <i>Use Original Voice Port</i> .   |
| <b>T38 Version</b>           | Version of T.38 which is defined by ITU-T.  |
| <b>T38 Negotiation</b>       | The Negotiation mode of T.38, providing two options: <i>Initiate Negotiation as Fax Sender</i> and <i>Initiate Negotiation as Fax Receiver</i> . The default value is <i>Initiate Negotiation as Fax Receiver</i> .             |
| <b>Maximum Fax Rate</b>      | Sets the maximum faxing rate for both receiving and transmitting. Range of value: 14400, 9600 and 4800, calculated by bps, with the default value of 14400.   |
| <b>Fax Train Mode</b>        | Sets the train mode for T.38 fax. The optional values are <i>transferredTCF</i> and <i>localTCF</i> , with the default value of <i>transferredTCF</i> .   |
| <b>Error Correction Mode</b> | Sets the error correction mode for T.38 fax. The optional values are <i>t38UDPRedundancy</i> (Redundancy Error Correction) and <i>t38UDPFEC</i> (Forward Error Correction), with the default value of <i>t38UDPRedundancy</i> . |

If you set **Fax Mode** to *Pass-through*, you can see the interface shown as Figure 3-37.



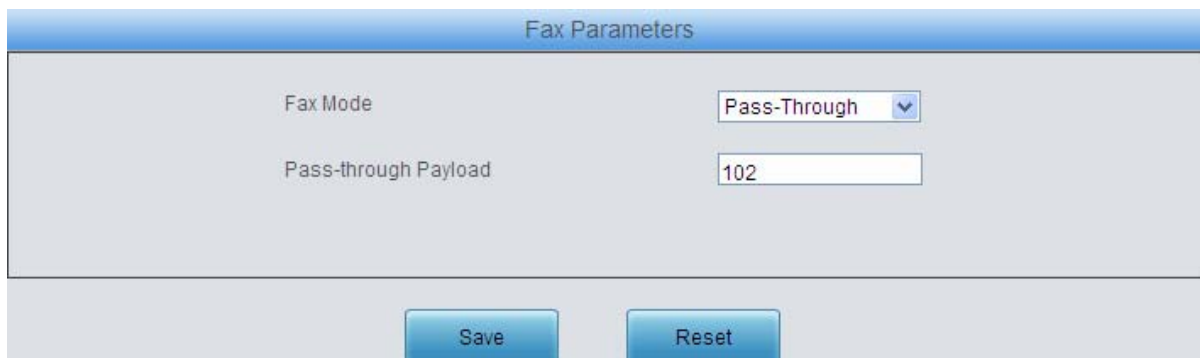


Figure 3-37 Fax Configuration Interface (Pass-through Mode)

The table below explains the configuration item in the above figure.

| Item                               | Description   |
|------------------------------------|---|
| <b><i>Pass-through Payload</i></b> | RTP Payload under the pass-through fax mode. Range of value: 96~127, with the default value of 102. |

### 3.5.8 Function Key

See Figure 3-38 for the Function Key Configuration interface. Here you can set a cluster of combination keys to query a related number.

| Function Key                          |                                     |              |         |
|---------------------------------------|-------------------------------------|--------------|---------|
| Function                              | Enable                              | Function Key | Mode    |
| <b>Device Function</b>                |                                     |              |         |
| Query LAN                             | <input checked="" type="checkbox"/> | *11*         | Default |
| Query Phone Number                    | <input checked="" type="checkbox"/> | *20*         | Default |
| Phone Test                            | <input checked="" type="checkbox"/> | *30*         | Default |
| Set LAN                               | <input checked="" type="checkbox"/> | *61*         | Default |
| Query WEB Port                        | <input checked="" type="checkbox"/> | *70*         | Default |
| Reboot                                | <input checked="" type="checkbox"/> | *#88921532*# | Default |
| Query Missed Call Number              | <input checked="" type="checkbox"/> | *71*         | Default |
| <b>Service Available</b>              |                                     |              |         |
| Blind Transfer                        | <input checked="" type="checkbox"/> | *010*        | Default |
| Call Forward Unconditional Activate   | <input checked="" type="checkbox"/> | *030*        | Default |
| Call Forward Unconditional Deactivate | <input checked="" type="checkbox"/> | *031*        | Default |
| Call Forward Busy Activate            | <input checked="" type="checkbox"/> | *040*        | Default |
| Call Forward Busy Deactivate          | <input checked="" type="checkbox"/> | *041*        | Default |
| Call Forward No Reply Activate        | <input checked="" type="checkbox"/> | *050*        | Default |
| Call Forward No Reply Deactivate      | <input checked="" type="checkbox"/> | *051*        | Default |
| Do Not Disturb Activate               | <input checked="" type="checkbox"/> | *060*        | Default |
| Do Not Disturb Deactivate             | <input checked="" type="checkbox"/> | *061*        | Default |
| Register                              | <input checked="" type="checkbox"/> | *020*        | Default |
| Unregister                            | <input checked="" type="checkbox"/> | *021*        | Default |
| Query Register Status                 | <input checked="" type="checkbox"/> | *022*        | Default |
| Conference                            | <input checked="" type="checkbox"/> | *070*        | Default |

[Save](#)

Figure 3-38 Function Key Configuration Interface

Click “Enable” to enable the corresponding function key. The gateway will use the default function keys when the mode is set to default; and it will allow you to set new function keys when the mode is set to user-defined. Click **Save** to save your settings into the gateway.

**Note:** Phone Test is used just to see if the phone can work normally. It requires you to hang up the phone after dialing the corresponding combination keys. Then the gateway will ring the phone. At that time, pick up the phone and you can hear the voice prompt played by the gateway (e.g. ‘Test successful.’)




















When the **Blind Transfer** feature is enabled, set a corresponding function key in the box behind. After you transfer a call by rapidly clapping on the hook switch, dial the set function key for **Blind Transfer** and then the called party number. After that, hang up the call once hearing the howler tone to let the subsequent call procedure go out of your control.

### 3.5.9 Dialing Rule

Considering efficiency, it is not acceptable that the gateway reports to the PBX or relevant devices every time it receives a number. Instead, we hope that the gateway can automatically judge the received number to see if it meets the set rule, if it is complete and if it is qualified to make outgoing calls. Therefore, a whole dialing plan, which consists of multiple dialing rules specifying the auto judging conditions, is required. Each dialing rule has a priority, which is used to restrict the sequence and avoid conflict.

Standard Mode

Character Mode

| Dialing Rule             |       |                        |             |   |
|--------------------------|-------|------------------------|-------------|---|
| Check                    | Index | Dialing Rule           | Description | Modify  |
| <input type="checkbox"/> | 81    | 400xxxxxx              | default     |  |
| <input type="checkbox"/> | 82    | 40[1-9]xxxxx           | default     |  |
| <input type="checkbox"/> | 83    | 4[1-9]xxxxxx           | default     |  |
| <input type="checkbox"/> | 84    | 800xxxxxxx             | default     |  |
| <input type="checkbox"/> | 85    | 80[1-9]xxxxx           | default     |  |
| <input type="checkbox"/> | 86    | 8[1-9]xxxxxxx          | default     |  |
| <input type="checkbox"/> | 87    | [2-3,5-7]xxxxxxx       | default     |  |
| <input type="checkbox"/> | 88    | 1[3-5,7-8]xxxxxxxx     | default     |  |
| <input type="checkbox"/> | 89    | 100xx                  | default     |  |
| <input type="checkbox"/> | 90    | 95xxx                  | default     |  |
| <input type="checkbox"/> | 91    | 123xx                  | default     |  |
| <input type="checkbox"/> | 92    | 111xx                  | default     |  |
| <input type="checkbox"/> | 93    | 11[0,2-9]              | default     |  |
| <input type="checkbox"/> | 94    | 120                    | default     |  |
| <input type="checkbox"/> | 95    | 0[3-9]xxxxxxxxxxx      | default     |  |
| <input type="checkbox"/> | 96    | 02xxxxxxxxxxx          | default     |  |
| <input type="checkbox"/> | 97    | 010xxxxxxxxxxx         | default     |  |
| <input type="checkbox"/> | 98    | 01[3-5,7-8]xxxxxxxxxxx | default     |  |
| <input type="checkbox"/> | 99    | .                      | default     |  |

Check All

Uncheck All

Inverse

Delete

Clear All

Add New

19 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-39 Dialing Rule Configuration Interface (Standard)

See Figure 3-39 for the Dialing Rule Configuration interface under the standard mode. The list in the above figure shows the dialing rules with their priorities and description, which can be added by the **Add New** button on the bottom right corner. See Figure 3-40 for the dialing rule adding interface.

Dialing Rule

Index:  98

Description:

Dialing Rule:

Figure 3-40 Add New Dialing Rule

The table below explains the items shown in Figure 3-40.

| Item                | Description  |
|---------------------|--|
| <b>Index</b>        | The unique index of each dialing rule, which denotes its priority. A dialing rule with a smaller index value has a higher priority and will be checked earlier while matching. |
| <b>Description</b>  | Remarks for the dialing rule. It can be any information, but can not be left empty.  |
| <b>Dialing Rule</b> | Up to 100 dialing rules can be configured in the gateway, and the maximum length of  |

each dialing rule is 127 characters. See below for the meaning of each character in the dialing rule. The gateway will do instant matching for your dialing number based on the dialing rule and regard your dialing as finished upon receiving '#' or dialing timeout.

| Character | Description   |
|-----------|---|
| "0"~"9"   | Digits 0~9.   |
| "A"~"D"   | Letters A~D.  |
| "X"       | A random number. A string of 'x's represents several random numbers. For example, 'xxx' denotes 3 random numbers.   |
| "."       | '.' indicates a random amount (including zero) of characters after it.  |
| "[ ]"     | '[ ]' is used to define the range for a number. Values within it only can be digits '0~9', punctuations '-' and ','. For example, [1-3,6,8] indicates any one of the numbers 1, 2, 3, 6, 8. |
| "_"       | '_' is used only in '[ ]' between two numbers to indicates any number between these two numbers.  |
| " , "     | ',' is used to separate numbers or number ranges, representing alternatives.  |
| "*"       | Only represents symbol "*".   |
| "#"       | Only set it at the beginning of the string, representing symbol "#".  |

There are 19 dialing rules already configured on the gateway for easy use. See below for detailed information.

| Priority | Dialing Rule         | Description  |
|----------|----------------------|--|
| 99       | .                    | Any number in any length.                                      |
| 98       | 01[3-5,7-8]xxxxxxxx. | Any 12-digit number starting with 013, 014, 015, 017 or 018    |
| 97       | 010xxxxxxxx          | Any 11-digit number starting with 010                          |
| 96       | 02xxxxxxxx           | Any 11-digit number starting with 02                           |
| 95       | 0[3-9]xxxxxxxx       | Any 12-digit number starting with 03, 04, 05, 06, 07, 08 or 09 |
| 94       | 120                  | Number 120.  |
| 93       | 11[0,2-9]            | Number 110, 112, 113, 114, 115, 116, 117, 118 or 119           |
| 92       | 111xx                | Any 5-digit number starting with 111                           |
| 91       | 123xx                | Any 5-digit number starting with 123                           |
| 90       | 95xxx                | Any 5-digit number starting with 95                            |
| 89       | 100xx                | Any 5-digit number starting with 100                           |
| 88       | 1[3-5,7-8]xxxxxxxx   | Any 11-digit number starting with 13, 14, 15, 17 or 18         |
| 87       | [2-3,5-7]xxxxxx      | Any 8-digit number starting with 2, 3, 5, 6 or 7               |

|  |    |              |  |
|--|----|--------------|--|
|  | 86 | 8[1-9]xxxxxx | Any 8-digit number starting with 81, 82, 83, 84, 85, 86, 87, 88 or 89          |
|  | 85 | 80[1-9]xxxxx | Any 8-digit number starting with 801, 802, 803, 804, 805, 806, 807, 808 or 809 |
|  | 84 | 800xxxxxxx   | Any 10-digit number starting with 800  |
|  | 83 | 4[1-9]xxxxxx | Any 8-digit number starting with 41, 42, 43, 44, 45, 46, 47, 48 or 49.         |
|  | 82 | 40[1-9]xxxxx | Any 8-digit number starting with 401, 402, 403, 404, 405, 406, 407, 408 or 409 |
|  | 81 | 400xxxxxxx   | Any 10-digit number starting with 400  |

After configuration, click **Save** to save the above settings into the gateway or click **Close** to cancel the settings.

Click **Modify** in Figure 3-39 to modify the dialing rules. See Figure 3-41 for the dialing rule modification interface. The configuration items on this interface are the same as those on the **Add New Dialing Rule** interface.

Figure 3-41 Modify Dialing Rule

To delete a dialing rule, check the checkbox before the corresponding index in Figure 3-39 and click the '**Delete**' button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all dialing rules at a time, click the **Clear All** button in Figure 3-39.

See Figure 3-42 for the Dialing Rule Configuration interface under the Character mode. You can edit the dialing rule list to add a new one or modify an old one. The exact meaning of each rule element is described on the page.

Standard Mode Character Mode

Dialing Rule

Note: The Dialing Rule contains such fields as Dialing Rule and Description.  
The priority decreases from top to bottom; adjacent fields are separated by a space; Symbol . denotes any string.  
Don't forget to save the configuration after your modification!

400xxxxxx default  
40[1-9]xxxx default  
4[1-9]xxxx default  
800xxxxxx default  
80[1-9]xxxx default  
8[1-9]xxxx default  
[2-3,5-7]xxxxxx default  
1[3-5,7-8]xxxxxxxx default  
100xx default  
95xxx default  
123xx default  
111xx default  
11[0,2-9] default  
120 default  
0[3-9]xxxxxxxxxx default

20 Items Total

Save

Figure 3-42 Dialing Rule Configuration Interface (Character)

### 3.5.10 Dialing Timeout


| Dialing Timeout Info    |             |        |
|-------------------------|-------------|--------|
| Inter Digit Timeout (s) | Description | Modify |
| 6                       | example     |        |

Figure 3-43 Dialing Timeout Info Interface

See Figure 3-43 for the dialing timeout info interface. The table below explains the items shown in the above figure.

| Item                       | Description  |
|----------------------------|--|
| <b>Inter Digit Timeout</b> | Sets the largest interval between two digits of a dialing number. Range of value: 1~10, calculated by s, with the default value of 6. In case your dialing rules do not include ".", the call will fail if there is no digit dialed or no dialing rule matched during this interval; in case your dialing rules include ".", the gateway will wait until this interval ends and match to the dialing rule "." if there is no digit dialed or no other dialing rule matched during this interval. |
| <b>Description</b>         | More information about the configuration item <b>Inter Digit Timeout</b> , such as the reason for adopting the current value.  |

Click **Modify** in Figure 3-43 to modify the dialing timeout info. See Figure 3-44 for the dialing timeout info modification interface. The configuration items on this interface are the same as those on the **Dialing Timeout Info Interface**.

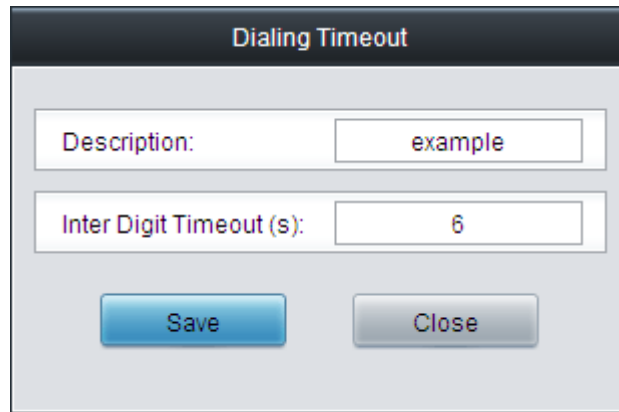


The image shows a 'Dialing Timeout' configuration window. It has a title bar 'Dialing Timeout'. Inside, there are two input fields: 'Description:' with the value 'example' and 'Inter Digit Timeout (s):' with the value '6'. At the bottom, there are two buttons: 'Save' and 'Close'.

Figure 3-44 Modify Dialing Timeout Info

After configuration, click **Save** to save the above settings into the gateway or click **Close** to cancel the settings.

### 3.5.11 Cue Tone

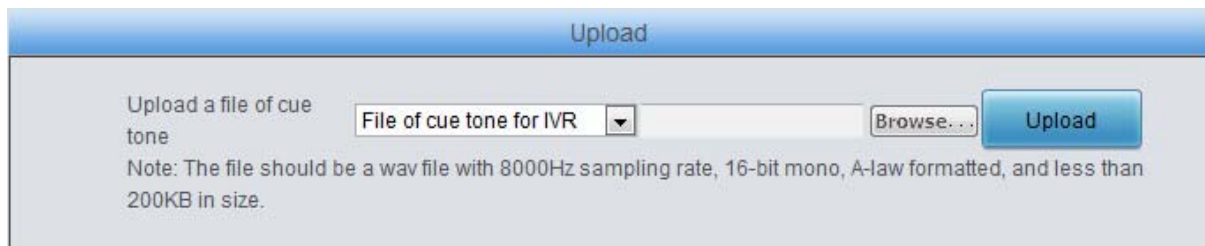

The image shows a 'Cue Tone Upload' interface. It has a title bar 'Upload'. Below the title bar, there is a text label 'Upload a file of cue tone'. To the right of this label is a dropdown menu showing 'File of cue tone for IVR' and a 'Browse...' button. To the right of the 'Browse...' button is an 'Upload' button. Below these elements, there is a note: 'Note: The file should be a wav file with 8000Hz sampling rate, 16-bit mono, A-law formatted, and less than 200KB in size.'

Figure 3-45 Cue Tone Interface

See Figure 3-45 for the Cue Tone interface. The table below explains the items shown in the above figure.

| Item                             | Description  |
|----------------------------------|--|
| <b>Upload a file of cue tone</b> | Uploads a user-defined cue tone file to the gateway. |

Click **Save** to save the above settings into the gateway.



### 3.5.12 Color Ring

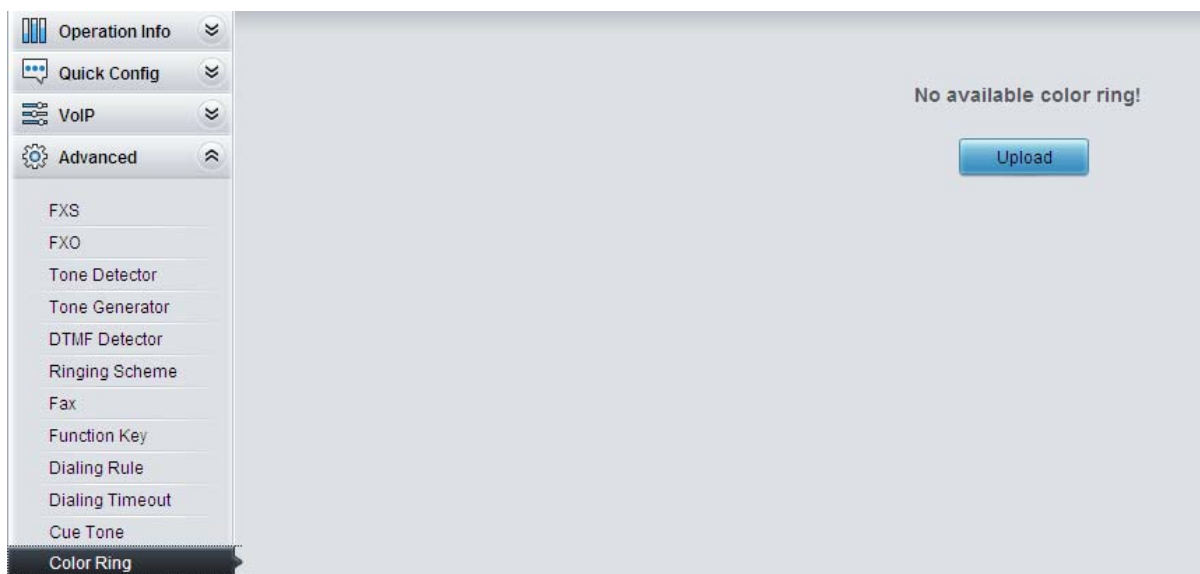


Figure 3-46 Coloring Ring Interface

By default, there is no available color ring on the gateway. See Figure 3-46. Click **Upload** to upload a new color ring manually. Follow Figure 3-47 to upload the required color ring file to the gateway.

Figure 3-47 Color Ring Upload Interface

The table below explains the items shown above:

| Item               | Description  |
|--------------------|--|
| <b>Index</b>       | The unique index of each color ring to be uploaded.            |
| <b>Description</b> | It is user-defined, with the default value of <i>default</i> . |
| <b>Color Ring</b>  | The file of the color Ring to be uploaded.                     |

After configuration, click **Upload** to upload the color ring file to the gateway or click **Return** to cancel the upload. See Figure 3-48 for the Color Ring Management interface after the upload.

| Check                    | Index | Color Ring | Port | Modify |
|--------------------------|-------|------------|------|--------|
| <input type="checkbox"/> | 1     | ringtone1  | ---  |        |

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-48 Color Ring Management Interface

Click **Modify** in Figure 3-48 to modify the configuration of the color ring. See below for the color ring modification interface. The configuration items on this interface are the same as those on the **Color Ring Upload** interface.

Color Ring-Modify

Index: 1

Description: ringtone1

Upload: ☐

Figure 3-49 Color Ring Modification Interface

To delete a color ring, check the checkbox before the corresponding index in Figure 3-48 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all color rings at a time, click the **Clear All** button in Figure 3-49.

### 3.5.13 QoS

QoS

QoS: ☒ Enable

Media Premium QoS: 46

Control Premium QoS: 26

Figure 3-50 Differentiated Services Setting Interface


See Figure 3-50 for the Differentiated Services setting interface. Using this technology, the gateway can meet various application requirements under a limited bandwidth and ensure neither delay nor discard for important services so as to improve its quality of services.

The table below explains the items shown in the above figure.

| Item       | Description   |
|------------|---|
| <b>QoS</b> | Sets whether to enable the QoS differentiated services. By default, it is disabled. |

|                            |   |
|----------------------------|---|
| <b>Media Premium QoS</b>   | Sets the priority of the media premium for QoS. A media premium QoS with a bigger value has a higher priority. The value range is 0~63, with the default value of 46.     |
| <b>Control Premium QoS</b> | Sets the priority of the control premium for QoS. A control premium QoS with a bigger value has a higher priority. The value range is 0~63, with the default value of 26. |

### 3.5.14 Action URL

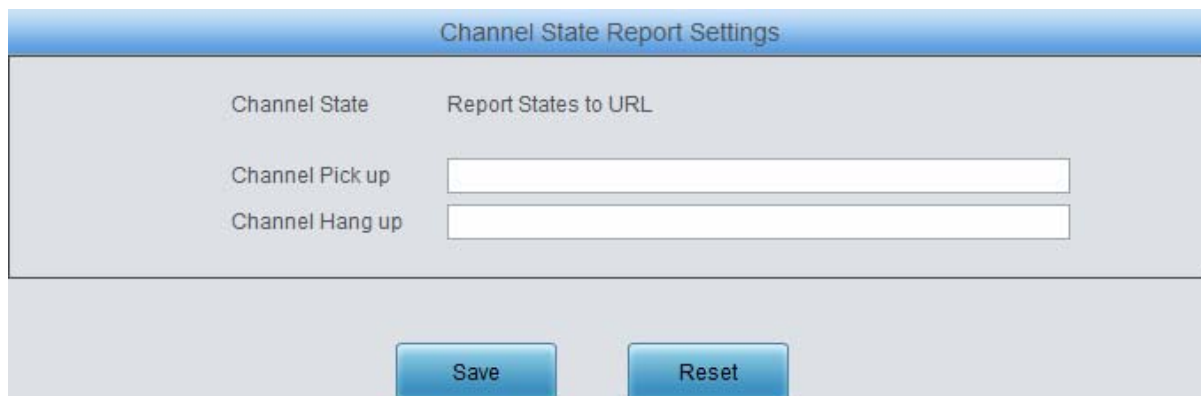

The interface is titled "Channel State Report Settings". It contains two columns: "Channel State" and "Report States to URL". Under "Channel State", there are two labels: "Channel Pick up" and "Channel Hang up". Each label has a corresponding text input field in the "Report States to URL" column. At the bottom of the interface, there are two buttons: "Save" and "Reset".

Figure 3-51 Channel State Report Settings Interface

See Figure 3-51 for the Action URL interface, which is used to designate the server patch to report the on-hook or off-hook state of the FXS channel. You are allowed to designate two different server paths. After setting, the state will be reported to the designated server once any of the FXS channel hangs up or picks up a call. After configuration, click **Save** to save your settings into the gateway or click **Reset** to restore the configurations.

## 3.6 Port Settings

Port Settings includes five parts: **FXS**, **FXO**, **FXO Port Timer**, **Port Group** and **Advanced FXO Settings**. See Figure 3-52.

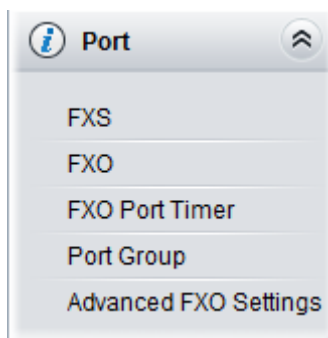


Figure 3-52 Port Settings

### 3.6.1 FXS

| FXS Settings  |      |             |              |               |                      |         |         |          |            |        |              |              |                |            |                  |            |             |   |
|---|------|-------------|--------------|---------------|----------------------|---------|---------|----------|------------|--------|--------------|--------------|----------------|------------|------------------|------------|-------------|---|
| Port  | Type | SIP Account | Display Name | Auto Dial Num | Forbid Outgoing Call | DND     | Forward | FWD Type | FWD Number | OD     | Call Waiting | Reg Status   | Echo Canceller | Color Ring | Color Ring Index | Input Gain | Output Gain | Modify  |
| 1   | FXS  | 8001        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 2   | FXS  | 8002        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 3   | FXS  | 8003        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 4   | FXS  | 8004        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 5   | FXS  | 8005        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 6   | FXS  | 8006        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 7   | FXS  | 8007        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 8   | FXS  | 8008        | ---          | ---           | Disable              | Disable | Disable | ---      | ---        | Enable | Disable      | Unregistered | Enable         | Disable    | ---              | 0          | 0           |  |
| 8 Items Total 16 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total |      |             |              |               |                      |         |         |          |            |        |              |              |                |            |                  |            |             |   |
| Batch Mode  |      |             |              |               |                      |         |         |          |            |        |              |              |                |            |                  |            |             |   |

8 Items Total 16 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Batch Modify

Figure 3-53 FXS Settings Interface

See Figure 3-53 for the FXS settings interface. The list in the above figure shows the feature and properties of each FXS port. Click **Modify** in Figure 3-53 to modify the properties of the corresponding port. See Figure 3-54 for the FXS modification interface.

FXS-Modify

|                                       |  |
|---------------------------------------|--|
| Port                                  | <input type="text" value="1"/>                 |
| Type                                  | <input type="text" value="FXS"/>               |
| Register Port                         | <input type="text" value="Yes"/>               |
| SIP Account                           | <input type="text" value="8001"/>              |
| Display Name                          | <input type="text"/>                           |
| Password                              | <input type="text"/>                           |
| Authentication Username               | <input type="text"/>                           |
| Display Name Preferred                | <input type="checkbox"/> Enable                |
| Server Index                          | <input type="text" value="1:201.123.115.233"/> |
| Auto Dial Number <input type="text"/> |  |
| Wait Time before Auto Dial (s)        | <input type="text" value="0"/>                 |
| Input Gain (dB)                       | <input type="text" value="0"/>                 |
| Output Gain (dB)                      | <input type="text" value="0"/>                 |
| Echo Canceller                        | <input checked="" type="checkbox"/> Enable     |
| Forbid Outgoing Call                  | <input type="checkbox"/> Enable                |
| CID                                   | <input checked="" type="checkbox"/> Enable     |
| Call Waiting                          | <input type="checkbox"/> Enable                |
| DND (Do Not Disturb)                  | <input type="checkbox"/> Enable                |
| Call Forward                          | <input checked="" type="checkbox"/> Enable     |
| Forward Type                          | <input type="text" value="Unconditional"/>     |
| Forward Number                        | <input type="text"/>                           |
| Color Ring                            | <input checked="" type="checkbox"/> Enable     |
| Color Ring Index                      | <input type="text" value="1"/>                 |
| Advanced Configuration                | <input checked="" type="checkbox"/> Enable     |
| Talkback                              | <input checked="" type="checkbox"/> Enable     |
| Bound Number                          | <input type="text"/>                           |

Note: 'Auto Dial Number' goes into effect only if no dialing occurs during 'Wait Time before Auto Dial'.

Figure 3-54 FXS Modification

The table below explains the configuration items on the FXS modification interface.

| Item        | Description  |
|-------------|--|
| <b>Port</b> | Serial number of the FXS port on the device.                         |
| <b>Type</b> | Type of the port on the device (FXS). This item is not configurable. |

|   |   |
|---|---|
| <b>Register Port</b>                                | Sets whether to register the port to the SIP server.<br>When this item is set to <i>No</i> , the item <b>Reg Status</b> on the FXS settings interface (Figure 3-53) shows <i>Unregistered</i> ; when this item is set to <i>Yes</i> , the item <b>Reg Status</b> shows <i>Failed</i> or <i>Registered</i> .   |
| <b>SIP Account</b>                                  | When the port initiates a call to SIP, this item corresponds to the username of SIP. The default SIP account is 80XX among which XX represents the corresponding port number. For example, the default SIP account corresponding to Port 1 is 8001, and that corresponding to Port 8 is 8008.   |
| <b>Display Name</b>                                 | Set the content of the displayname field of the SIP message. If it doesn't set with any value, the displayname field will by default display the content of callerid.   |
| <b>Password</b>                                     | Registration password of the port. To register a port to the SIP server, both items <b>SIP Account</b> and <b>Password</b> must be filled in.   |
| <b>Authentication Username</b>                      | Authentication username of a port, used to register the port to the SIP server when IMS network is enabled.<br><b>Note: This item appears only when IMS Network or Multi-Registrar Server is enabled.</b>   |
| <b>Display Name Preferred</b>                       | In case this feature is enabled and the port group or the whole gateway is registered, if the display name set by the port are different from that set by the port group, the displayname in the sent SIP message will be the one set by the port. In case this feature is disabled, if the port group is registered, the displayname in the sent SIP message will be the display name set by the port group; if the whole gateway is registered, the displayname in the sent SIP message will be the displayname of the gateway. |
| <b>Server Index</b>                                 | The index of the SIP server which will be quoted by the current FXS port.   |
| <b>Auto Dial Number, Wait Time before Auto Dial</b> | The FXS port will dial the <b>Auto Dial Number</b> if there is no dialing operation after pickup within a designated time period (i.e. <b>Wait Time before Auto Dial</b> ).   |
| <b>Input Gain, Output Gain</b>                      | Adjusts the gain of the voice input to/ output from the FXS port. Range of value: -24~12, calculated by dB, with the default value of 0.  |
| <b>Echo Celler</b>                                  | The echo cancellation feature for a call conversation over the FXS channel. By default, this feature is enabled and the effect can reach 128ms.   |
| <b>Forbid Outgoing Call</b>                         | If this feature is enabled, the FXS port will be forbidden to call out. The default setting is <i>disabled</i> .  |
| <b>CID</b>  | CallerID. If this feature is enabled, the FXS port will send the CallerID of the incoming IP call together with the ringing tone to the corresponding station. The default setting is <i>enabled</i> . CallerID displays digits only and will filter out any other characters if exist.   |
| <b>Call Waiting</b>                                 | If this feature is enabled, the FXS port in conversation can accept another call from IP and keep it in the waiting state. Once the current conversation is finished and the station hangs up, the call in the waiting state will ring the station and wait for answer. The default setting is <i>disabled</i> .  |
| <b>DND</b>  | Do Not Disturb. If this feature is enabled, the FXS port will reply the 403 message to reject all incoming calls. The default setting is <i>disabled</i> .  |

| <b>Call Forward</b>     | The automatic call forward feature for the FXS port. Once this feature is enabled, the FXS port will forward incoming IP calls according to <b>FWD Type</b> . Note: To enable this feature, do not put the FXS port into a port group with other ports. The default setting is <i>disabled</i> .   |        |             |                      |   |             |   |                 |  |
|-------------------------|--|--------|-------------|----------------------|---|-------------|---|-----------------|--|
| <b>FWD Type</b>         | <p>Forward conditions for the FXS port to forward incoming IP calls. The optional values are:</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td><i>Unconditional</i></td><td>The FXS port will forward all incoming IP calls to the preset <b>FWD Num</b> immediately when it receives them.</td></tr> <tr> <td><i>Busy</i></td><td>The FXS port will forward incoming IP calls to the preset <b>FWD Num</b> if it is busy upon receiving them.</td></tr> <tr> <td><i>No Reply</i></td><td>The FXS port will forward incoming IP calls to the preset <b>FWD Num</b> if the corresponding station does not answer them in a designated time period (i.e. <b>Time for No Reply Forward</b>). Only when this forward condition is selected does the configuration item <b>Time for No Reply Forward</b> become valid.</td></tr> </tbody> </table> <p>This item is valid only when <b>Call Forward</b> is set to <i>Enable</i>.</p> | Option | Description | <i>Unconditional</i> | The FXS port will forward all incoming IP calls to the preset <b>FWD Num</b> immediately when it receives them. | <i>Busy</i> | The FXS port will forward incoming IP calls to the preset <b>FWD Num</b> if it is busy upon receiving them. | <i>No Reply</i> | The FXS port will forward incoming IP calls to the preset <b>FWD Num</b> if the corresponding station does not answer them in a designated time period (i.e. <b>Time for No Reply Forward</b> ). Only when this forward condition is selected does the configuration item <b>Time for No Reply Forward</b> become valid. |
| Option                  | Description  |        |             |                      |   |             |   |                 |  |
| <i>Unconditional</i>    | The FXS port will forward all incoming IP calls to the preset <b>FWD Num</b> immediately when it receives them.  |        |             |                      |   |             |   |                 |  |
| <i>Busy</i>             | The FXS port will forward incoming IP calls to the preset <b>FWD Num</b> if it is busy upon receiving them.  |        |             |                      |   |             |   |                 |  |
| <i>No Reply</i>         | The FXS port will forward incoming IP calls to the preset <b>FWD Num</b> if the corresponding station does not answer them in a designated time period (i.e. <b>Time for No Reply Forward</b> ). Only when this forward condition is selected does the configuration item <b>Time for No Reply Forward</b> become valid.   |        |             |                      |   |             |   |                 |  |
| <b>FWD Num</b>          | The number to which the incoming IP call is forwarded. If the <b>Call Forward</b> feature is enabled, this item can not be left empty.   |        |             |                      |   |             |   |                 |  |
| <b>Color Ring</b>       | <p>Sets whether to enable the color ring feature or not, with the default setting of being <i>disabled</i>.</p> <p><b>Note:</b> Only when there are available color rings will this item appear.</p>   |        |             |                      |   |             |   |                 |  |
| <b>Color Ring Index</b> | The index of the color ring which will be quoted by the current FXS port.  |        |             |                      |   |             |   |                 |  |
| <b>Talkback</b>         | <p>With this feature enabled and a number bound, the port can talkback to its bound number. That is, they can start a call with each other as soon as picking up the phone. The default setting is <i>disabled</i>.</p> <p><b>Note: This feature is only used in the case of channel registration.</b></p>   |        |             |                      |   |             |   |                 |  |
| <b>Bound Number</b>     | Sets the bound number for talkback.  |        |             |                      |   |             |   |                 |  |

After configuration, click **Modify** to save the settings into the gateway, click **Reset** to restore the configurations, or click **Cancel** to cancel the settings.

Or you can click **Batch** to modify several pieces of FXS settings at the same time. See Figure 3-55 below for the FXS batch modification interface. The configuration items on this interface are the same as those on the FXS modification interface (Figure 3-54).



FXS-Batch Modify

|   |   |
|---|---|
| Starting Port                           | <input style="width: 100%;" type="text" value="1"/>                 |
| Ending Port                             | <input style="width: 100%;" type="text" value="4"/>                 |
| Register Port                           | <input style="width: 100%;" type="text" value="Yes"/>               |
| Starting SIP Account                    | <input style="width: 100%;" type="text"/>                           |
| Starting Display Name                   | <input style="width: 100%;" type="text"/>                           |
| Starting Authentication Password        | <input style="width: 100%;" type="text"/>                           |
| Starting Authentication Username        | <input style="width: 100%;" type="text"/>                           |
| Display Name Preferred                  | <input type="checkbox"/> Enable                                     |
| Server Index                            | <input style="width: 100%;" type="text" value="1.201.123.115.233"/> |
| SIP Account Batch Rule                  | <input style="width: 100%;" type="text" value="Increase"/>          |
| SIP Account Batch Step Size             | <input style="width: 100%;" type="text" value="1"/>                 |
| Display Name Batch Rule                 | <input style="width: 100%;" type="text" value="Increase"/>          |
| Display Name Batch Step Size            | <input style="width: 100%;" type="text" value="1"/>                 |
| Authentication Password Batch Rule      | <input style="width: 100%;" type="text" value="Increase"/>          |
| Authentication Password Batch Step Size | <input style="width: 100%;" type="text" value="1"/>                 |
| Authentication Username Batch Rule      | <input style="width: 100%;" type="text" value="Increase"/>          |
| Authentication Username Batch Step Size | <input style="width: 100%;" type="text" value="1"/>                 |
| Auto Dial Number                        | <input checked="" type="checkbox"/> Enable                          |
| Auto Dial Number                        | <input style="width: 100%;" type="text"/>                           |
| Wait Time before Auto Dial (s)          | <input style="width: 100%;" type="text" value="0"/>                 |
| Input Gain (dB)                         | <input style="width: 100%;" type="text" value="0"/>                 |
| Output Gain (dB)                        | <input style="width: 100%;" type="text" value="0"/>                 |
| CID                                     | <input checked="" type="checkbox"/> Enable                          |
| Echo Canceller                          | <input checked="" type="checkbox"/> Enable                          |
| Forbid Outgoing Call                    | <input type="checkbox"/> Enable                                     |
| Call Waiting                            | <input type="checkbox"/> Enable                                     |
| DND (Do Not Disturb)                    | <input type="checkbox"/> Enable                                     |
| Call Forward                            | <input checked="" type="checkbox"/> Enable                          |
| Forward Type                            | <input style="width: 100%;" type="text" value="Unconditional"/>     |
| Forward Number                          | <input style="width: 100%;" type="text"/>                           |
| Color Ring                              | <input checked="" type="checkbox"/> Enable                          |
| Color Ring Index                        | <input style="width: 100%;" type="text" value="1"/>                 |

Note: 'Auto Dial Number' goes into effect only if no dialing occurs during 'Wait Time before Auto Dial'.

Figure 3-55 FXS Batch Modification

Some configuration items on this interface are the same as those on the **FXS Modification Interface**. The others are described in the table below.

| Item   | Description  |
|--|--|
| <b>Starting Port</b>                           | The starting serial number of the FXS port on the device in the batch setting.                                     |
| <b>Ending Port</b>                             | The ending serial number of the FXS port on the device in the batch setting.                                       |
| <b>Starting SIP Account</b>                    | The starting SIP account in the batch setting.   |
| <b>Starting Display Name</b>                   | The starting displayname in the batch setting.   |
| <b>Starting Authentication Password</b>        | The starting authentication password in the batch setting.   |
| <b>Starting Authentication Username</b>        | The starting authentication username in the batch setting.   |
| <b>SIP Account Batch Rule</b>                  | The rule for batch setting the SIP account, including <b>Increase</b> and <b>Decrease</b> two options.             |
| <b>SIP Account Batch Step Size</b>             | Sets the increase or decrease step size of the SIP account in the batch setting.                                   |
| <b>Authentication Password Batch Rule</b>      | The rule for batch setting the authentication password, including <b>Increase</b> and <b>Decrease</b> two options. |
| <b>Authentication Password Batch Step Size</b> | Sets the increase or decrease step size of the authentication password in the batch setting.                       |
| <b>Authentication Username Batch Rule</b>      | The rule for batch setting the authentication username, including <b>Increase</b> and <b>Decrease</b> two options. |
| <b>Authentication Username Batch Step Size</b> | Sets the increase or decrease step size of the authentication username in the batch setting.                       |

After configuration, click **Modify** to save the settings into the gateway, or click **Cancel** to cancel the settings.

### 3.6.2 FXO



| Port | Type | SIP Account | Display Name | Connection Method                    | Bound Number | Forbid Outgoing Call | Caller ID Detection | Reg Status   | Echo Cancellation | Potentially Reversal Detection | Input Gain at Offhook | Output Gain at Offhook | Input Gain at Onhook | Output Gain at Onhook | Modify |
|------|------|-------------|--------------|--------------------------------------|--------------|----------------------|---------------------|--------------|-------------------|--------------------------------|-----------------------|------------------------|----------------------|-----------------------|--------|
| 9    | FXO  | 8009        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |
| 10   | FXO  | 8010        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |
| 11   | FXO  | 8011        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |
| 12   | FXO  | 8012        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |
| 13   | FXO  | 8013        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |
| 14   | FXO  | 8014        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |
| 15   | FXO  | 8015        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |
| 16   | FXO  | 8016        | ---          | Two Stages Dialing for Incoming Call | ---          | Disable              | Enable              | Unregistered | Enable            | Disable                        | 0                     | 0                      | 0                    | 0                     |        |

Figure 3-56 FXO Settings Interface

See Figure 3-56 for the FXO Settings interface. The list in the above figure shows the feature and properties of each FXO port. Click **Modify** in Figure 3-56 to modify the properties of the corresponding port. See Figure 3-57 for the FXO Modification interface.

Figure 3-57 FXO Modification

The table below explains the configuration items on the FXO modification interface.

| Item                 | Description   |
|----------------------|---|
| <b>Port</b>          | Serial number of the FXO port on the device.  |
| <b>Type</b>          | Type of the port on the device (FXO). This item is not configurable.  |
| <b>Register Port</b> | Sets whether to register the port to the SIP server.<br>When this item is set to <i>No</i> , the item <b>Reg Status</b> on the FXO settings interface (Figure 3-56) shows <i>Unregistered</i> ; when this item is set to <i>Yes</i> , the item <b>Reg Status</b> shows <i>Failed</i> or <i>Registered</i> . |
| <b>SIP Account</b>   | Registration account of an FXO port. The default SIP account is 80XX among which XX represents the corresponding port number. For example, the default SIP account corresponding to Port 1 is 8001, and that corresponding to Port 32 is 8032.  |
| <b>Display Name</b>  | Set the content of the displayname field of the SIP message. If it doesn't set with any value, the displayname field will by default display the content of callerid.   |
| <b>Password</b>      | Registration password of the port. To register a port to the SIP server, both items <b>SIP Account</b> and <b>Password</b> must be filled in.   |

| <b>Authentication Username</b>                                     | Authentication username of a port, used to register the port to the SIP server when IMS network is enabled.<br><b>Note: This item appears only when IMS Network or Multi-Registrar Server is enabled.</b>  |        |             |                       |   |  |  |
|--|--|--------|-------------|-----------------------|---|--|--|
| <b>Display Name Preferred</b>                                      | In case this feature is enabled and the port group or the whole gateway is registered, if the display names set by the port are different from that set by the port group, the displayname in the sent SIP message will be the one set by the port. In case this feature is disabled, if the port group is registered, the displayname in the sent SIP message will be the display name set by the port group; if the whole gateway is registered, the displayname in the sent SIP message will be the displayname of the gateway.   |        |             |                       |   |  |  |
| <b>Server Index</b>  | The index of the SIP server which will be quoted by the current FXO port.  |        |             |                       |   |  |  |
| <b>Connection Method</b>   | <p>FXO connection methods include:</p> <table border="1"> <thead> <tr> <th>Option</th><th>Description</th></tr> </thead> <tbody> <tr> <td><i>Static Binding</i></td><td>Bind the number which corresponds to an FXS port to an FXO port. The number will be listed in the Bound Number column. This helps to achieve the corresponding binding between an FXO port and an FXS port (two-way).</td></tr> <tr> <td><i>Two Stages Dialing Mode (default)</i></td><td>Under this mode, an incoming call from an FXO port will go into the IVR system. Then IVR will play a speech prompt "Please dial the extension number". If you fail to input the correct target station number before IVR finishes the third repeat of the prompt, the FXO will hang up the call automatically; otherwise, the corresponding station will ring.</td></tr> </tbody> </table> <p><b>Note:</b> Both items Connection Method and Bound Number will be hidden if the SIP Station feature is enabled on the SIP Settings interface.</p> | Option | Description | <i>Static Binding</i> | Bind the number which corresponds to an FXS port to an FXO port. The number will be listed in the Bound Number column. This helps to achieve the corresponding binding between an FXO port and an FXS port (two-way). | <i>Two Stages Dialing Mode (default)</i> | Under this mode, an incoming call from an FXO port will go into the IVR system. Then IVR will play a speech prompt "Please dial the extension number". If you fail to input the correct target station number before IVR finishes the third repeat of the prompt, the FXO will hang up the call automatically; otherwise, the corresponding station will ring. |
| Option   | Description  |        |             |                       |   |  |  |
| <i>Static Binding</i>  | Bind the number which corresponds to an FXS port to an FXO port. The number will be listed in the Bound Number column. This helps to achieve the corresponding binding between an FXO port and an FXS port (two-way).  |        |             |                       |   |  |  |
| <i>Two Stages Dialing Mode (default)</i>                           | Under this mode, an incoming call from an FXO port will go into the IVR system. Then IVR will play a speech prompt "Please dial the extension number". If you fail to input the correct target station number before IVR finishes the third repeat of the prompt, the FXO will hang up the call automatically; otherwise, the corresponding station will ring.   |        |             |                       |   |  |  |
| <b>Input Gain at Offhook/Onhook, Output Gain at Offhook/Onhook</b> | Adjusts the gain of the voice input to/ output from the FXO port when it is offhook or onhook. Range of value: -24~12, calculated by dB, with the default value of 0.  |        |             |                       |   |  |  |
| <b>Echo Celler</b>   | The echo cancellation feature for a call conversation over the FXO channel. By default, this feature is enabled and the effect can reach 128ms.  |        |             |                       |   |  |  |
| <b>Forbid Outgoing Call</b>  | If this feature is enabled, the FXO port will be forbidden to call out. The default setting is <i>disabled</i> .   |        |             |                       |   |  |  |
| <b>Caller ID Detection</b>   | If this feature is enabled, the FXO port will detect the caller IDs from the incoming calls. The default setting is <i>enabled</i> .   |        |             |                       |   |  |  |
| <b>Polarity Reversal Detection</b>                                 | Once this feature is enabled, only when the FXO port detects the polarity reversal signal will the corresponding channel go into the talking state. The default setting is <i>disabled</i> . Note: This feature and the <b>Two Stages Dialing</b> feature cannot be enabled at the same time.  |        |             |                       |   |  |  |

After configuration, click **Modify** to save the settings into the gateway, click **Reset** to restore the configurations, or click **Cancel** to cancel the settings.

Or you can click **Batch** to modify several pieces of FXO settings at the same time. See Figure

3-58 below for the FXO Batch Modification interface. The configuration items on this interface are the same as those on the FXO Modification interface (Figure 3-57).

Figure 3-58 FXO Batch Modification

Some configuration items on this interface are the same as those on the **FXO Modification Interface**. The others are described in the table below.

| Item                         | Description  |
|------------------------------|--|
| <b>Starting Port</b>         | The starting serial number of the FXO port on the device in the batch setting. |
| <b>Ending Port</b>           | The ending serial number of the FXO port on the device in the batch setting.   |
| <b>Starting SIP Account</b>  | The starting SIP account in the batch setting.                                 |
| <b>Starting Display Name</b> | The starting displayname in the batch setting.                                 |

|  |  |
|--|--|
| <b>Starting Authentication Password</b>        | The starting authentication password in the batch setting.   |
| <b>Starting Authentication Username</b>        | The starting authentication username in the batch setting.   |
| <b>SIP Account Batch Rule</b>                  | The rule for batch setting the SIP account, including <b>Increase</b> and <b>Decrease</b> two options.             |
| <b>SIP Account Batch Step Size</b>             | Sets the increase or decrease step size of the SIP account in the batch setting.                                   |
| <b>Authentication Password Batch Rule</b>      | The rule for batch setting the authentication password, including <b>Increase</b> and <b>Decrease</b> two options. |
| <b>Authentication Password Batch Step Size</b> | Sets the increase or decrease step size of the authentication password in the batch setting.                       |
| <b>Authentication Username Batch Rule</b>      | The rule for batch setting the authentication username, including <b>Increase</b> and <b>Decrease</b> two options. |
| <b>Authentication Username Batch Step Size</b> | Sets the increase or decrease step size of the authentication username in the batch setting.                       |

After configuration, click **Save** to save the settings into the gateway, or click **Cancel** to cancel the settings.

### 3.6.3 FXO Port Timer

| FXO Port Timer  |      |      |      |                       |                       |                |                 |   |
|---|------|------|------|-----------------------|-----------------------|----------------|-----------------|---|
| Check   | Port | Type | Unit | Max Time(Single Call) | Max Time(Total Calls) | Used Call Time | Clear Call Time | Modify  |
| <input type="checkbox"/>  | 9    | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="checkbox"/>  | 10   | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="checkbox"/>  | 11   | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="checkbox"/>  | 12   | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="checkbox"/>  | 13   | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="checkbox"/>  | 14   | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="checkbox"/>  | 15   | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="checkbox"/>  | 16   | FXO  | 60s  | Unlimited             | Unlimited             | ---            | ---             |  |
| <input type="button" value="Check All"/> <input type="button" value="Uncheck All"/> <input type="button" value="Clear"/> <input type="button" value="refresh"/> |      |      |      |                       |                       |                |                 |   |

Figure 3-59 FXO Port Timer Interface

See Figure 3-59 for the FXO Port Timer interface, which displays such information as the max call time limit for a single call, the max call time limit for the total calls on each FXO port, as well as the timer clear cycle. Click Modify for each port in Figure 3-59 to modify the timer settings. See Figure 3-60.



Timing

Port: 9

Unit: 60s

Time Limit on a Single Call: ☐ Disable ☒ Enable  
Max Call Time: 0

Time Limit on Total Calls: ☐ Disable ☒ Enable  
Max Call Time: 0

Timing Cycle: Month  
Clear: 1st 00 00  
☐ Set Spent Call Time

SIP Code Reply: 486

Apply to Other Ports: ☒ Port ☐ Port Group  
☒ 09 ☐ 10 ☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16

Note: The Port Timer feature will get valid only when the Polarity Reversal service is enabled.

Modify Return

Figure 3-60 FXO Port Timing Setting Interface

The table below explains the configuration items shown in the above figure:

| Item                               | Description   |
|------------------------------------|---|
| <b>Port</b>                        | Serial number of the FXO port on the device.  |
| <b>Unit</b>                        | Sets the timing unit for the call. The actual call time will be calculated as the integral multiple of the setting time. Take an example: supposed the setting time is 30s and the actual call time is 72s, thus, the gateway will consider the call time as 90s. |
| <b>Time Limit on a Single Call</b> | Sets whether to enable the time limit on a single call.   |
| <b>Max Call Time</b>               | Sets the maximum time length of a call.   |
| <b>Time Limit on Total Calls</b>   | Sets whether to enable the time limit on all calls at the port.   |
| <b>Timing Cycle</b>                | Sets the time count cycle for the port.   |
| <b>Clear</b>                       | Sets the time node to clear the time count.   |
| <b>Set Spent Call Time</b>         | Sets the spent call time length of the port.  |
| <b>SIP Code Reply</b>              | Once the spent call time reaches the total time limit, the FXO port will not be able to make outgoing calls and the gateway will reply the designated SIP code to the IP side.  |
| <b>Apply to Other Ports</b>        | Sets whether to apply above settings to other ports or port groups.   |

Click **Modify** to save the settings into the gateway, click **Return** to cancel the settings.



### 3.6.4 Port Group

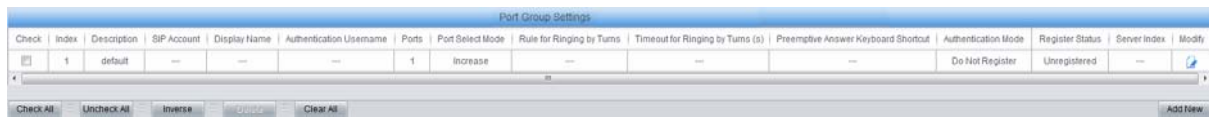


Figure 3-61 Port Group Settings Interface

See Figure 3-61 for the port group settings interface. A port group is a set containing single or multiple ports, used to specify such properties as **Port Selection** and **Authentication Mode** for all the ports in it. A new port group can be added by the **Add New** button on the bottom right corner of the above list. See Figure 3-62 for the port group adding interface. Note that a port which has been occupied by one port group cannot be chosen by others.

Figure 3-62 Add New Port Group

The table below explains the items in the above figure.

| Item               | Description   |
|--------------------|---|
| <b>Index</b>       | The unique index of each port group, which is mainly used in the configuration of routing rules and number manipulation rules to correspond to port groups. |
| <b>Description</b> | More information about each port group, with default value of <i>default</i> .  |

| <b>Register Port Group</b>       | To register the port group to the SIP server. Only when this configuration item is set to Yes can you see the configuration items <b>SIP Account</b> and <b>Password</b> .  |        |             |                                  |  |                         |  |                            |  |                      |  |
|----------------------------------|---|--------|-------------|----------------------------------|--|-------------------------|--|----------------------------|--|----------------------|--|
| <b>SIP Account</b>               | When the port group initiates a call to SIP, this item corresponds to the username of SIP.  |        |             |                                  |  |                         |  |                            |  |                      |  |
| <b>Display Name</b>              | Set the content of the displayname field of the SIP message. If it doesn't set with any value, the displayname field will by default display the content of callerid.   |        |             |                                  |  |                         |  |                            |  |                      |  |
| <b>Password</b>                  | Registration password of the port group. To register the port group to the SIP server, both configuration items <b>SIP Account</b> and <b>Password</b> should be filled in.   |        |             |                                  |  |                         |  |                            |  |                      |  |
| <b>Authentication Username</b>   | Authentication username of a port, used to register the port to the SIP server when IMS network is enabled.<br><b>Note: This item appears only when IMS Network or Multi-Registrar Server is enabled.</b>   |        |             |                                  |  |                         |  |                            |  |                      |  |
| <b>Server Index</b>              | The index of the sip server which will be quoted by the current FXS port.   |        |             |                                  |  |                         |  |                            |  |                      |  |
| <b>Authentication Mode</b>       | <p>Sets the way for SIP to make outgoing calls (Tel→IP) on the gateway.</p> <table> <tr> <th>Option</th><th>Description</th></tr> <tr> <td><i>Do Not Register (default)</i></td><td>SIP initiates a call in a point-to-point mode.</td></tr> <tr> <td><i>Register Gateway</i></td><td>SIP initiates a call with the registered SIP account and password of the whole gateway. (Refer to <a href="#">3.4.1 SIP</a> for gateway registration.)</td></tr> <tr> <td><i>Register Port Group</i></td><td>SIP initiates a call with the registered SIP account and password of the port group.</td></tr> <tr> <td><i>Register Port</i></td><td>SIP initiates a call with the registered SIP account and password of the port.</td></tr> </table> | Option | Description | <i>Do Not Register (default)</i> | SIP initiates a call in a point-to-point mode. | <i>Register Gateway</i> | SIP initiates a call with the registered SIP account and password of the whole gateway. (Refer to <a href="#">3.4.1 SIP</a> for gateway registration.) | <i>Register Port Group</i> | SIP initiates a call with the registered SIP account and password of the port group. | <i>Register Port</i> | SIP initiates a call with the registered SIP account and password of the port. |
| Option                           | Description   |        |             |                                  |  |                         |  |                            |  |                      |  |
| <i>Do Not Register (default)</i> | SIP initiates a call in a point-to-point mode.  |        |             |                                  |  |                         |  |                            |  |                      |  |
| <i>Register Gateway</i>          | SIP initiates a call with the registered SIP account and password of the whole gateway. (Refer to <a href="#">3.4.1 SIP</a> for gateway registration.)  |        |             |                                  |  |                         |  |                            |  |                      |  |
| <i>Register Port Group</i>       | SIP initiates a call with the registered SIP account and password of the port group.  |        |             |                                  |  |                         |  |                            |  |                      |  |
| <i>Register Port</i>             | SIP initiates a call with the registered SIP account and password of the port.  |        |             |                                  |  |                         |  |                            |  |                      |  |
| <b>Register Status</b>           | Registration status of the port group. When <b>Register Port Group</b> is set to No, the value of this item is <i>Unregistered</i> ; when <b>Register Port Group</b> is set to Yes, the value of this item may be <i>Failed</i> or <i>Registered</i> .  |        |             |                                  |  |                         |  |                            |  |                      |  |

| <b>Port Select Mode</b>                    | When the port group receives a call, it will choose a port based on the select mode set by this configuration item to ring or to connect. The optional values and their corresponding meanings are described in the table below.  |   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
|--|---|---|-------------|---------------------------|--|-----------------|---|------------------------|--|------------------------|---|----------------------|---|-------------------------|--|
|  | <table><tr><th>Option</th><th>Description</th></tr><tr><td><i>Increase (default)</i></td><td>Search for an idle port in the ascending order of the port number, starting from the minimum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Decrease</i></td><td>Search for an idle port in the descending order of the port number, starting from the maximum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Cyclic Increase</i></td><td>Provided Port N is the available port found last time. Search for an idle port in the ascending order of the port number, starting from Port N+1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Cyclic Decrease</i></td><td>Provided Port N is the available port found last time. Search for an idle port in the descending order of the port number, starting from Port N-1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.</td></tr><tr><td><i>Group Ringing</i></td><td>Ring all the idle FXS ports in this port group.</td></tr><tr><td><i>Ringing by Turns</i></td><td>Ring the ports in this port group according to the <i>Rule for Ringing by Turns</i> which can be user-defined. Refer to the format of the rule in Figure 3-62. By default, the ringing will be carried out in the ascending order of the port number. <i>Timeout for Ringing by Turns</i> is used to set the overtime for ringing. Range of value: 15~60, calculated by s, with the default value of 20.</td></tr></table> | Option  | Description | <i>Increase (default)</i> | Search for an idle port in the ascending order of the port number, starting from the minimum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state. | <i>Decrease</i> | Search for an idle port in the descending order of the port number, starting from the maximum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state. | <i>Cyclic Increase</i> | Provided Port N is the available port found last time. Search for an idle port in the ascending order of the port number, starting from Port N+1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state. | <i>Cyclic Decrease</i> | Provided Port N is the available port found last time. Search for an idle port in the descending order of the port number, starting from Port N-1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state. | <i>Group Ringing</i> | Ring all the idle FXS ports in this port group. | <i>Ringing by Turns</i> | Ring the ports in this port group according to the <i>Rule for Ringing by Turns</i> which can be user-defined. Refer to the format of the rule in Figure 3-62. By default, the ringing will be carried out in the ascending order of the port number. <i>Timeout for Ringing by Turns</i> is used to set the overtime for ringing. Range of value: 15~60, calculated by s, with the default value of 20. |
|  | Option  | Description   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
|  | <i>Increase (default)</i>   | Search for an idle port in the ascending order of the port number, starting from the minimum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.  |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
|  | <i>Decrease</i>   | Search for an idle port in the descending order of the port number, starting from the maximum. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
|  | <i>Cyclic Increase</i>  | Provided Port N is the available port found last time. Search for an idle port in the ascending order of the port number, starting from Port N+1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state.  |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
|  | <i>Cyclic Decrease</i>  | Provided Port N is the available port found last time. Search for an idle port in the descending order of the port number, starting from Port N-1. If no match is found, search repeatedly until finding a port which is allowed to enter the call waiting state. |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
| <i>Group Ringing</i>                       | Ring all the idle FXS ports in this port group.   |   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
| <i>Ringing by Turns</i>                    | Ring the ports in this port group according to the <i>Rule for Ringing by Turns</i> which can be user-defined. Refer to the format of the rule in Figure 3-62. By default, the ringing will be carried out in the ascending order of the port number. <i>Timeout for Ringing by Turns</i> is used to set the overtime for ringing. Range of value: 15~60, calculated by s, with the default value of 20.  |   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
| <b>Preemptive Answer Keyboard Shortcut</b> | <p>When a channel in a port group is ringing, another channel in the same port group can press the keyboard shortcut set by this item to transfer the call from the ringing channel to the current channel.</p> <p><b>Note:</b> This item will become invalid if the gateway works under the port select mode <i>Group Ringing</i> or <i>Ringing by Turns</i>.</p>  |   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
| <b>Port Reused by Multiple Groups</b>      | Once this feature is enabled, a port can be added to different port groups.   |   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |
| <b>Port</b>                                | <p>The ports in the port group. If the checkbox before a port is grey, it indicates that the port is not available or has been occupied. Once the feature “Port Reused by Multiple Groups” is enabled, a port which has been occupied is still available for other port groups. All selected ports for a port group will be displayed in the <b>Ports</b> column in Figure 3-61. Note: When a port group contains multiple ports, the automatic call forward feature is invalid.</p>  |   |             |                           |  |                 |   |                        |  |                        |   |                      |   |                         |  |

After configuration, click **Save** to save the settings into the gateway, click **Reset** to restore the configurations, or click **Cancel** to cancel the settings. **Check All** means to select all available ports on the current page; **Inverse** means to uncheck the selected items and check the unselected. **Check All FXO Ports** means to select all available FXO ports on the current page; **Check All FXS Ports** means to select all available FXS ports on the current page.

Click **Modify** at the end of the list in **Port Group Settings Interface** to modify the properties of a port group. See Figure 3-63 for the port group modification interface. The configuration items on this interface are the same as those on the **Add New Port Group** interface.

**Port Group-Modify**

Index: 1

Description: default

Register Port: Yes

SIP Account:

Display Name:

Password:

Authentication Username: -1

Server Index: 1:201.123.115.233

Authentication Mode: Do Not Register

Port Select Mode: Increase

Preemptive Answer Keyboard Shortcut:

Port Reused by Multiple Groups: ☐

Port:

|   |   |                                       |                                       |
|---|---|---------------------------------------|---------------------------------------|
| <input checked="" type="checkbox"/> Port 1(FXS) | <input checked="" type="checkbox"/> Port 2(FXS) | <input type="checkbox"/> Port 3(FXS)  | <input type="checkbox"/> Port 4(FXS)  |
| <input type="checkbox"/> Port 5(FXS)            | <input type="checkbox"/> Port 6(FXS)            | <input type="checkbox"/> Port 7(FXS)  | <input type="checkbox"/> Port 8(FXS)  |
| <input type="checkbox"/> Port 9(FXO)            | <input type="checkbox"/> Port 10(FXO)           | <input type="checkbox"/> Port 11(FXO) | <input type="checkbox"/> Port 12(FXO) |
| <input type="checkbox"/> Port 13(FXO)           | <input type="checkbox"/> Port 14(FXO)           | <input type="checkbox"/> Port 15(FXO) | <input type="checkbox"/> Port 16(FXO) |

Figure 3-63 Modify Port Group

To delete a port group, check the checkbox before the corresponding index in Figure 3-61 and click the '**Delete**' button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all port groups at a time, click the **Clear All** button in Figure 3-61.

### 3.6.5 Advanced FXO Settings

Advanced FXO Settings

**Mailbox Settings**

Mailbox Account  
Password  
Outgoing(SMTP)  
SSL  
Recipient  
Subject  
Content

☐  
  

Warning: gateway port disconn  
gateway:[devinfo],port[port]  
disconnection

Port

Note:1, Multiple recipients must be separated by ";"

2, In subject and content:

2.1, [devinfo] represents the device information i.e. device type and serial number.

2.2, [port] indicates the port number.

**FXO Off-line Alarm**

Port

☐ Port 1(FXS)

☐ Port 2(FXS)

☐ Port 3(FXS)

☐ Port 4(FXS)

☐ Port 5(FXS)

☐ Port 6(FXS)

☐ Port 7(FXS)

☐ Port 8(FXS)

☐ Port 9(FXO)

☐ Port 10(FXO)

☐ Port 11(FXO)

☐ Port 12(FXO)

☐ Port 13(FXO)

☐ Port 14(FXO)

☐ Port 15(FXO)

☐ Port 16(FXO)

**Blacklist of FXO Incoming Calls**

Blacklist  
Processing Mode  
Hang-up Delay (ms)

Hang up after pick-u ▼

Note:1, Multiple blacklists must be separated by ";"

2, The "Caller ID Detection" feature should be enabled for the port to activate the blacklist feature.

Figure 3-64 Advanced FXO Settings Interface

See Figure 3-64 for the Advanced FXO Settings interface. The table below explains the configuration items on the Email Setting interface.

SMG-C Series Analog Gateway User Manual (Version 1.7.1)

Page 68

| Item                             | Description   |
|----------------------------------|---|
| <b>Mailbox Account, Password</b> | Sets the account and password of the mailbox.   |
| <b>Outgoing (SMTP), Port</b>     | Sets the server address and port for Email sending.   |
| <b>SSL</b>                       | Sets whether to encrypt the sending/receiving mails via SSL.  |
| <b>Recipient</b>                 | Sets the address of the recipient.  |
| <b>Subject</b>                   | Sets the mail subject.  |
| <b>Content</b>                   | Sets the mail content.  |
| <b>FXO Off-line Alarm</b>        | After selecting the ports, the gateway will send the alarm email when the selected ports are off-line.  |
| <b>Blacklist of FXO Incoming</b> | Sets the blacklist of the FXO incoming calls.   |
| <b>Processing Mode</b>           | Sets the processing mode for the blacklist, including two options: Hang up after pick-up and Hang up after ringing. The default value is <i>Hang up after pick-up</i> . |
| <b>Hang-up Delay</b>             | Sets the delay to hang up the call after the pick-up.   |

After configuration, click **Save** to save the settings into the gateway or click **Reset** to reset the settings.

## 3.7 Route Settings

Route Settings is used to specify the routing rules for calls on two directions: IP→Tel and Tel→IP. See Figure 3-65.

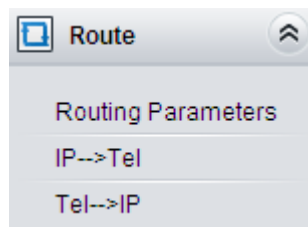


Figure 3-65 Route Settings

### 3.7.1 Routing Parameters

Figure 3-66 Routing Parameters Configuration Interface

See Figure 3-66 for the routing parameters configuration interface. On this interface, you can set the routing rules for calls respectively on two directions IP→Tel and Tel→IP to be routing before or



after number manipulation. The default value is *Route before Number Manipulate*. The gateway will send the option message to detect whether the TEL->IP routing is valid or not after setting the Route Detection Cycle. If the remote address doesn't respond this option message within the set cycle, this routing will be regarded as invalid and the outgoing calls won't be routed to this TEL->IP routing.

After configuration, click **Save** to save the above settings into the gateway.

### 3.7.2 IP to Tel



Figure 3-67 IP->Tel Routing Rule Configuration Interface (Standard)

See Figure 3-67 for the IP->Tel routing rule configuration interface. By default, there is no available routing rule on the gateway. The IP->Tel routing rule configuration has two modes: Standard and Character.

Under the Standard mode, click **Add New** to add them manually. See Figure 3-68. You may use the default values of all the configuration items herein.

Figure 3-68 Add New Routing Rule (IP->Tel)

The table below explains the items shown in the above figure.

| Item | Description |
|------|-------------|
|------|-------------|



|   |   |
|---|---|
| <b>Index</b>                                | The unique index of each routing rule, which denotes its priority. A routing rule with a smaller index value has a higher priority. If a call matches several routing rules, it will be processed according to the one with the highest priority.   |
| <b>Description</b>                          | More information about each routing rule, with the default value of <i>default</i> .  |
| <b>Source IP</b>                            | IP address from where the call is initiated. This item can be set to a specific IP address or "*" which indicates any IP address  |
| <b>CallerID Prefix,<br/>CalleeID Prefix</b> | A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or character ranges defined by [ ]. '[ ]' represents a character within the range it defines. Values in [ ] only can be characters '0~9', "[*]", "#", punctuations '-' and ',' . ('-' is used between two characters to indicate any character between these two characters. ',' is used to separate characters or character ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with <b>Source IP</b> specify a routing rule for calls.<br><b>Note:</b> "[*]" represents TFM symbol *, while "*" represents any string. |
| <b>Route by Number</b>                      | When this feature is enabled, the gateway will route a call from IP to a corresponding port based on its number. And the number of the port which this call will be routed to can be set via the item <b>SIP Account</b> on the <a href="#">FXS</a> or <a href="#">FXO</a> Settings interface. In such case, the configuration item <b>Call Destination</b> goes invalid and shows <i>Route by Number</i> on the routing rule configuration interface. The default setting is <i>disabled</i> .   |
| <b>Call Destination</b>                     | Port group to which the call will be routed.  |

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

See Figure 3-69 for the IP→Tel routing rule configuration interface after your configuration. There is a rule displayed with Index 63 and Call Destination 'Route by Number', having no restriction on Source IP, CallerID Prefix and CalleeID Prefix, which indicates the gateway will route a call from any IP address to a corresponding port based on its number.

Press the **Add New** button on the bottom right corner of the list to add a new routing rule.


| IP→Tel Routing Rule   |       |           |                 |                 |                  |             |   |
|---|-------|-----------|-----------------|-----------------|------------------|-------------|---|
| Check   | Index | Source IP | CallerID Prefix | CalleeID Prefix | Call Destination | Description | Modify  |
| <input type="checkbox"/>  | 63    | *         | *               | *               | Route by Number  | default     |  |
| Check All   Uncheck All   Inverse   Delete   Clear All   Add New                                    |       |           |                 |                 |                  |             |   |
| 1 Items Total   20 Items/Page   1/1   First   Previous   Next   Last   Go to Page 1   1 Pages Total |       |           |                 |                 |                  |             |   |

Figure 3-69 IP→Tel Routing Rule Configuration Interface

Click **Modify** in Figure 3-69 to modify a routing rule. The configuration items on the IP→Tel routing rule modification interface are the same as those on the **Add New Routing Rule (IP→Tel)** interface. Note that the item **Index** cannot be modified.

To delete a routing rule, check the checkbox before the corresponding index in Figure 3-69 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all routing rules at a time, click the **Clear All** button in Figure 3-69.

See Figure 3-70 for the IP→Tel Routing Rule Configuration Interface under the Character mode.

You can edit the routing rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Figure 3-70 IP→Tel Routing Rule Configuration Interface (Character)

### 3.7.3 Tel to IP

Figure 3-71 Tel→IP Routing Rule Configuration Interface (Standard)

See Figure 3-71 for the Tel→IP routing rule configuration interface. By default, there is no available routing rule on the gateway. The Tel→IP routing rule configuration has two modes: Standard and Character.

Under the Standard mode, click **Add New** to add them manually. See Figure 3-72. You may use the default values of all the configuration items herein except for **Destination IP** and **Destination Port**.

Figure 3-72 Add New Routing Rule (Tel→IP)

The table below explains the items shown in the above figure.

| Item                                      | Description   |
|---|---|
| <b>Index</b>                              | The unique index of each routing rule, which denotes its priority. A routing rule with a smaller index value has a higher priority. If a call matches several routing rules, it will be processed according to the one with the highest priority.   |
| <b>Description</b>                        | More information about each routing rule, with the default value of <i>default</i> .  |
| <b>Source Port Group (Call Initiator)</b> | Port group from which the call is initiated. This item can be set to a specific port group or '*' which indicates any port group.   |
| <b>CallerID Prefix, CalleelD Prefix</b>   | A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or characters ranges defined by [ ]. '[ ]' represents a character within the range it defines. Values in [ ] only can be digits '0~9', "[*]", "#", punctuations '-' and ','. '-' is used between two characters to indicates any characters between these two characters. ',' is used to separate characters or characters ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with <b>Source Port Group (Call Initiator)</b> specify a routing rule for calls.<br><b>Note:</b> "[*]" represents DTFM symbol *, while "*" represents any string. |
| <b>Destination IP, Destination Port</b>   | IP address and port number of the remote end to which the call will be routed.  |

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

See Figure 3-73 for the Tel→IP routing rule configuration interface after your configuration. There is a rule displayed with Index 63, Destination IP '192.168.1.101' and Destination Port '5060' (i.e. default IP address and port of the gateway), having no restriction on Call Initiator, CallerID Prefix and CalleeID Prefix, which indicates all the outgoing calls from Tel which conform to the dialing rule will be routed to the gateway.


| Tel→IP Routing Rule   |       |                |                 |                 |                |                  |             |   |
|---|-------|----------------|-----------------|-----------------|----------------|------------------|-------------|---|
| Check   | Index | Call Initiator | CallerID Prefix | CalleeID Prefix | Destination IP | Destination Port | Description | Modify  |
| <input type="checkbox"/>  | 63    | *              | *               | *               | 192.168.1.101  | 5060             | default     |  |
| Check All   Uncheck All   Inverse   Delete   Clear All   Add New                                    |       |                |                 |                 |                |                  |             |   |
| 1 Items Total   20 Items/Page   1/1   First   Previous   Next   Last   Go to Page 1   1 Pages Total |       |                |                 |                 |                |                  |             |   |

Figure 3-73 Tel→IP Routing Rule Configuration Interface

Click **Modify** in Figure 3-73 to modify a routing rule. The configuration items on the Tel→IP routing rule modification interface are the same as those on the **Add New Routing Rule (Tel→IP)** interface. Note that the item **Index** cannot be modified.

To delete a routing rule, check the checkbox before the corresponding index in Figure 3-73 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all routing rules at a time, click the **Clear All** button in Figure 3-73.

See Figure 3-74 for the Tel→IP Routing Rule Configuration Interface under the Character mode. You can edit the routing rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Standard Mode   Character Mode

Tel→IP Routing Rule

Note: The routing information contains such fields as Source Port Group, CallerID Prefix, CalleeID Prefix, Destination IP, Destination Port and Description

The priority decreases from top to bottom; adjacent fields are separated by a space

CallerID Prefix, CalleeID Prefix, Destination IP Symbol \* indicates any character; Source Port Group set to 0 denotes any port group.

**Don't forget to save the configuration after your modification!**

0 \* \* \* 0 default

1 Items Total

Save

Figure 3-74 Tel→IP Routing Rule Configuration Interface (Character)

## 3.8 Number Manipulation

Number Manipulation includes four parts: **IP→Tel CallerID**, **IP→Tel CalleeID**, **Tel→IP CallerID** and **Tel→IP CalleeID**. See Figure 3-75.

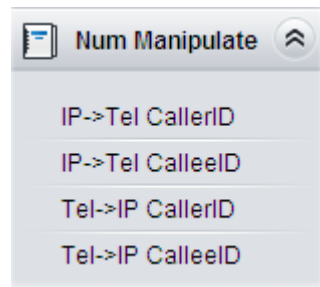


Figure 3-75 Number Manipulation

### 3.8.1 IP to Tel CallerID

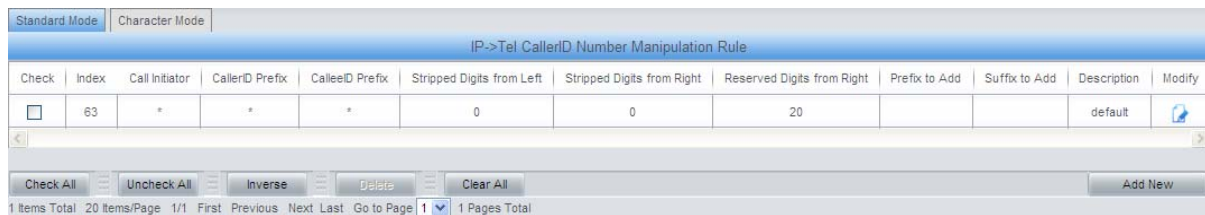


Figure 3-76 IP→Tel CallerID Manipulation Interface (Standard)

See Figure 3-76 for the IP→Tel CallerID manipulation interface under the Standard mode. A new number manipulation rule can be added by the **Add New** button on the bottom right corner of the list in the above figure. See Figure 3-77 for the IP→Tel CallerID manipulation rule adding interface. You may use the default values of all the configuration items herein.

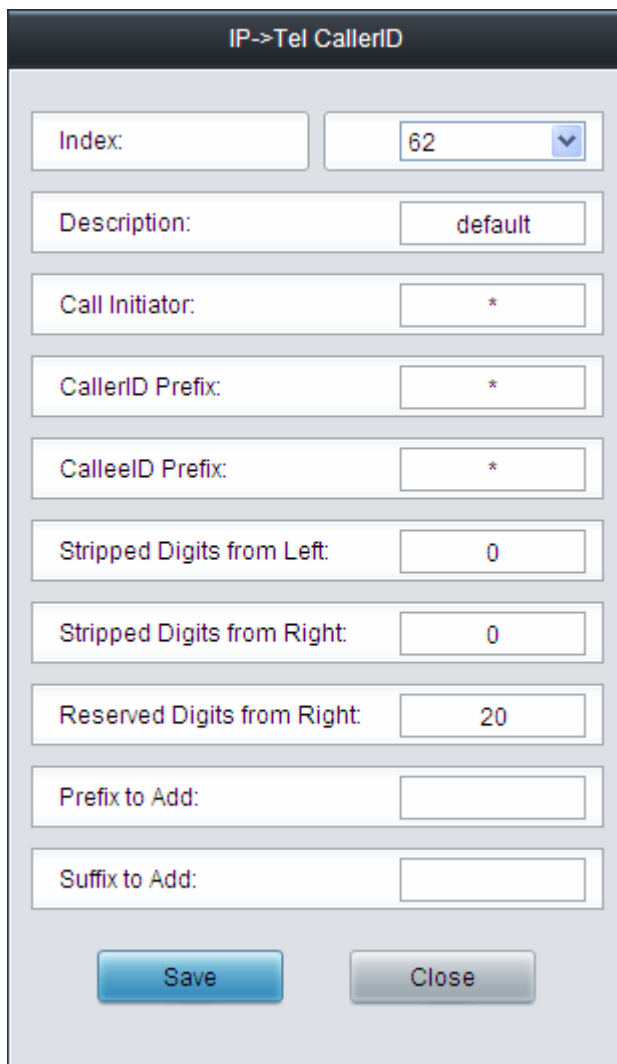


Figure 3-77 Add IP→Tel CallerID Manipulation Rule

The table below explains the items shown in the above figure.

| Item                         | Description   |
|------------------------------|---|
| <b><i>Index</i></b>          | The unique index of each number manipulation rule, which denotes its priority. A number manipulation rule with a smaller index value has a higher priority. If a call matches several number manipulation rules, it will be processed according to the one with the highest priority. |
| <b><i>Description</i></b>    | More information about each number manipulation rule, with the default value of <i>default</i> .  |
| <b><i>Call Initiator</i></b> | IP address from where the call is initiated. This item can be set to a specific IP address or "*" which indicates any IP address.   |


|   |   |
|---|---|
| <b>CallerID Prefix,<br/>CalleeID Prefix</b> | <p>A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or character ranges defined by [ ]. '[' represents a character within the range it defines. Values in [ ] only can be digits '0~9', "[*]", "#", punctuations '-' and ',' . ('-' is used between two characters to indicates any character between these two characters. ',' is used to separate characters or character ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with <b>Call Initiator</b> specify a number manipulation rule for calls.</p> <p><b>Note:</b> "[*]" represents DTFM symbol *, while "*" represents any string.</p> |
| <b>Stripped Digits from Left</b>            | <p>The amount of digits to be deleted from the left end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.</p>  |
| <b>Stripped Digits from Right</b>           | <p>The amount of digits to be deleted from the right end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.</p>   |
| <b>Reserved Digits from Right</b>           | <p>The amount of digits to be reserved from the right end of the number. Only when the value of this item is less than the length of the current number will some digits be deleted from left; otherwise, the number will not be manipulated. The default value is 20.</p>  |
| <b>Prefix to Add</b>                        | <p>Designated information to be added to the left end of the current number.</p>  |
| <b>Suffix to Add</b>                        | <p>Designated information to be added to the right end of the current number.</p>   |

**Note:** The number manipulation is performed in 5 steps by the order of the following configuration items: **Stripped Digits from Left**, **Stripped Digits from Right**, **Reserved Digits from Right**, **Prefix to Add** and **Suffix to Add**.

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

Click **Modify** in Figure 3-76 to modify a number manipulation rule. See Figure 3-78 for the IP→Tel CallerID manipulation rule modification interface. The configuration items on this interface are the same as those on the **Add IP→Tel CallerID Manipulation Rule** interface. Note that the item **Index** cannot be modified.



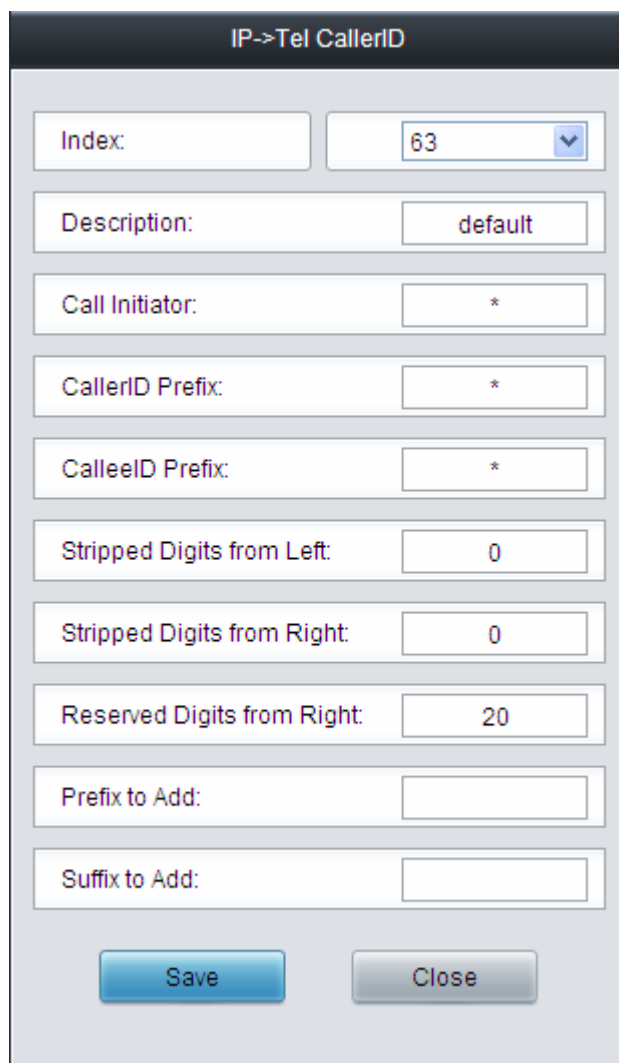

The image shows a configuration window titled "IP->Tel CallerID". It contains several input fields and buttons:

- Index:** A dropdown menu showing "63".
- Description:** A text field containing "default".
- Call Initiator:** A text field containing "\*".
- CallerID Prefix:** A text field containing "\*".
- CalleeID Prefix:** A text field containing "\*".
- Stripped Digits from Left:** A text field containing "0".
- Stripped Digits from Right:** A text field containing "0".
- Reserved Digits from Right:** A text field containing "20".
- Prefix to Add:** An empty text field.
- Suffix to Add:** An empty text field.
- Buttons:** "Save" and "Close" buttons at the bottom.

Figure 3-78 Modify IP→Tel CallerID Manipulation Rule

To delete a number manipulation rule, check the checkbox before the corresponding index in Figure 3-76 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all number manipulation rules at a time, click the **Clear All** button in Figure 3-76.

See Figure 3-79 for the IP→Tel CallerID Manipulation Interface under the Character mode. You can edit the number manipulation rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Standard Mode Character Mode

IP->Tel CallerID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Call Initiator, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description  
The priority decreases from top to bottom; by default, the rule will be inserted to the end after you click 'Add'. If you want to increase its priority, please copy it to the corresponding position.  
Adjacent fields are separated by a space; Symbol \* in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.  
**Don't forget to save the configuration after your modification!**

\*\*\* 0 0 20 <@#> <@#> default

1Items Total

Save

Figure 3-79 IP→Tel CallerID Manipulation Interface (Character)

### 3.8.2 IP to Tel CalleeID

The number manipulation process for IP→Tel CalleeID is almost the same as that for IP→Tel CallerID; only the number to be manipulated changes from CallerID to CalleeID. See, Figure 3-81 for IP→Tel CalleeID manipulation interface. The configuration items on this interface are the same as those on **IP→Tel CallerID Manipulation Interface** (Figure 3-76).

Standard Mode Character Mode

IP->Tel CalleeID Number Manipulation Rule

| Check                    | Index | Call Initiator | CallerID Prefix | CalleeID Prefix | Stripped Digits from Left | Stripped Digits from Right | Reserved Digits from Right | Prefix to Add | Suffix to Add | Description | Modify |
|--------------------------|-------|----------------|-----------------|-----------------|---------------------------|----------------------------|----------------------------|---------------|---------------|-------------|--------|
| <input type="checkbox"/> | 63    | *              | *               | *               | 0                         | 0                          | 20                         |               |               | default     |        |

Check All Uncheck All Inverse Delete Clear All Add New

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-80 IP→Tel CalleeID Manipulation Interface(Standard)

Standard Mode Character Mode

IP->Tel CalleeID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Call Initiator, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description  
The priority decreases from top to bottom; by default, the rule will be inserted to the end after you click 'Add'. If you want to increase its priority, please copy it to the corresponding position.  
Adjacent fields are separated by a space; Symbol \* in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.  
**Don't forget to save the configuration after your modification!**

\*\*\* 0 0 20 <@#> <@#> default

1Items Total

Save

Figure 3-81 IP→Tel CalleeID Manipulation Interface (Character)

### 3.8.3 Tel to IP CallerID

|  |       |                |                 |                 |                           |                            |                            |               |               |             |        |
|--|-------|----------------|-----------------|-----------------|---------------------------|----------------------------|----------------------------|---------------|---------------|-------------|--------|
| Standard Mode  |       | Character Mode |                 |                 |                           |                            |                            |               |               |             |        |
| Tel->IP CallerID Number Manipulation Rule  |       |                |                 |                 |                           |                            |                            |               |               |             |        |
| Check  | Index | Call Initiator | CallerID Prefix | CalleeID Prefix | Stripped Digits from Left | Stripped Digits from Right | Reserved Digits from Right | Prefix to Add | Suffix to Add | Description | Modify |
| <input type="checkbox"/>   | 63    | *              | *               | *               | 0                         | 0                          | 20                         |               |               | default     |        |
| <div>1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total</div> |       |                |                 |                 |                           |                            |                            |               |               |             |        |
| Check All  |       | Uncheck All    |                 | Inverse         |                           | Delete                     |                            | Clear All     |               | Add New     |        |

Figure 3-82 Tel→IP CallerID Manipulation Interface (Standard)

See Figure 3-82 for the Tel→IP CallerID manipulation interface under the Standard mode. A new number manipulation rule can be added by the **Add New** button on the bottom right corner of the list in the above figure. See Figure 3-83 for the Tel→IP CallerID manipulation rule adding interface. You may use the default values of all the other configuration items herein.

### Tel->IP CallerID

Index:

62

Description:

default

Source Port Group:

\*

CallerID Prefix:

\*

CalleeID Prefix:

\*

Stripped Digits from Left:

0

Stripped Digits from Right:

0

Reserved Digits from Right:

20

Prefix to Add:

Suffix to Add:

Save

Close

Figure 3-83 Add Tel→IP CallerID Manipulation Rule

The table below explains the items shown in the above figure.

| Item         | Description   |
|--------------|---|
| <b>Index</b> | The unique index of each number manipulation rule, which denotes its priority. A number manipulation rule with a smaller index value has a higher priority. If a call |

|   |  |
|---|--|
|   | matches several number manipulation rules, it will be processed according to the one with the highest priority.  |
| <b>Description</b>                        | More information about each number manipulation rule, with the default value of <i>default</i> .   |
| <b>Source Port Group (Call Initiator)</b> | Port group from which the call is initiated. This item can be set to a specific port group or '*' which indicates any port group.  |
| <b>CallerID Prefix, CalleeID Prefix</b>   | A string of characters at the beginning of the caller/called party number. It can be a specific string consisting of digits 0~9, "[*]", "#", or character ranges defined by [ ]. '[ ]' represents a character within the range it defines. Values in [ ] only can be digits '0~9', "[*]", "#", punctuations '-' and ';'. '-' is used between two characters to indicates any character between these two characters. ';' is used to separate characters or character ranges, representing alternatives.) For example, 057[1-3,6] represents the string 0571, 0572, 0573 or 0576. Also these items can be set to "*" which indicates any string. These two configuration items together with <b>Call Initiator</b> specify a number manipulation rule for calls.<br><b>Note:</b> "[*]" represents DTFM symbol *, while "*" represents any string. |
| <b>Stripped Digits from Left</b>          | The amount of digits to be deleted from the left end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.  |
| <b>Stripped Digits from Right</b>         | The amount of digits to be deleted from the right end of the number. If the value of this item exceeds the length of the current number, the whole number will be deleted. The default value is 0.   |
| <b>Reserved Digits from Right</b>         | The amount of digits to be reserved from the right end of the number. Only when the value of this item is less than the length of the current number will some digits be deleted from left; otherwise, the number will not be manipulated. The default value is 20.  |
| <b>Prefix to Add</b>                      | Designated information to be added to the left end of the current number.  |
| <b>Suffix to Add</b>                      | Designated information to be added to the right end of the current number.   |

**Note:** The number manipulation is performed in 5 steps by the order of the following configuration items: **Stripped Digits from Left**, **Stripped Digits from Right**, **Reserved Digits from Right**, **Prefix to Add** and **Suffix to Add**.

After configuration, click **Save** to save the settings into the gateway or click **Close** to cancel the settings.

Click **Modify** in Figure 3-82 to modify a number manipulation rule. See Figure 3-84 for the Tel→IP CallerID manipulation rule modification interface. The configuration items on this interface are the same as those on the **Add Tel→IP CallerID Manipulation Rule** interface. Note that the item **Index** cannot be modified.

Tel->IP CallerID

Index: 63

Description: default

Source Port Group: \*

CallerID Prefix: \*

CalleeID Prefix: \*

Stripped Digits from Left: 0

Stripped Digits from Right: 0

Reserved Digits from Right: 20

Prefix to Add:

Suffix to Add:

Save Close

Figure 3-84 Modify Tel→IP CallerID Manipulation Rule

To delete a number manipulation rule, check the checkbox before the corresponding index in Figure 3-82 and click the **Delete** button. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all number manipulation rules at a time, click the **Clear All** button in Figure 3-82.

See Figure 3-85 for the Tel→IP CallerID Manipulation Interface under the Character mode. You can edit the number manipulation rule list to add a new one or modify an old one. The exact meaning of each element of the rule is described on the page.

Standard Mode Character Mode

Tel->IP CallerID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Source Port Group, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description  
The priority decreases from top to bottom; Adjacent fields are separated by a space.  
Symbol \* in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.  
**Don't forget to save the configuration after your modification!**

0 \* \* 0 0 20 <@#> <@#> default

1 Items Total

Save

Figure 3-85 Tel-&gt;IP CallerID Manipulation Interface (Character)

### 3.8.4 Tel to IP CalleeID

The number manipulation process for Tel->IP CalleeID is almost the same as that for Tel->IP CallerID; only the number to be manipulated changes from CallerID to CalleeID. See Figure 3-86, Figure 3-87 for the Tel->IP CalleeID manipulation interface. The configuration items on this interface are the same as those on **Tel->IP CallerID Manipulation Interface** (Figure 3-82).

Standard Mode Character Mode

Tel->IP CalleeID Number Manipulation Rule

| Check                    | Index | Call Initiator | CallerID Prefix | CalleeID Prefix | Stripped Digits from Left | Stripped Digits from Right | Reserved Digits from Right | Prefix to Add | Suffix to Add | Description | Modify |
|--------------------------|-------|----------------|-----------------|-----------------|---------------------------|----------------------------|----------------------------|---------------|---------------|-------------|--------|
| <input type="checkbox"/> | 63    | *              | *               | *               | 0                         | 0                          | 20                         |               |               | default     |        |

Check All Uncheck All Inverse Delete Clear All Add New

1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total

Figure 3-86 Tel-&gt;IP CalleeID Manipulation Interface (Standard)

Standard Mode Character Mode

Tel->IP CalleeID Number Manipulation Rule

Note: The Number Manipulation Rule contains such fields as Source Port Group, CallerID Prefix, CalleeID Prefix, Delete Digits from Left, Delete Digits from Right, Reserve Digits from Right, Add Prefix, Add Suffix and Description  
The priority decreases from top to bottom; Adjacent fields are separated by a space.  
Symbol \* in Call Initiator, CallerID Prefix and CalleeID Prefix indicates any string; Symbol <@#> in Add Prefix and Add Suffix denotes not to add.  
**Don't forget to save the configuration after your modification!**

0 \* \* 0 0 20 <@#> <@#> default

1 Items Total

Save

Figure 3-87 Tel→IP CalleeID Manipulation Interface (Character)

## 3.9 System Tools

System Tools is mainly for gateway maintenance. It provides such features as IP modification, data backup and connectivity check. See Figure 3-88 for details.

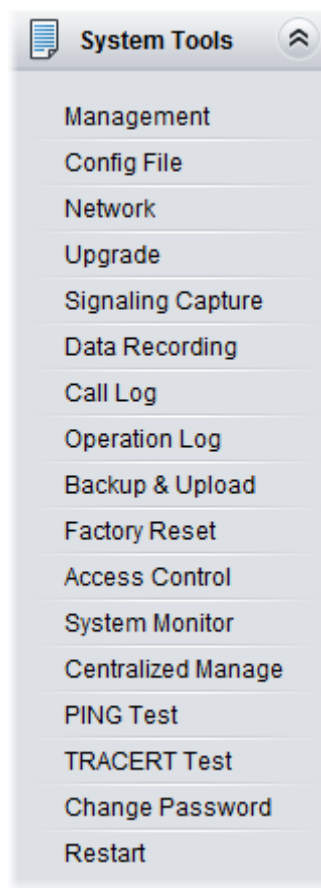


Figure 3-88 System Tools



### 3.9.1 Management

The screenshot shows the 'Management Parameters' configuration window. It is divided into four sections: WEB Management, SYSLOG Parameters, CDR Parameters, and Time Parameters. At the bottom are 'Save' and 'Reset' buttons.

| Section           | Parameter           | Value   |
|-------------------|---------------------|---|
| WEB Management    | WEB Port            | 80  |
|                   | Access Setting      | Allow All IPs   |
| SYSLOG Parameters | SYSLOG              | <input checked="" type="radio"/> Yes <input type="radio"/> No |
|                   | Server Address      | 201.123.115.20  |
|                   | SYSLOG Level        | INFO  |
| CDR Parameters    | Send CDR            | <input checked="" type="radio"/> Yes <input type="radio"/> No |
|                   | Server Address      | 127.0.0.1   |
|                   | Server Port         | 3   |
| Time Parameters   | NTP                 | <input checked="" type="radio"/> Yes <input type="radio"/> No |
|                   | NTP Server Address  | time.nist.gov   |
|                   | Synchronizing Cycle | 3600  |
|                   | Daily Restart       | <input checked="" type="radio"/> Yes <input type="radio"/> No |
|                   | Restart Time        | 0 h 0 m   |
|                   | System Time         | <input type="checkbox"/> Modify 2015-11-09 15:20:54           |
|                   | Time Zone           | GMT+8:00 (Beijing, Singapore, Taipei, Kual)                   |

Figure 3-89 Management Parameters Setting Interface

See Figure 3-89 for the Management Parameters Setting interface. The table below explains the items shown in the above figure.

| Item                  | Description   |
|-----------------------|---|
| <b>WEB Port</b>       | The port which is used to access the gateway via WEB. The default value is 80.  |
| <b>Access Setting</b> | Sets the IP addresses which can access the gateway via WEB. By default, all IPs are allowed. You can set an IP whitelist to allow all IPs within it to access the gateway freely. Also can set an IP blacklist to forbid all IPs within it to access the gateway. |
| <b>SYSLOG</b>         | Sets whether to enable SYSLOG. It is required to fill in <b>SYSLOG Server Address</b> and <b>SYSLOG Level</b> in case SYSLOG is enabled. By default, <b>SYSLOG</b> is disabled.   |
| <b>Server Address</b> | Sets the SYSLOG server address for log reception.   |
| <b>SYSLOG Level</b>   | Sets the SYSLOG level. There are three options: <i>ERROR</i> , <i>WARNING</i> , <i>INFO</i> and <i>DEBUG</i> . The default value is <i>INFO</i> .   |
| <b>Send CDR</b>       | Sets whether to enable the feature of sending CDR. It is required to fill in <b>Server Address</b> and <b>Server Port</b> in case Send CDR is enabled. By default, <b>Send CDR</b> is disabled.   |

|                            |   |
|----------------------------|---|
| <b>Server Address</b>      | The address of the server to receive CDR.   |
| <b>Server Port</b>         | The port of the server to receive CDR.  |
| <b>NTP</b>                 | Sets whether to enable the NTP time synchronization feature. It is required to fill in <b>NTP Server Address</b> , <b>Synchronizing Cycle</b> and <b>Time Zone</b> in case NTP is enabled. By default, <b>NTP</b> is enabled. |
| <b>NTP Server Address</b>  | Sets the Server address for NTP time synchronization. By default, the address is time.nist.gov  |
| <b>Synchronizing Cycle</b> | Sets the cycle for NTP time synchronization, calculated by s, with the default value of 3600.   |
| <b>Daily Restart</b>       | Sets whether to restart the gateway regularly every day at the preset <b>Restart Time</b> . By default, this feature is disabled.   |
| <b>Restart Time</b>        | Sets the time to restart the gateway regularly.   |
| <b>System Time</b>         | The system time. Check the checkbox before <b>Modify</b> and change the time in the edit box when NTP is disabled.  |
| <b>Time Zone</b>           | The time zone of the gateway.   |

### 3.9.2 Configuration File

SMGConfig.ini

Config File

```
[Version]
GWSvrV=1.2.12_20130719
WebV=1.2.11_20130719
CpldV=0.3
[DbgLog]
LogLevel=3
LogCreatePeriod=24
LogMaxPeriod=4
LogMaxPeriodSaved=5
LogOverWrite=1
LogDirectory=/dev/shm/shcti
LogType=3
[WebCtrl]
LocalAddress=127.0.0.1
LocalPort=1001
MailAlarm=1
MailUser=
MailPassword=
SMTPAddress=
MailReceivers=
ChInfoPath=/usr/local/SMG/ch.data.php
PopInfoPath=/usr/local/SMG/pop.data.php
[UserInfo]
UserName=BqtTPNLUr/23x1wC/w
Pwd=BqtTPNLUr/23x1wC/w
[Monitor]
LocalAddress=127.0.0.1
LocalPort=1002
AutoExec=1
ExecPath=E:\recorder\Recorder\Output\BIN\
UpgradeExecPath=/usr/local/apache/htdocs/RecUpgrade
LostConnectThreshold=60
[INIPath]
ShConfig=ShConfig.ini
[DBPARAM]
```


Save Reset

Note: You shall restart system to validate the modified configuration file!

Figure 3-90 Configuration File Interface

See Figure 3-90 for the Configuration File interface, including two files: SMGConfig.ini and ShConfig.ini. You can check and modify the items in these configuration files through this interface. Configurations about the gateway server, such as route rules, number manipulation and so on, are included in SMGConfig.ini; configurations about the board are included in ShConfig.ini. You can modify these configurations on the interface directly, and then click **Save** to save the above settings into the gateway or click **Reset** to restore the configurations.

### 3.9.3 Network

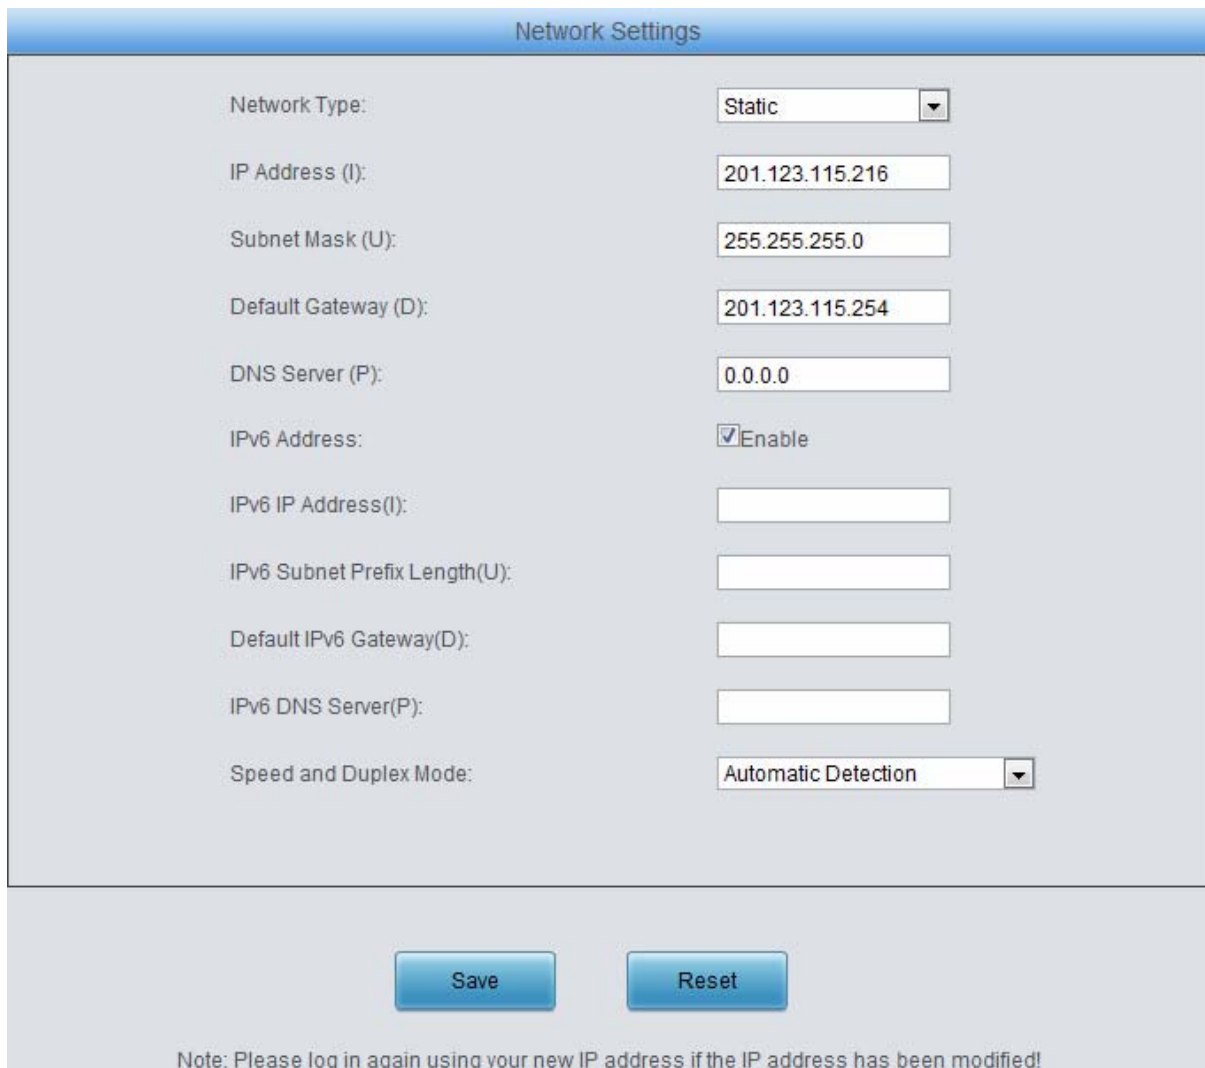

The image shows a web-based 'Network Settings' interface. It features a light blue header with the title 'Network Settings'. Below the header, there are several configuration fields arranged in two columns. The first column contains labels for 'Network Type:', 'IP Address (I):', 'Subnet Mask (U):', 'Default Gateway (D):', 'DNS Server (P):', 'IPv6 Address:', 'IPv6 IP Address(I):', 'IPv6 Subnet Prefix Length(U):', 'Default IPv6 Gateway(D):', 'IPv6 DNS Server(P):', and 'Speed and Duplex Mode:'. The second column contains the corresponding input elements: a dropdown menu for 'Static', text boxes for '201.123.115.216', '255.255.255.0', '201.123.115.254', '0.0.0.0', a checked checkbox for 'Enable', empty text boxes for IPv6 fields, and another dropdown menu for 'Automatic Detection'. At the bottom of the form, there are two blue buttons labeled 'Save' and 'Reset'. Below these buttons, a note states: 'Note: Please log in again using your new IP address if the IP address has been modified!'.

| Field                         | Value                                      |
|-------------------------------|--|
| Network Type:                 | Static                                     |
| IP Address (I):               | 201.123.115.216                            |
| Subnet Mask (U):              | 255.255.255.0                              |
| Default Gateway (D):          | 201.123.115.254                            |
| DNS Server (P):               | 0.0.0.0                                    |
| IPv6 Address:                 | <input checked="" type="checkbox"/> Enable |
| IPv6 IP Address(I):           |  |
| IPv6 Subnet Prefix Length(U): |  |
| Default IPv6 Gateway(D):      |  |
| IPv6 DNS Server(P):           |  |
| Speed and Duplex Mode:        | Automatic Detection                        |

**Save** **Reset**

Note: Please log in again using your new IP address if the IP address has been modified!

Figure 3-91 Network Settings Interface

See Figure 3-91 for the network settings interface. A gateway has only one LAN, which can be configured with network type, IP address, subnet mask, default gateway and DNS server. Network Type has three options: Static, DHCP and PPPoE. If PPPoE is used, it is necessary to enter the username and the password of the network.

After configuration, click **Save** to save the above settings into the gateway or click **Reset** to restore the configurations. After changing the IP address, you shall log in the gateway again using your new IP address.

### 3.9.4 Upgrade

| Current Version |   |
|-----------------|---|
| Serial Num      | 2230                                      |
| WEB             | Version 1.7.1_Release2017042809           |
| Service         | Version 1.7.1_Release2017042809           |
| U-boot          | Version Jan 04 2017-01:59:38              |
| Kernel          | Version #210 Fri Apr 14 09:25:23 CST 2017 |
| Product Type    | 1016C-8S8O(RJ11)                          |

Select an Update File

Figure 3-92 Upgrade Interface

See Figure 3-92 for the upgrade interface where you can upgrade the WEB, gateway service, kernel and firmware to new versions. Select the upgrade package “\*.tar.gz” (The gateway will do MD5 verification before upgrading and will not start to upgrade until it passes the verification.) via **Browse...** and click **Update**. Then the file uploading interface will appear. See Figure 3-93.

| Current Version |   |
|-----------------|---|
| Serial Num      | 2230                                      |
| WEB             | Version 1.7.1_Release2017042809           |
| Service         | Version 1.7.1_Release2017042809           |
| U-boot          | Version Jan 04 2017-01:59:38              |
| Kernel          | Version #210 Fri Apr 14 09:25:23 CST 2017 |
| Product Type    | 1016C-8S80(RJ11)                          |

Select an Update File
C:\Users\Administrator\
Browse...

72% 4126kb/s

The file is uploading. Please do not leave this page!.....


  

Upgrade Information

start upload upgrade file...

Figure 3-93 File Uploading Interface

After a successful uploading of the file, the gateway will start to upgrade the system. See Figure 3-94 and you can learn the detailed upgrading information from the upgrade information box at the bottom.

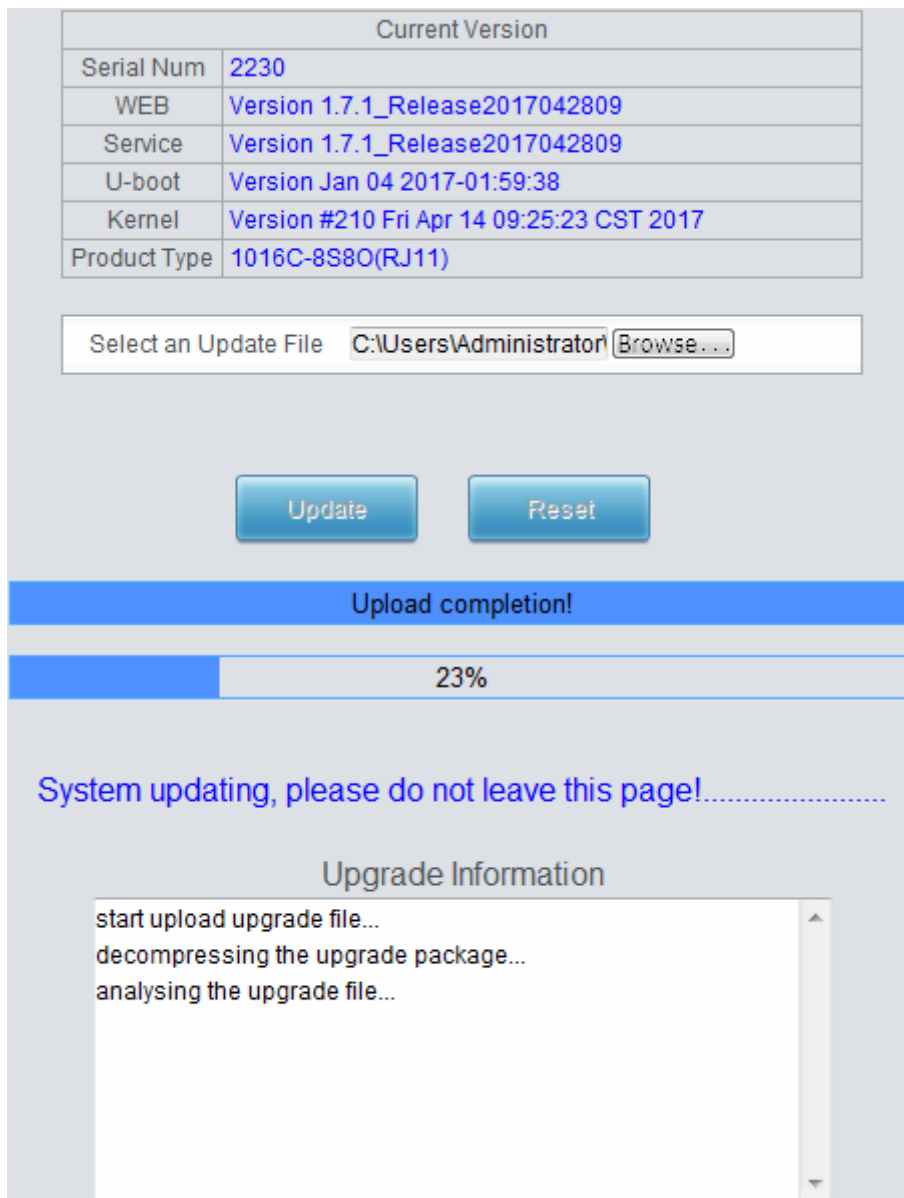

The interface displays the current version information in a table, followed by a file selection area, update and reset buttons, a progress bar, and a log of upgrade steps.

| Current Version |   |
|-----------------|---|
| Serial Num      | 2230                                      |
| WEB             | Version 1.7.1_Release2017042809           |
| Service         | Version 1.7.1_Release2017042809           |
| U-boot          | Version Jan 04 2017-01:59:38              |
| Kernel          | Version #210 Fri Apr 14 09:25:23 CST 2017 |
| Product Type    | 1016C-8S80(RJ11)                          |

Select an Update File

Upload completion!

23%

System updating, please do not leave this page!.....

Upgrade Information

start upload upgrade file...

decompressing the upgrade package...


analysing the upgrade file...

Figure 3-94 System Upgrading Interface

Note that clicking **Reset** can only delete the selected update file but not cancel the operation of **Update**.

**Note:** Please contact our technicians if you need to downgrade the gateway to an old version. An improper operation may cause unexpected problems.

### 3.9.5 Signaling Capture

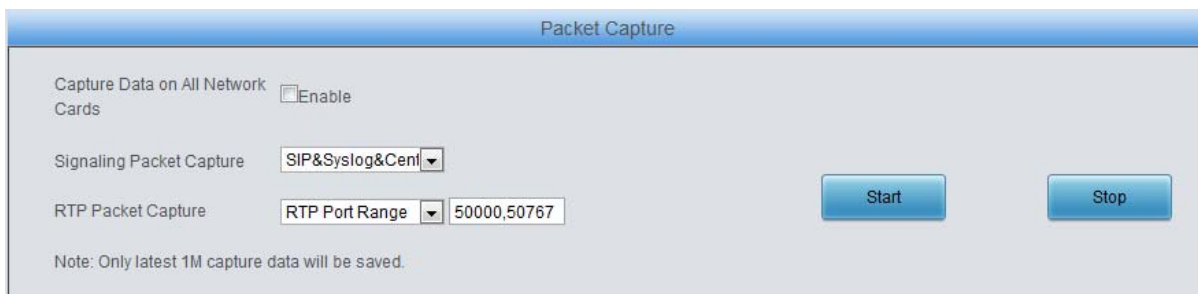

The interface allows configuring packet capture settings, including enabling capture on all network cards, selecting signaling and RTP packet capture options, and starting or stopping the capture process.

Packet Capture

Capture Data on All Network Cards ☐ Enable

Signaling Packet Capture

RTP Packet Capture

Note: Only latest 1M capture data will be saved.

Figure 3-95 Signaling Capture Interface



See Figure 3-95 for the Signaling Capture interface. Packet capture contains Signaling Packet Capture and RTP Packet Capture. You can select either of them to start the capture according to your requirement. Once the configuration item “Capture Data on All Network Cards” is enabled, the gateway will capture the data on all kinds of network cards, including eth0, lo (local loopback) and veth0 (virtual network card); otherwise, it will only capture the data on eth0. Click **Start** to start capturing packets. Click **Stop** to stop the capture and download the captured packets.

### 3.9.6 Data Recording




The Data Recording interface features a blue header bar with the title "Data Recording". Below the header, there are three configuration fields: "Channel" with a dropdown menu showing "Channel1\_(FXS)", "Mode" with a dropdown menu showing "Default", and "Interface" with a dropdown menu showing "Map". Below these fields are two blue buttons labeled "Start" and "Stop". At the bottom, there is a "Note:" section with two bullet points: "1.Only the latest 60s data can be saved." and "2.Recording parameters:8000HZ sampling rate,16-bit mono,U-law formatted."

Figure 3-96 Data Recording Interface

See Figure 3-96 for the Debug & Record interface. You can select a channel and the recording mode to start the data recording. Click **Start** to start the corresponding recording. Click **Stop** to stop the recording and download the recorded file.

### 3.9.7 Call Log

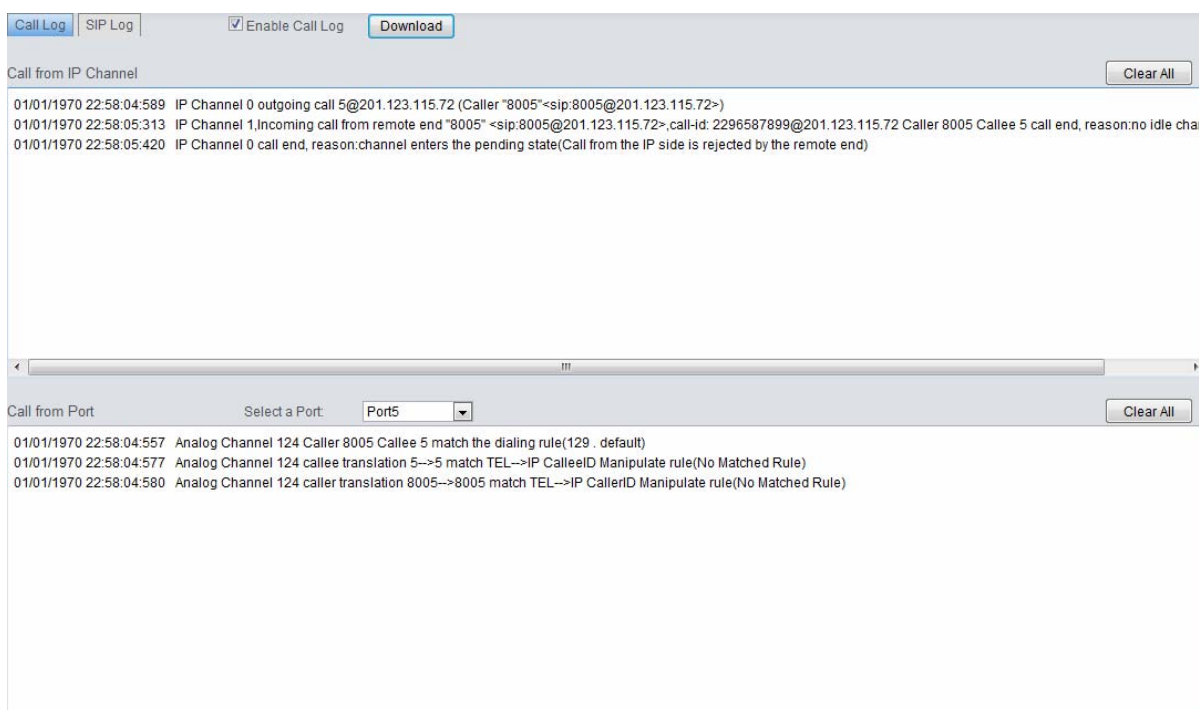

The Call Log interface has a blue header bar with tabs for "Call Log" and "SIP Log". The "Call Log" tab is active. Below the tabs, there is a checkbox labeled "Enable Call Log" which is checked, and a blue button labeled "Download". Below this, there is a section titled "Call from IP Channel" with a "Clear All" button. The log contains three entries: "01/01/1970 22:58:04:589 IP Channel 0 outgoing call 5@201.123.115.72 (Caller '8005'<sip:8005@201.123.115.72>)", "01/01/1970 22:58:05:313 IP Channel 1,Incoming call from remote end '8005' <sip:8005@201.123.115.72>,call-Id: 2296587899@201.123.115.72 Caller 8005 Callee 5 call end, reason:no idle chan", and "01/01/1970 22:58:05:420 IP Channel 0 call end, reason:channel enters the pending state(Call from the IP side is rejected by the remote end)". Below this section is a horizontal scrollbar. At the bottom, there is a section titled "Call from Port" with a "Select a Port:" label and a dropdown menu showing "Port5", and a "Clear All" button. The log contains three entries: "01/01/1970 22:58:04:557 Analog Channel 124 Caller 8005 Callee 5 match the dialing rule(129 . default)", "01/01/1970 22:58:04:577 Analog Channel 124 callee translation 5-->5 match TEL-->IP CalleeID Manipulate rule(No Matched Rule)", and "01/01/1970 22:58:04:580 Analog Channel 124 caller translation 8005-->8005 match TEL-->IP CallerID Manipulate rule(No Matched Rule)".

Figure 3-97 Call Log Interface

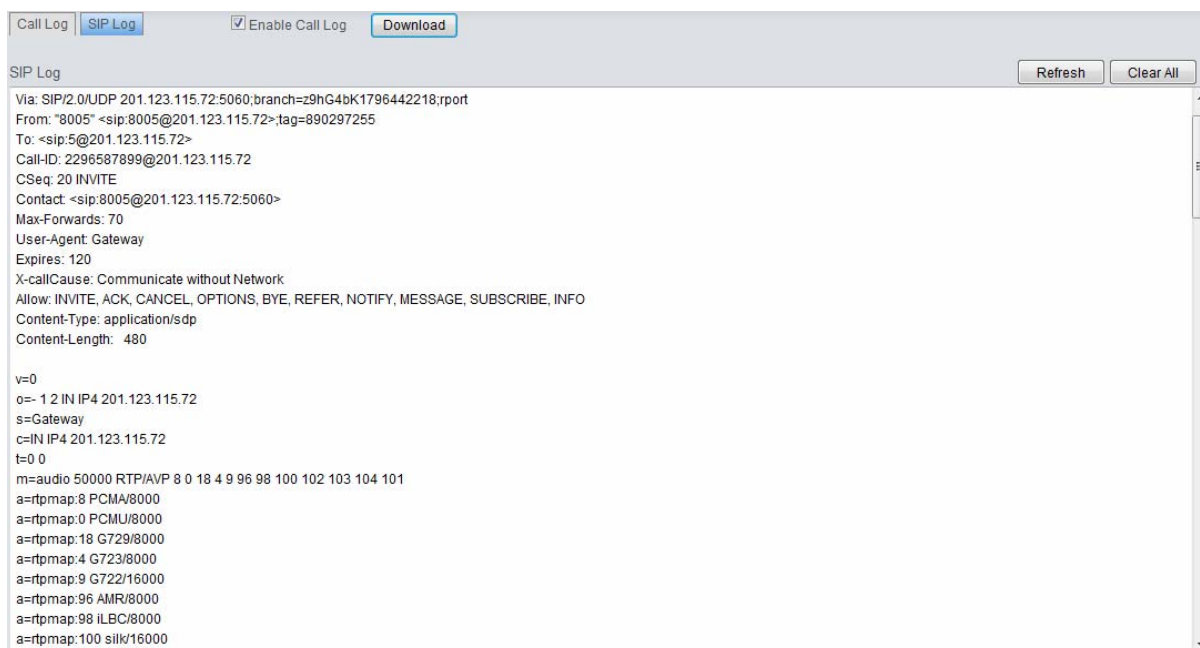


Figure 3-98 SIP Log Interface

See Figure 3-97, Figure 3-98 for the Call Log interface. Click the checkbox before **Enable Call Log** to enable the call log feature, including **Call Log** and **SIP Log**. **Call from IP Channel** displays the call log information generated on all IP channels, and **Call from Port** displays the call log information generated on the port you select. All the SIP related information will be displayed in **SIP Log**.

### 3.9.8 Operation Log

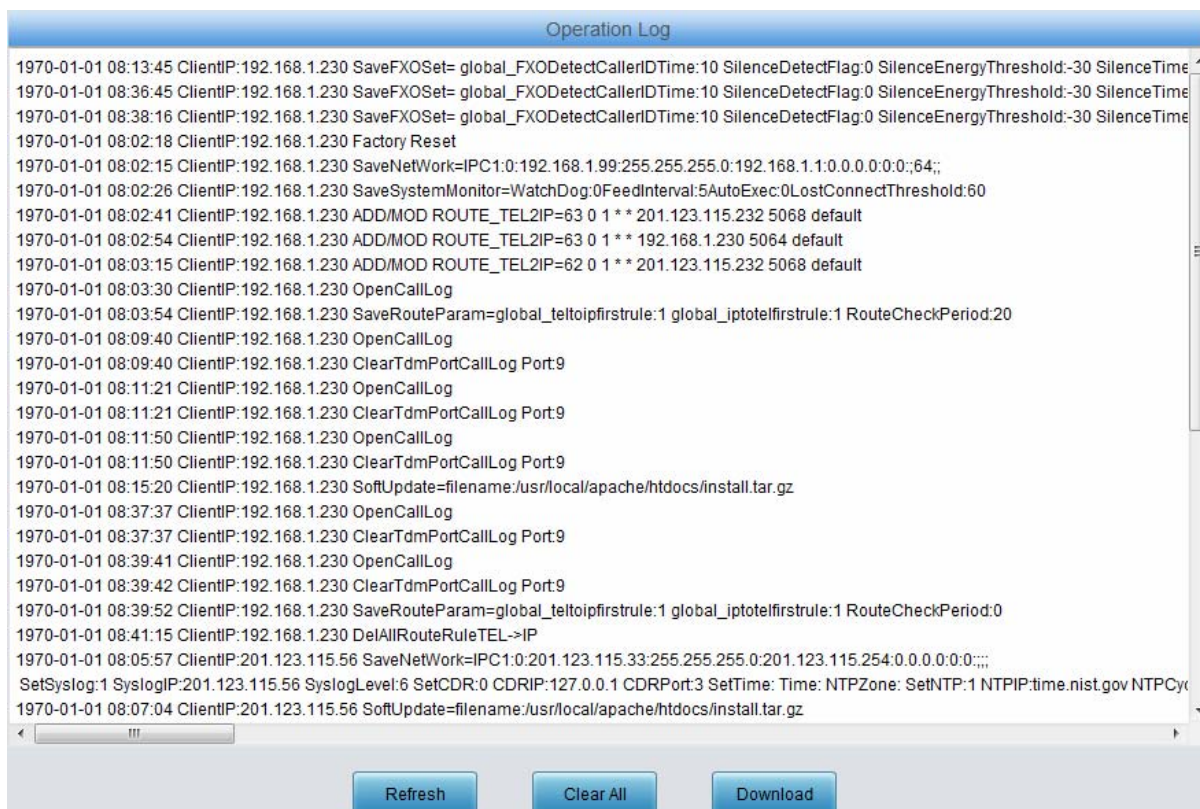


Figure 3-99 Operation Log Interface

See Figure 3-99 for the Operation Log interface, which is used to check the operation records on WEB. Click **Refresh** to refresh the log; click **Clear All** to clear all the operation logs and click **Download** to download the logs.

**Note:** The sign <@#> here means the configuration item is unconfigured.


### 3.9.9 Backup & Upload

Figure 3-100 Backup & Upload Interface

See Figure 3-100 for the backup and upload interface. To back up the configuration file to your PC, just click **Backup**. To upload a configuration file, select it via **Browse...** and click **Upload**.

Figure 3-101 Backup & Upload & Prompt Interface

Click **OK** on the prompt box (Figure 3-101) to upload the configuration file to the gateway. Now the prompt information 'System is rebooting, please do not leave this page' appears. See Figure 3-102. The gateway will overwrite the current configurations with the uploaded data after restart. Click **Cancel** to cancel this upload directly.

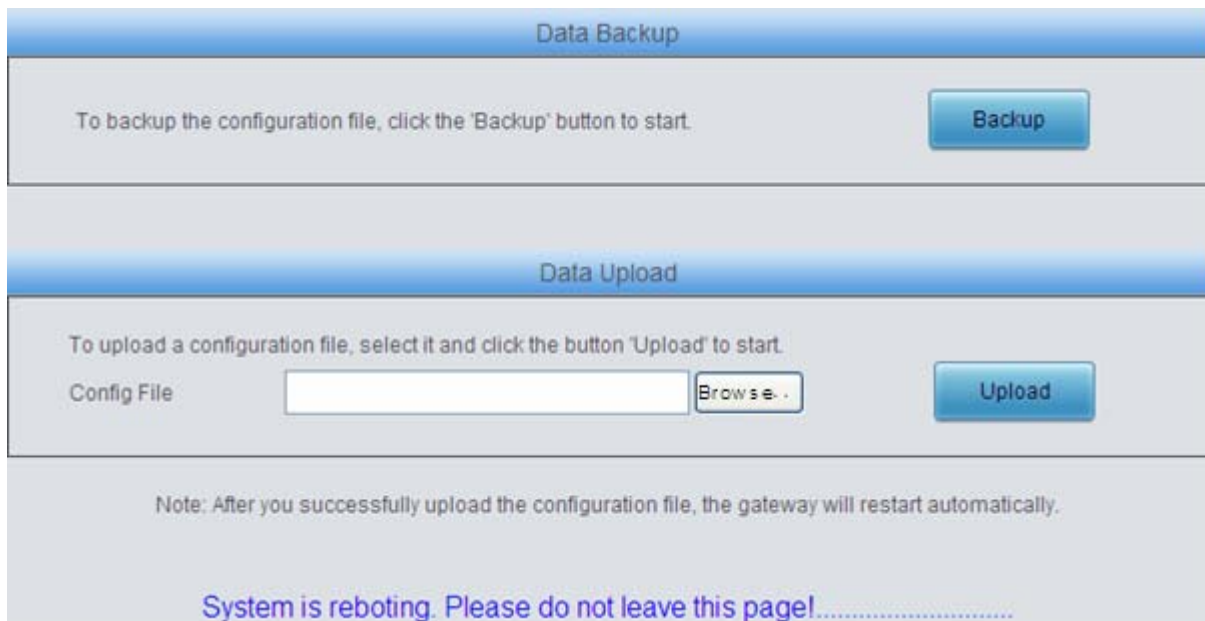

The interface is divided into two main sections: 'Data Backup' and 'Data Upload'. The 'Data Backup' section has a single 'Backup' button. The 'Data Upload' section includes a text input for 'Config File', a 'Browse...' button, and an 'Upload' button. A note states that the gateway will restart after a successful upload. A red warning message at the bottom indicates the system is rebooting.

**Data Backup**

To backup the configuration file, click the 'Backup' button to start.

**Data Upload**

To upload a configuration file, select it and click the button 'Upload' to start.

Config File

Note: After you successfully upload the configuration file, the gateway will restart automatically.

**System is rebooting. Please do not leave this page!**.....

Figure 3-102 Configuration File Uploading Interface

### 3.9.10 Factory Reset



The interface has a title bar 'Factory Reset' and a single 'Reset' button. A note below the button states that the gateway will restart and restore its default IP address after a successful reset.

**Factory Reset**


Click the button 'Reset' below to restore to factory settings.

Note: After you successfully restore the gateway to factory settings, the gateway will restart automatically and its IP address will be restored to the default one.

Figure 3-103 Factory Reset Interface

See Figure 3-103 for the factory reset interface. Click **Reset** to restore all configurations on the gateway to factory settings.

### 3.9.11 System Monitor

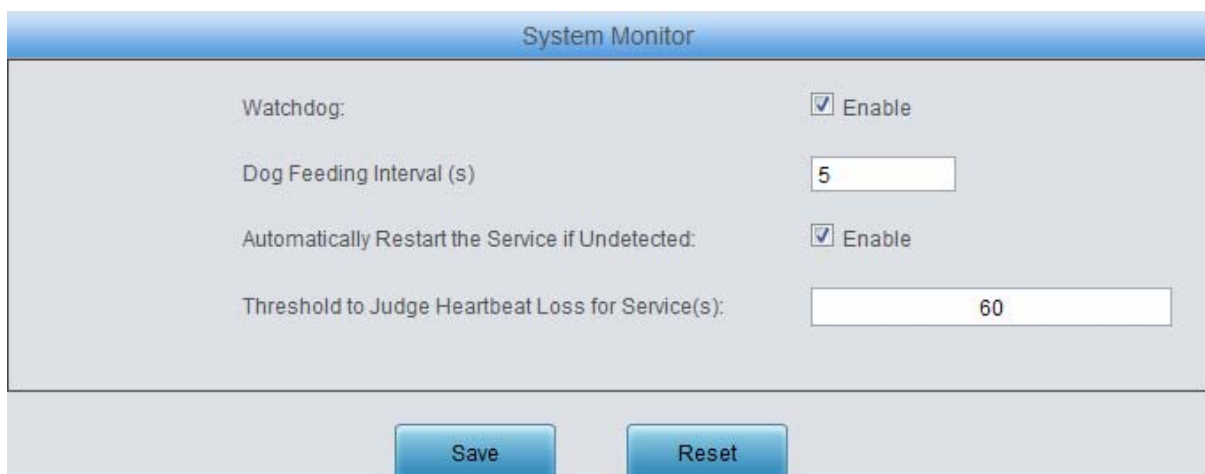

The interface has a title bar 'System Monitor' and four configuration rows. Each row has a label and a control element (checkbox or text input). At the bottom are 'Save' and 'Reset' buttons.


**System Monitor**

|   |  |
|---|--|
| Watchdog:   | <input checked="" type="checkbox"/> Enable |
| Dog Feeding Interval (s)                          | <input type="text" value="5"/>             |
| Automatically Restart the Service if Undetected:  | <input checked="" type="checkbox"/> Enable |
| Threshold to Judge Heartbeat Loss for Service(s): | <input type="text" value="60"/>            |

Figure 3-104 System Monitor Configuration Interface

See Figure 3-104 for the System Monitor Configuration interface. Watchdog is a timing reset system used to avoid application crash. You can set the dog feeding interval when this feature is enabled. The feeding interval is calculated by s, with the value range of 1~15s. By default, this feature is enabled with the default value of 5s. As the feature 'Automatically restart the service if undetected' is enabled, the service application will restart automatically if it is not detected by the gateway guard application. By default, this feature is enabled. Threshold to Judge Heartbeat Loss for Service is used to judge whether the gateway receives the heartbeat packets from the service during the set time, if not, it is considered that the gateway service has been disconnected. It is calculated by s, with the value range of 20~120s and the default value of 60s.

### 3.9.12 Centralized Manage

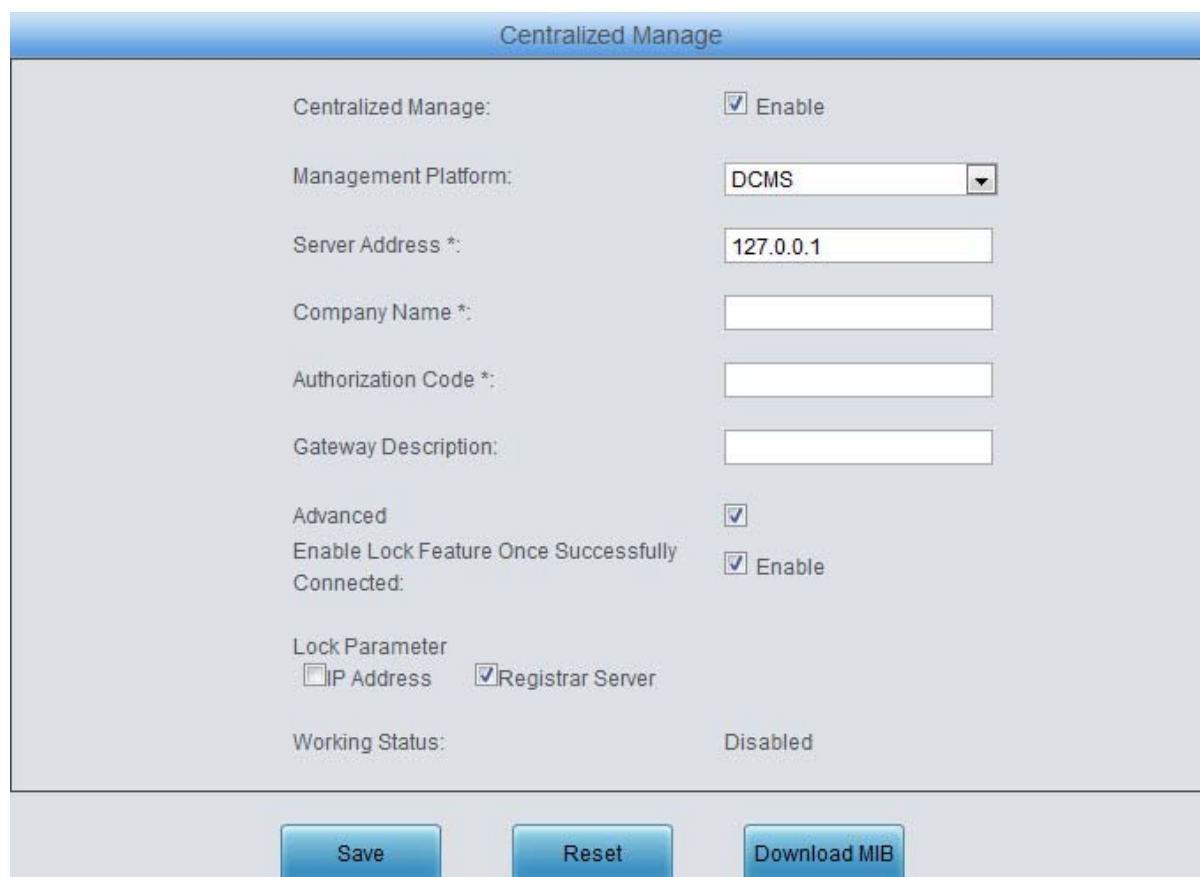

The image shows a web-based configuration interface titled "Centralized Manage". It contains several settings:

- Centralized Manage:** A checkbox labeled "Enable" which is checked.
- Management Platform:** A dropdown menu currently showing "DCMS".
- Server Address \*:** A text input field containing "127.0.0.1".
- Company Name \*:** An empty text input field.
- Authorization Code \*:** An empty text input field.
- Gateway Description:** An empty text input field.
- Advanced:** A checkbox labeled "Enable" which is checked.
- Enable Lock Feature Once Successfully Connected:** A checkbox labeled "Enable" which is checked.
- Lock Parameter:** Two checkboxes: "IP Address" (unchecked) and "Registrar Server" (checked).
- Working Status:** A label indicating the status is "Disabled".

At the bottom of the interface are three buttons: "Save", "Reset", and "Download MIB".

Figure 3-105 Centralized Manage Setting Interface

See Figure 3-105 for the Centralized Manage Setting interface. The gateway can register to a centralized management platform and accept the management of the platform. The table below explains the items shown in above figures.

| Item                       | Description  |
|----------------------------|--|
| <b>Management Platform</b> | Select a management platform for the gateway to register, including two options: DCMS and Others.  |
| <b>Server Address</b>      | The address of the server in which the management platform locates, It can be IP or a domain name, valid only when DCMS is selected.<br>Note: To configure the domain name, the DNS should be already configured and the corresponding domain name must be analyzable. |
| <b>Company Name</b>        | The name used to register the gateway to Synway DCMS, valid only when DCMS is selected.  |



|  |   |
|--|---|
| <b>Authorization Code</b>                              | The authorization code is used for the connection verification. A device can connect to the DCMS successfully only after it passes the verification. Only valid when DCMS is selected.  |
| <b>Gateway Description</b>                             | The description displayed on Synway DCMS after the gateway is registered to Synway DCMS, giving an easy identification of the gateway in device grouping. This item is valid only when DCMS is selected.  |
| <b>Enable Lock Feature Once Successfully Connected</b> | Once this feature is enabled, you can lock the device according to the corresponding parameters. This item is valid only when DCMS is selected.   |
| <b>IP Address</b>                                      | Once this feature is enabled, you are required to fill in the authorization code while modifying the information related to the IP address in the Network interface. This item is valid only when DCMS is selected.   |
| <b>Registrar Server</b>                                | Once this feature is enabled, you are required to fill in the authorization code while modifying the address and port of the registrar server in the SIP Settings interface. This item is valid only when DCMS is selected.   |
| <b>Working Status</b>                                  | The status of the connection between the gateway and the centralized management server. This item is valid only when DCMS is selected.  |
| <b>Centralized Management Protocol</b>                 | Set the centralized management protocol. It only supports SNMP currently.   |
| <b>SNMP Version</b>                                    | Set the version of SNMP, three options available: V1, V2 and V3, with the default value of V2. This item is valid only when Others is selected.   |
| <b>Monitoring Port</b>                                 | Monitoring Port for SNMP on the gateway. This item is valid only when Others is selected.   |
| <b>Community String</b>                                | Community string used for information acquisition.  |
| <b>Account</b>   | The account of SNMP, valid only when the SNMP version is set to V3.   |
| <b>Grade</b>   | The grade of SNMP, three options available: Neither authenticated nor encrypted, Authenticated but not encrypted and Authenticated and encrypted, with the default value of <i>Neither authenticated nor encrypted</i> . It is valid only when the SNMP version is set to V3. |
| <b>Authentication Password</b>                         | The authentication password required to enter when the item Grade is set to Authenticated but not encrypted or Authenticated and encrypted.   |
| <b>Encryption Password</b>                             | The encryption password required to enter when the item Grade is set to Authenticated and encrypted.  |

### 3.9.13 Access Control


| Access Control List  |       |   |   |
|--|-------|---|---|
| Check  | Index | Command                                 | Modify  |
| <input type="checkbox"/>   | 0     | iptables -I INPUT -s 123.45.6.7 -j DROP |  |
| <div> <input type="button" value="Check All"/> <input type="button" value="Uncheck All"/> <input type="button" value="Inverse"/> <input type="button" value="Delete"/> <input type="button" value="Clear All"/> <input type="button" value="Apply"/> <input type="button" value="Add New"/> </div> |       |   |   |
| 1 Items Total 20 Items/Page 1/1 First Previous Next Last Go to Page 1 1 Pages Total<br>Note: Please don't enable "SIP"=>"Calls from SIP Trunk Address only".   |       |   |   |

Figure 3-106 Access Control List Interface

See Figure 3-106 for the Access Control List interface. Once you add a piece of command to ACL,

the network flow will be restricted: only the particular devices are allowed to visit the gateway and only the data packages on the designated ports can be forwarded. Click **Add New** to add a new piece of command. See Figure 3-107.

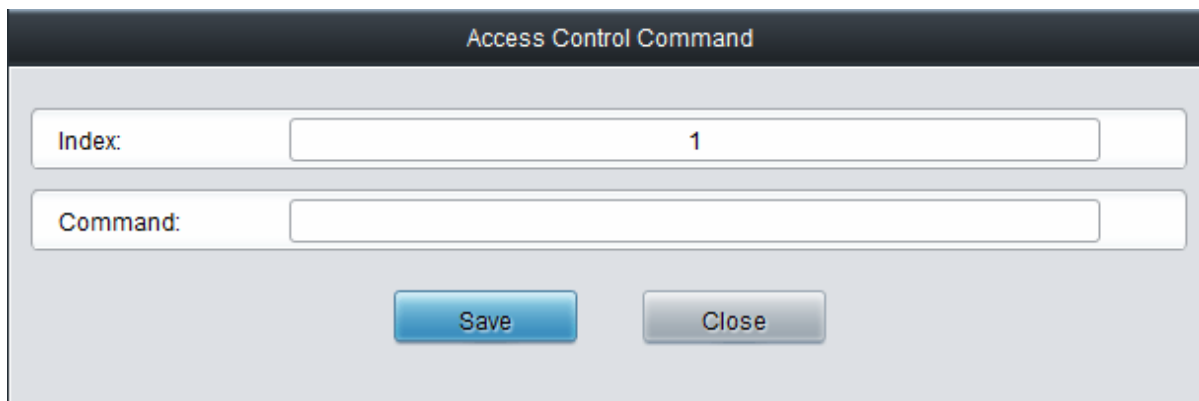


Figure 3-107 Add Access Control Command Interface

Input a piece of command into the Command item and click **Save** to save the settings to the gateway. Click **Close** to cancel your settings. After that, click **Apply** to make the new command valid.

Click **Modify** in Figure 3-106 to modify a command. See Figure 3-108 for the Access Control Command Modification interface. The configuration items on this interface are the same as those on the **Add Access Control Command** interface. Note that the item **Index** cannot be modified.

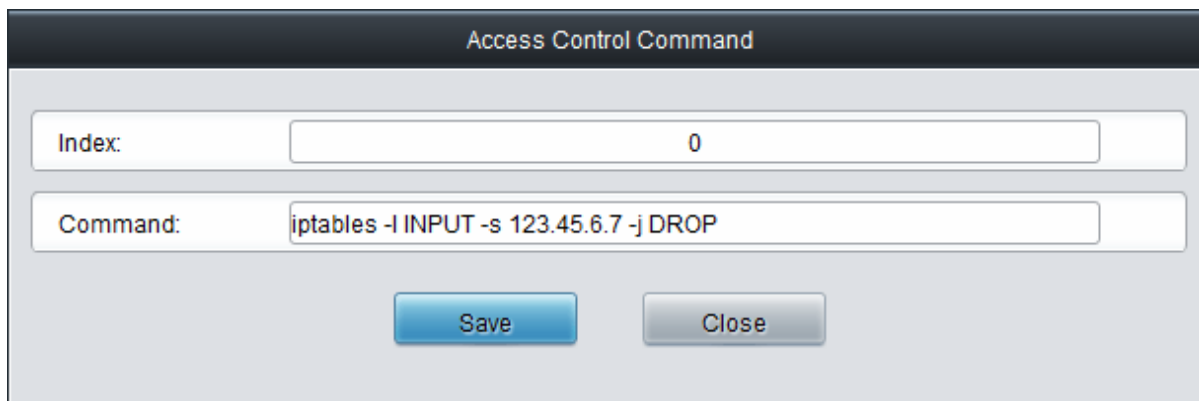


Figure 3-108 Access Control Command Modification Interface

To delete an Access Control Command, check the checkbox before the corresponding index in Figure 3-106 and click the **Delete** button, and then click the **Apply** button to make the deleted command invalid. **Check All** means to select all available items on the current page; **Uncheck All** means to cancel all selections on the current page; **Inverse** means to uncheck the selected items and check the unselected. To clear all access control commands at a time, click the **Clear All** button in Figure 3-106.

**Note:**

1. Currently, only the command iptables is supported by the gateway.
2. After you add, modify or delete a command manually, don't forget to click the **Apply** button to make your settings valid. However, in case the gateway restarts or the configuration is leading-in, the command will get valid automatically without the need for you to click the **Apply** button.



### 3.9.14 PING Test

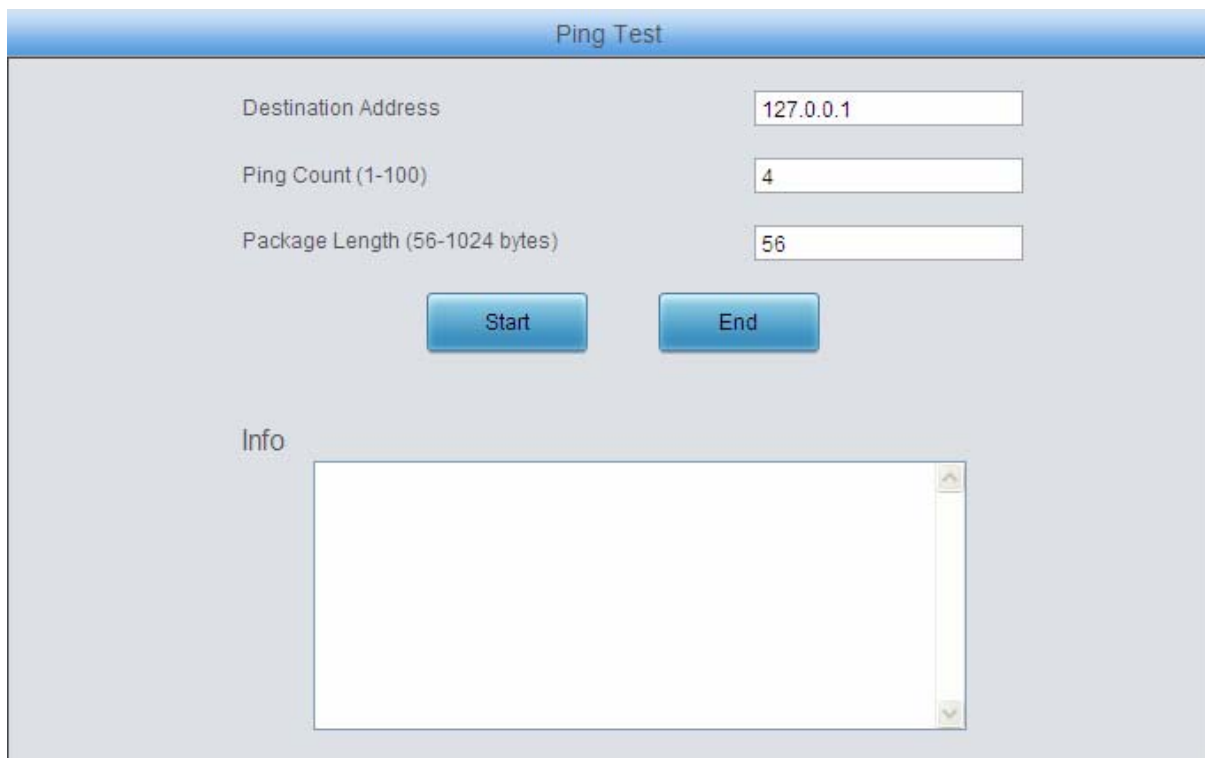


Figure 3-109 Ping Test Interface

See Figure 3-109 for the Ping test interface. A Ping test can be initiated from the gateway on a designated IP address to check the connection status between them. The table below explains the configuration items shown in the above figure.

| Item                       | Description  |
|----------------------------|--|
| <b>Destination Address</b> | Destination IP address or domain name on which the Ping test is executed.  |
| <b>Ping Count</b>          | The number of times that the Ping test should be executed. Range of value: 1~100.  |
| <b>Package Length</b>      | Length of the data package used in the Ping test. Range of value: 56~1024 bytes.   |
| <b>Info</b>                | The information returned during the Ping test, helping you to learn the network connection status between the gateway and the destination address. |

After configuration, click **Start** to execute the Ping test; click **End** to terminate it immediately.

### 3.9.15 TRACERT Test

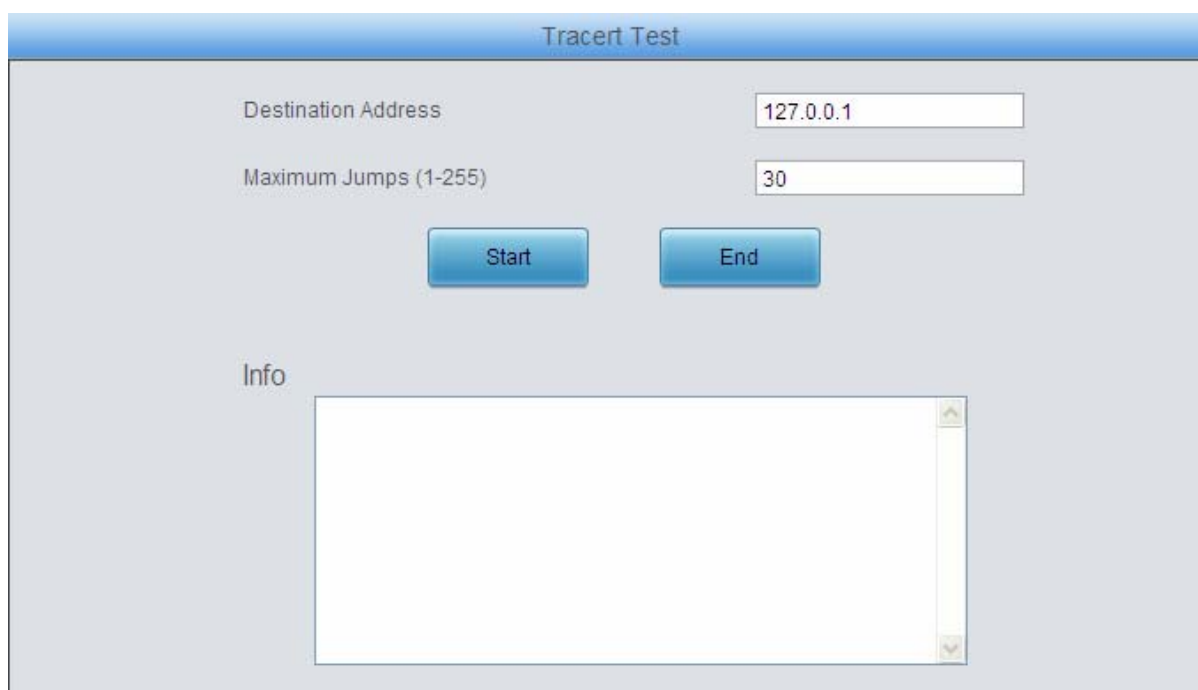


Figure 3-110 Tracert Test Interface

See Figure 3-110 for the Tracert test interface. A Tracert test can be initiated from the gateway on a designated IP address to check the routing status between them. The table below explains the configuration items shown in the above figure.

| Item                       | Description  |
|----------------------------|--|
| <b>Source IP Address</b>   | Source IP address where the Tracert test is initiated.   |
| <b>Destination Address</b> | Destination IP address on which the Tracert test is executed.  |
| <b>Maximum Jumps</b>       | Maximum number of jumps between the gateway and the destination address which are returned by the Tracert test. Range of value: 1~255.                           |
| <b>Info</b>                | The information returned during the Tracert test, helping you to learn the detailed information about the jumps between the gateway and the destination address. |

After configuration, click **Start** to execute the Tracert test; click **End** to terminate it immediately.

### 3.9.16 Change Password




The 'Change Password' interface features a blue header bar with the title 'Change Password'. Below the header, there are five input fields arranged vertically. The first field is labeled 'Current Username' and contains the text 'admin'. The second field is labeled 'Current Password'. The third field is labeled 'New Username'. The fourth field is labeled 'New Password'. The fifth field is labeled 'Confirm New password'. At the bottom of the interface, there are two blue buttons: 'Save' and 'Reset'.

Figure 3-111 Password Changing Interface

See Figure 3-111 for the Password Changing interface where you can change username and password of the gateway. Enter the current password, the new username and password, and then confirm the new password. After configuration, click **Save** to apply the new username and password or click **Reset** to restore the configurations. After changing the username and password, you are required to log in again.

### 3.9.17 Restart

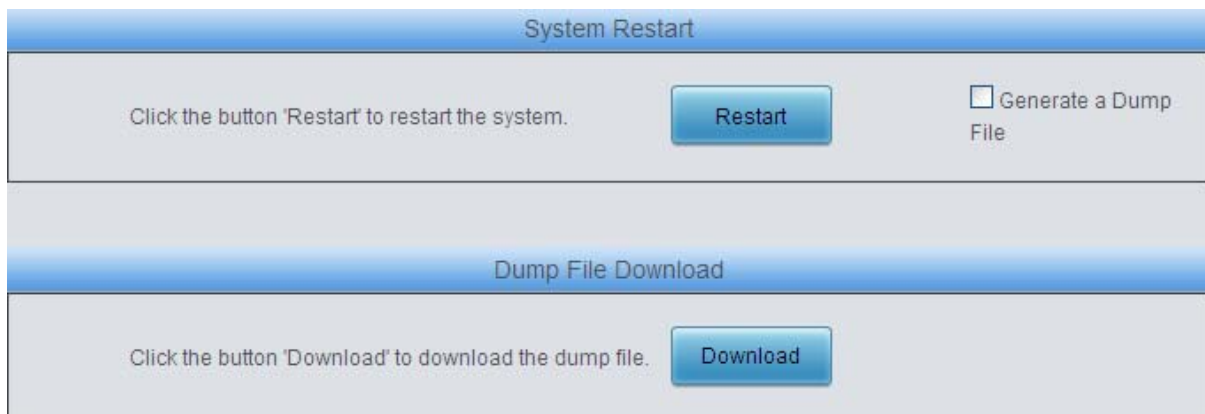

The 'System Restart' interface has a blue header bar with the title 'System Restart'. Below the header, there is a text instruction: 'Click the button 'Restart' to restart the system.' To the right of this text is a blue 'Restart' button. Further to the right is a checkbox labeled 'Generate a Dump File'. Below this section, there is another blue header bar with the title 'Dump File Download'. Below this header, there is another text instruction: 'Click the button 'Download' to download the dump file.' To the right of this text is a blue 'Download' button.

Figure 3-112 System Restart Interface

See Figure 3-112 for the Restart interface. Click **Restart** to restart the whole gateway system. A dump file will be generated each time you restart the system. Click **Download** and you can download it to help troubleshoot issues.

# Appendix A Technical Specifications

## Dimensions

SMG1004C, SMG1008C: 210×30×150 mm<sup>3</sup>

SMG1016C: 440×44×200 mm<sup>3</sup>

SMG1032C: 440×44×260 mm<sup>3</sup>

## Weight

SMG1004C, SMG1008C: 0.83 kg

SMG1016C-16S, SMG1016C-16O: 3.13 kg

SMG1032C-32S: 3.18 kg

SMG1032C-32O: 3.01 kg

## Environment

Operating temperature: 0℃—45℃

Storage temperature: -20℃—85℃

Humidity: 8%—90% non-condensing

Storage humidity: 8%—90% non-condensing

## LAN

Amount: 2 (10/100 BASE-TX (RJ-45))

Self-adaptive bandwidth supported

Auto MDI/MDIX supported

## FXS Port

Amount: 4/8/16/32

Type: RJ11

Maximum transmission distance: 5000m

## Impedance

Telephone line impedance: Compliant with the national standard impedance for three-component network

## Console Port

Amount: 1 (RS-232)

Baud rate: 115200bps

Connector: RJ45 to DB-9 Connector

Data bits: 8 bits

Stop bit: 1 bit

Parity unsupported

Flow control unsupported

Note: Follow the above settings to configure the serial port; or it may work abnormally.

## Power Requirements

Input power:

SMG1004C, SMG1008C: 12V the direct current bigger than 3A

SMG1016C, SMG1032C: 100~240V AC

## Signaling & Protocol

SIP signaling

Supported protocol: SIP V1.0/2.0, RFC3261

## Audio Encoding & Decoding

G.711A 64 kbps

G.711U 64 kbps

G.729A/B 8 kbps

G.723 5.3/6.3 kbps

G.722 64 kbps

AMR 4.75 kbps

iLBC 13.3/15.2 kbps

## Sampling Rate

8kHz

## Appendix B Troubleshooting

### Q1. What to do if I forget the IP address of the SMG-C gateway?

There are two ways to get the IP address:

- 1) Long press the Reset button on the gateway to restore to factory settings. The default IP address is 192.168.1.101
- 2) Dial the corresponding function key through an FXS port to query the IP address. See [3.5.8 Function Key](#) for more details.

### Q2. The SMG-C gateway only supports routing on two directions, i.e. Tel→IP and IP→Tel. What to do if I want to make a Tel→Tel call?

By default, you can make Tel→Tel calls without any routing configuration.

If you need to make Tel→Tel calls in a specific way, try via the routing of Tel→IP→IP→Tel. See below for detailed introductions.

Provided you are going to initiate a call from Port Group 1 to Port Group 2; the IP address and port number of your gateway are 192.168.1.101 and 5060 respectively.

- a) Add a new routing rule on the Tel→IP routing rule configuration interface. Select a port group (e.g. **Port Group 1**) as 'Source Port Group' to initiate the call and fill in 'Destination IP' and 'Destination Port' with the gateway's IP address (e.g. **192.168.1.101**) and port number (e.g. **5060**). Then the call initiated from the station corresponding to Port Group 1 will be routed to the gateway.
- b) Add a new routing rule on the IP→Tel routing rule configuration interface. Fill in 'Source IP' with the gateway's IP address (e.g. **192.168.1.101**) and select a port group (e.g. **Port Group 2**) as 'Destination Port Group' to be called. Then if the IP end of the gateway calls itself, the station corresponding to Port Group 2 will ring.
- c) Finishing the above configurations, you can perform a Tel→Tel call from Port Group 1 to Port Group 2 simply by the way you make a Tel→IP call.

### Q3. Does call forwarding involve routing and number manipulation?

Case 1: If the forwarding number is the number of the gateway port. There is no need to use routing and number manipulation rules. Because the gateway will find the corresponding number according to the forwarding number and make a call.

Case 2: If the forwarding number is not the number of the gateway port. It is required to use routing and number manipulation rules. A call forward procedure can be regarded as a Tel→IP call. It uses the routing rules and number manipulation rules in the same way as the Tel→IP call. A complete call forward is performed as follows:

- a) An incoming IP call to the gateway rings the port which matches the IP→Tel routing and number manipulation rules and obtains a new CallerID.
- b) Then the gateway uses the newly obtained CallerID and the call forward number, via the Tel→IP routing and number manipulation rules, to make another call from the port to a remote IP address.

### Q4. In what cases can I conclude that the SMG-C gateway is abnormal and turn to Synway's technicians for help?

- a) During runtime, the run indicator does not flash or the alarm indicator lights up or flashes,

and such error still exists even after you restart the device or restore it to factory settings.

- b) Voice problems occur during call conversation, such as that one party or both parties cannot hear the voice or the voice quality is unacceptable.
- c) The port of the gateway is well connected, but the channel indicator never lights up after the gateway startup or the color it lights up does not comply with the actual state or port type.

Other problems such as inaccessible calls, failed registrations, incorrect numbers and abnormal dialing operations on the FXS port are probably caused by configuration errors. We suggest you refer to [Chapter 3 WEB Configuration](#) for further examination. If you still cannot figure out or solve your problems, please feel free to contact our technicians.

#### Q5. What to do if I cannot enter the WEB interface of the SMG-C gateway after login?

This problem may happen on some browsers. To settle it, follow the instructions here to configure your browser. Enter 'Tools > Internet Options > Security Tab', and add the current IP address of the gateway into 'Trusted Sites'. If you changes the IP address of the gateway, add your new IP address into the above settings too.

#### Q6. How many ports can be rung by turns according to the *Ringling by Turns* rule?

According to the 180s ringing timeout limit in RFC3261 protocol, the time used for ringing all ports by turns cannot exceed 180s. Therefore, based on the minimum timeout 15s for each port in the ringing queue, the maximum number of ports for ringing by turns is 12.

For example, if you set **Timeout for Ringling by Turns** to 20s, the maximum number of ports for ringing by turns should be  $180s/20s=9$ ; if you set **Timeout for Ringling by Turns** to 30s, the maximum number of ports for ringing by turns should be  $180s/30s=6$ .

#### Q7. Is there any cell-phone APP can make calls to the SMG-C gateway?

Yes. Linphone is a soft SIP phone that is supported by multiple platforms, such as Linux, Windows, iOS, Android, etc. It must be registered to the SIP registrar server before dialing to other SIP devices or PSTN telephones,

#### Q8. Does the SMG-C gateway support fax?

Yes. Currently the SMG-C gateway supports two fax modes: T.38 and Pass-Through.

#### Q9. Which RTP codecs are supported by the SMG-C gateway?

At present, the supported RTP codecs are: G.711A, G.711u, G.729, G.723, G.722, AMR and iLBC.

#### Q10. How to configure the features **Communication without Power** and **Communication without Network** for the SMG-C analog gateway?

The feature **Communication without Power** is implemented in hardware. Once the power to the device is cut off, the station which is linked with the FXS port and the trunk which is linked with the FXO port will connect to each other directly and keep the good communications between phones and networks. The FXS and FXO ports are one-to-one correspondence (Take SMG1016C-8S8O for example, the phone linked with Channel 1 will be connected to the PSTN line which links with Channel 9.).

The feature **Communication without Network** is implemented via the WEB management over the analog gateway. It will automatically route a call to the FXO port in case of network failure or call timeout.

Refer to [Q2](#) in this chapter for detailed information.



## Appendix C Technical/sales Support

Thank you for choosing Synway. Please contact us should you have any inquiry regarding our products. We shall do our best to help you.

### **Headquarters**

Synway Information Engineering Co., Ltd

<http://www.synway.net/>

9F, Synway D&R Center, No.3756, Nanhuan Road, Binjiang District,  
Hangzhou, P.R.China, 310053

Tel: +86-571-88860561

Fax: +86-571-88850923

Wechat QR Code: Scan the QR code below to add us on Wechat.



### **Technical Support**

Tel: +86-571-88864579

Mobile: +86-18905817070

Email: [techsupport@sanhuid.com](mailto:techsupport@sanhuid.com)

Email: [techsupport@synway.net](mailto:techsupport@synway.net)

MSN: [synway.support@hotmail.com](mailto:synway.support@hotmail.com)

### **Sales Department**

Tel: +86-571-88860561

Tel: +86-571-88864579

Fax: +86-571-88850923

Email: [sales@synway.net](mailto:sales@synway.net)